Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SanDisk SDIX90N-064G

SanDisk 64GB iXpand USB Flash Drive Flip SDIX90N-064G User Manual

Model: SDIX90N-064G

Introduction

The SanDisk iXpand USB Flash Drive Flip is designed to provide additional storage and easy file transfer capabilities for your iPhone, iPad, and computers. This device features both a Lightning connector for Apple mobile devices and a USB 3.1 Type-A connector for computers, allowing for versatile data management. It enables users to easily move files, free up space on their mobile devices, and automatically back up photos and videos.



Image: The SanDisk iXpand USB Flash Drive Flip in its compact, retracted state, showing the SanDisk logo.

Setup

To begin using your SanDisk iXpand USB Flash Drive Flip, follow these steps:

1. **Download the iXpand Drive App:** For use with an iPhone or iPad, you must download the official SanDisk iXpand Drive app from the Apple App Store. Search for "iXpand Drive" and install the application.
2. **Connect to iPhone/iPad:**
    - Locate the Lightning connector on the iXpand Flash Drive. This is typically revealed by flipping the protective cover.
    - Plug the Lightning connector directly into your iPhone or iPad's Lightning port.

- Your device should prompt you to open the iXpand Drive app, or you can open it manually.



Image: The SanDisk iXpand USB Flash Drive Flip with its Lightning connector extended, ready for connection to an iPhone or iPad.

3. **Connect to Computer:**
    - Locate the USB 3.1 Type-A connector on the iXpand Flash Drive. This is the standard USB connector.
    - Plug the USB connector into an available USB port on your desktop, laptop, or Mac computer.
    - The drive should appear as a removable storage device in your computer's file explorer (Windows) or Finder (macOS).



Image: The SanDisk iXpand USB Flash Drive Flip with its USB-A connector extended, ready for connection to a computer.

Operating Instructions

Transferring Files from iPhone/iPad to iXpand Drive

1. Ensure the iXpand Flash Drive is connected to your iPhone or iPad and the iXpand Drive app is open.
2. Within the app, navigate to the option for "Copy Files from Phone" or "Backup Photos/Videos".
3. Select the photos, videos, or other files you wish to transfer.

4. Initiate the transfer process. The app will copy the selected files to the iXpand Drive.
5. Once the transfer is complete, you can choose to delete the original files from your iPhone/iPad to free up space.

Transferring Files from iXpand Drive to Computer

1. Disconnect the iXpand Flash Drive from your mobile device.
2. Flip the connector to expose the USB 3.1 Type-A side.
3. Plug the drive into an available USB port on your computer.
4. Open your computer's file explorer (Windows) or Finder (macOS). The iXpand Drive will appear as a removable disk.
5. Navigate to the files on the iXpand Drive. You can then copy, cut, or move these files to your desired location on your computer.

Automatic Photo Backup
SanDisk® iXpand® Drive App

Made for
iPhone | iPad


SANDISK®

iXpand® Flash Drive Flip

For iPhone, iPad and computers

64 GB*

- Easily move files and free up space
- Automatically back up your photos and videos[1]

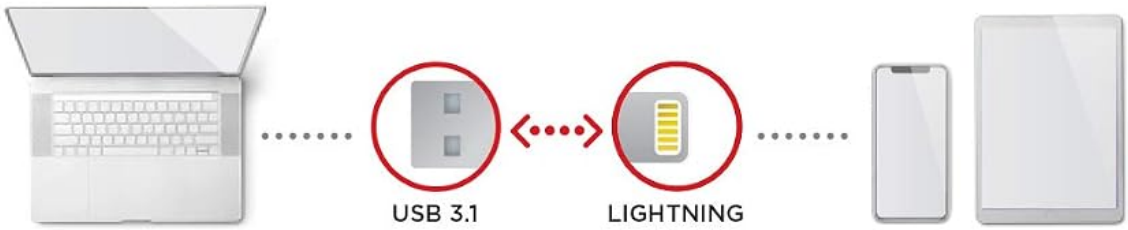



SanDisk®

Image: A visual representation of the data transfer process, illustrating how files move between an iPhone, the iXpand drive (with both USB and Lightning connectors), and a computer.

Maintenance

- **Physical Care:** Handle the flash drive with care. Avoid dropping it or exposing it to excessive force. Keep the connectors clean and free from dust or debris.
- **Environmental Conditions:** Store the drive in a dry environment, away from extreme temperatures and direct sunlight.
- **Safe Removal:** Always safely eject the drive from your computer before physically removing it. For mobile devices, ensure all transfers are complete and the app is closed before disconnecting.
- **Software Updates:** Regularly check for updates to the iXpand Drive app to ensure optimal performance and compatibility.

Troubleshooting

- **Drive Not Recognized by iPhone/iPad:**
  - Ensure the Lightning connector is fully inserted into the device's port.
  - Verify that the iXpand Drive app is installed and up to date.
  - Restart your iPhone/iPad and try again.
  - Check for any physical obstructions in the Lightning port or on the connector.
- **Drive Not Recognized by Computer:**
  - Ensure the USB-A connector is fully inserted into the computer's USB port.
  - Try a different USB port on your computer.
  - Restart your computer.
  - Check if the drive appears in Disk Management (Windows) or Disk Utility (macOS).
- **Slow Transfer Speeds:**
  - Ensure you are using a USB 3.0 or higher port on your computer for optimal speeds.
  - Close other applications running on your computer or mobile device during transfer.
  - Large numbers of small files can transfer slower than a few large files.
- **App Issues (Crashing, Freezing):**
  - Update the iXpand Drive app to the latest version.
  - Clear the app's cache (if applicable) or reinstall the app.
  - Ensure your iPhone/iPad operating system is up to date.

Specifications

Brand	SanDisk
Model Name	iXpand
Item Model Number	SDIX90N-064G
Memory Storage Capacity	64 GB

Connectivity Technology	USB
Hardware Interface	USB 3.1 Type A, Lightning
Read Speed	45 Megabytes Per Second
Write Speed	45 Megabytes Per Second
Color	Black
Item Weight	0.176 ounces
Product Dimensions (LxWxH)	2.56 x 0.34 x 0.51 inches
Flash Memory Type	CompactFlash (Note: This might be a generic category, the device is a flash drive)
Special Feature	Lightweight
UPC	619659181413

Warranty and Support

For detailed warranty information, technical support, and product registration, please visit the official SanDisk website. Keep your proof of purchase for any warranty claims.
You can typically find support resources, FAQs, and contact information on the SanDisk support page:SanDisk Support

© 2023 SanDisk. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08P1GY5DJ

More documents and user manuals: **https://manuals.plus/**