Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Blissun B08PD81HW4

Blissun 7.2' Beach Umbrella with Sand Anchor - User Manual

Model: B08PD81HW4

1. Introduction

Thank you for choosing the Blissun 7.2' Beach Umbrella. This manual provides essential information for the safe and effective use, setup, and maintenance of your new beach umbrella. Please read this manual thoroughly before use and retain it for future reference.

2. Safety Information

- Always ensure the sand anchor is securely twisted deep into the sand to prevent the umbrella from dislodging in windy conditions.
- Do not use the umbrella in severe weather conditions, including strong winds, heavy rain, or thunderstorms.
- Keep children and pets away from the umbrella during setup and takedown to avoid injury.
- Be mindful of the tilt mechanism to avoid pinching fingers.
- While the Oxford fabric offers UPF 50+ sun protection, prolonged exposure to direct sunlight should still be avoided, and sunscreen is recommended.
- Regularly inspect the umbrella for any signs of wear or damage. Do not use if damaged.

3. Package Contents

Your Blissun 7.2' Beach Umbrella package includes the following items:

- Blissun 7.2' Beach Umbrella Canopy with Pole (2 sections)
- Integrated Sand Anchor with Flip-Down Handles
- Carry Bag

4. Setup Instructions

1. **Unpack the Umbrella:** Remove the umbrella and its pole sections from the carry bag.
2. **Assemble the Pole:** Connect the two sections of the umbrella pole. Ensure the connection is secure.
3. **Anchor the Umbrella:**
    - Locate the integrated sand anchor at the bottom of the pole.
    - Flip down the handles on the sand anchor for better grip.
    - Place the pointed end of the anchor into the sand.

- Twist the pole clockwise, using the flip-down handles, to screw the anchor deep into the sand until it is firmly secured. The deeper the anchor, the more stable the umbrella will be.
- Once anchored, fold the handles back up.



Image: Close-up of the heavy-duty sand anchor with flip-down handles for easy twisting into the sand.

4. **Open the Umbrella Canopy:**
    - Gently push the canopy upwards along the pole until it clicks into place.
    - Ensure the canopy is fully extended and locked.

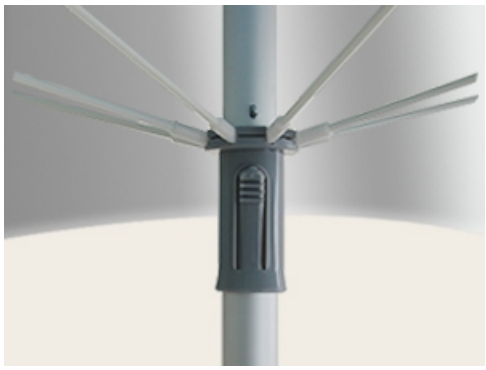


Image: Close-up of the pinch-free push button mechanism used to easily open and lower the umbrella canopy.

Setup Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of setting up the Blissun 7.2' Portable Beach Umbrella, showing how to secure the sand anchor and open the canopy.

5. Operating Instructions

Tilting the Umbrella

Your Blissun beach umbrella features a secure, locking push-button tilt mechanism, allowing you to easily adjust the canopy's angle to block the moving sun.

1. Locate the tilt button on the upper part of the pole.
2. Press the button firmly.
3. While holding the button, tilt the canopy to your desired angle.
4. Release the button to lock the canopy in place. Ensure it is securely locked before leaving it unattended.

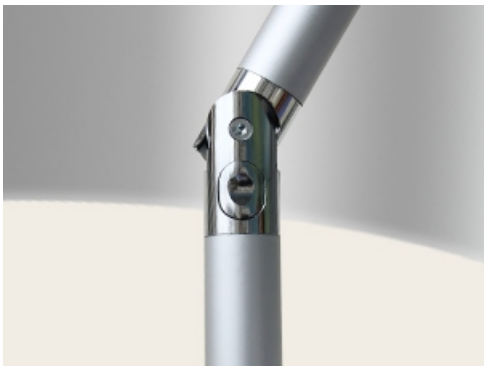


Image: Close-up of the secure locking push button tilt feature on the umbrella pole, allowing for angle adjustment.

Air Vent Feature

The umbrella is designed with an air vent located at the top of the canopy. This feature increases the umbrella's wind tolerance and stability by allowing air to pass through, reducing the risk of the umbrella being lifted or overturned in windy conditions.



Image: Diagram illustrating the air-vent design at the top of the umbrella canopy, which facilitates air flow for increased stability.

Closing the Umbrella

To close the umbrella, press the pinch-free push button located on the main pole and gently pull the canopy downwards until it is fully collapsed. Disassemble the pole sections and store them in the carry bag.

6. Maintenance

- **Cleaning:** The Oxford fabric canopy should be hand washed only. Do not machine wash or use harsh detergents. Allow to air dry completely before storing.
- **Storage:** Store the umbrella in its provided carry bag in a cool, dry place when not in use. Ensure it is completely dry to prevent mold or mildew.
- **Inspection:** Periodically check all components, including the pole, ribs, and anchor, for any signs of wear, rust, or damage.

7. Troubleshooting

Umbrella is unstable in wind:

- Ensure the sand anchor is screwed as deep as possible into the sand.
- Pack additional sand around the base of the pole for extra stability.
- Verify the air vent at the top is not obstructed.
- If winds are too strong, it is recommended to take down the umbrella.

Tilt mechanism is not locking:

- Ensure the tilt button is fully released after adjusting the angle.
- Check for any sand or debris obstructing the mechanism. Clean if necessary.

8. Specifications

Feature	Detail
Brand	Blissun
Model Name	Portable Beach Umbrella
ASIN	B08PD81HW4
Size	7.2 feet
Canopy Diameter	86.4 Inches
Canopy Material	Oxford fabric
UV Protection	UPF 50+
Shaft Material	Aluminum, Steel
Frame Material	Aluminum
Ribs	8 Fiberglass Support Ribs
Special Features	UV Blocking, Air Vent, Tilt Pole, Sand Anchor
Included Components	Cover, Sand Anchor
Care Instructions	Hand Wash Only

9. Warranty and Support

For warranty information or customer support, please refer to the product packaging or contact Blissun customer service directly. Keep your purchase receipt for warranty claims.

© 2023 Blissun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08PD81HW4

More documents and user manuals: **https://manuals.plus/**