MicroNovelty 0768253663211

MicroNovelty Ultra-Compact EVO Shaver User Manual

Model: 0768253663211

Brand: MicroNovelty

Introduction

This manual provides essential information for the safe and effective use of your MicroNovelty Ultra-Compact EVO Shaver. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Ultra-Compact EVO Shaver held between two fingers, demonstrating its small, pocket-size design.

Important Safety Information

- Ensure the shaver is powered off before cleaning.
- Do not use under running water.
- To avoid skin irritation, use a clean, dry shaving surface.
- Do not charge near water or in damp conditions.
- This device contains a Lithium Polymer battery. Do not expose to extreme temperatures or direct sunlight.
- The EVO Shaver is not suitable for shaving long beards such as sideburns, nor is it intended for body hair removal.

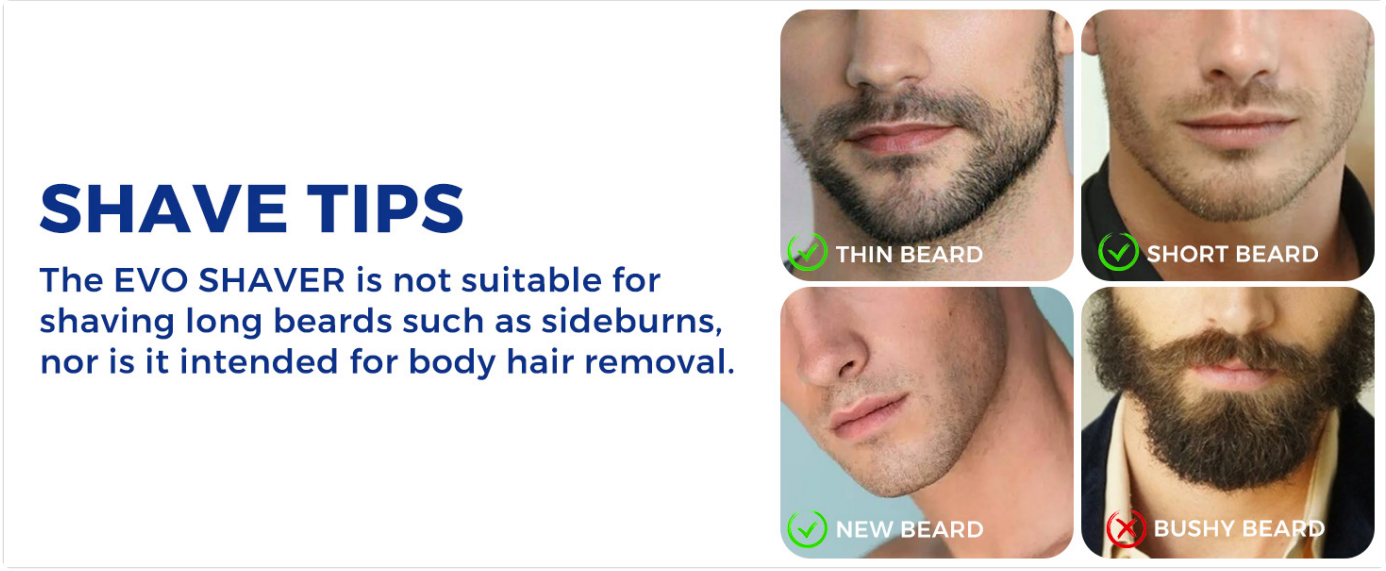


Image: A visual guide illustrating suitable beard types (thin, short, new) and unsuitable beard types (bushy) for the EVO Shaver, emphasizing it's not for long beards or body hair.

Package Contents

Verify that all items listed below are present in your package:

- 1 x Ultra-Compact EVO Shaver
- 1 x USB-C Charging Cable
- 1 x Cleaning Brush
- 1 x Travel Pouch
- 1 x User Manual (this document)



Image: A flat lay showing the contents of the EVO Shaver package, including the shaver, charging cable, cleaning brush, and travel pouch, next to its retail box.

Product Features

- **Superior Shaving System:** Equipped with an ultra-thin 0.07 mm mesh and a high-speed 6000 RPM motor for a close, smooth, and safe shave.
- **Mini Compact Design:** Small and portable, designed for convenient travel and on-the-go use.
- **Long-Lasting Battery:** Provides up to 35 minutes of continuous use on a single charge, sufficient for approximately 20 shaving sessions.
- **Universal Charging:** Features a Type-C USB port for charging via wall charger, power bank, or laptop.
- **Travel Lock Feature:** Prevents accidental activation during transport.
- **Easy to Clean:** Removable blade mesh for rinsing under tap water or cleaning with the included brush.



Image: Close-up of the shaver's internal mechanism, highlighting the high-speed 6000 RPM motor for efficient shaving.



Image: Detailed view of the shaver's ultra-thin 0.07mm mesh, designed for a close shave.



Image: A visual comparison showing the compact size of the EVO Shaver next to a pair of wireless earbuds, indicating its lightweight and portable nature (approx. 60g).



Image: A man using the EVO Shaver to shave his neck, illustrating the device's ability to provide an ultra-close and comfortable shave.

Setup and Charging

Initial Charge

Before first use, fully charge the EVO Shaver.

1. Connect the provided USB-C charging cable to the shaver's charging port.
2. Plug the other end of the cable into a compatible USB power source (e.g., wall adapter, power bank, laptop).
3. The charging indicator light will illuminate. A full charge typically takes approximately 1.5 hours.
4. Disconnect the shaver once fully charged. Avoid overcharging to preserve battery life.



Image: The EVO Shaver connected to a USB-C charging cable, illustrating the charging process and highlighting its 35-minute continuous run time and support for over 20 shaving sessions per charge.

Operating Instructions

Power On/Off

To turn the shaver on, press the power button once. To turn it off, press the power button again.

Shaving

For optimal results, use the shaver on clean, dry skin. Gently press the shaver head against your skin and move it in small, circular motions or straight strokes against the direction of hair growth.



Image: A man using the compact EVO Shaver to shave his face, demonstrating its ease of use for a quick and clean shave.



Image: A collage showing various scenarios of using the EVO Shaver: for daily grooming, on the road, inside a car, and packed for a trip, emphasizing its versatility and portability.

Travel Lock

The travel lock feature prevents accidental activation of the shaver during transport.

- **Activate Travel Lock:** With the shaver off, press and hold the power button for 3 seconds until the indicator light flashes. The shaver is now locked.
- **Deactivate Travel Lock:** Press and hold the power button for 3 seconds again until the indicator light stops flashing. The shaver is now unlocked and ready for use.



Image: A hand demonstrating how to activate the travel lock feature on the EVO Shaver by pressing and holding the power button for 3 seconds.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and hygiene.

1. Ensure the shaver is turned off and disconnected from any charging source.
2. Twist the blade mesh counter-clockwise to remove it from the shaver body.
3. Gently tap out any accumulated hair stubble.
4. Rinse the blade mesh under running tap water. Do not rinse the main body of the shaver.
5. Use the provided cleaning brush to remove any remaining stubble from the shaver's internal components and the blade.
6. Allow all parts to air dry completely before reassembling.
7. Align the blade mesh with the shaver body and twist clockwise to secure it.



Image: A split image showing the cleaning process: one side depicts rinsing the detached blade mesh under running water, and the other shows using the cleaning brush to clear stubble from the shaver's interior.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Shaver does not turn on.	Travel lock is activated.	Deactivate the travel lock by holding the power button for 3 seconds.
Poor shaving performance.	Blade mesh is clogged with hair.	Clean the blade mesh and internal components as described in the Maintenance section.
Poor shaving performance.	Shaver is used on long or bushy beards.	The EVO Shaver is designed for thin, short, or new beards. It is not intended for long or bushy beards.

Specifications

Model Name	EVO Shaver
Item Model Number	0768253663211
Brand	MicroNovelty
Power Source	Battery Powered
Battery Type	1 Lithium Polymer battery (included)
Continuous Use Time	Up to 35 minutes
Motor Speed	6000 RPM
Mesh Thickness	0.07 mm
Recommended Uses	Beard (thin, short, new)
Special Feature	Portable
Package Dimensions	4.17 x 2.95 x 2.13 inches
Item Weight	2.47 ounces

Warranty and Support

Specific warranty details and customer support contact information are not provided within this manual. Please refer to the product packaging or the manufacturer's official website for warranty claims and support inquiries.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question