arsvita ARCD-04

Arsvita ARCD-04 Laser Lens Cleaner Disc Instruction Manual

Model: ARCD-04 | Brand: Arsvita

Introduction

The Arsvita ARCD-04 Laser Lens Cleaner Disc is designed to safely and effectively clean the laser lens of CD, VCD, and DVD players. Over time, dust and debris can accumulate on the laser lens, leading to playback issues such as slow loading, skipping, or freezing of discs. This cleaning disc utilizes a specialized two-brush system to remove these contaminants, thereby restoring optimal performance and extending the lifespan of your audio/video equipment.

Package Contents

Please verify that all items are present in your package:

- 1 x Arsvita Laser Lens Cleaner Disc (ARCD-04)
- 1 x Microfiber Cleaning Cloth
- 2 x Disc Cleaning Fluid bottles
- 1 x Instruction Manual (this document)



Image: Contents of the Arsvita Laser Lens Cleaner Disc Cleaning Set. Includes the cleaning disc, cleaning fluid, and microfiber cloth.

How It Works

The Arsvita ARCD-04 cleaning disc features two soft microfiber brushes strategically placed on its surface. When inserted into a compatible player, the disc spins, allowing these brushes to gently sweep across the laser lens. This action effectively dislodges and removes dust, dirt, and other microscopic particles that can interfere with the laser's ability to read discs accurately.



Image: Illustration of the cleaning disc's two brushes designed to remove dust and prevent static.

Operating Instructions

1. **Prepare the Cleaning Disc:**
    - Locate the small hole on the cleaning fluid bottle. Use a pin or a similar small tool to carefully open the hole.
    - Apply 3-4 drops of the provided cleaning fluid onto the brushes of the cleaning disc. Ensure the fluid is applied directly to the brushes, not the disc surface.

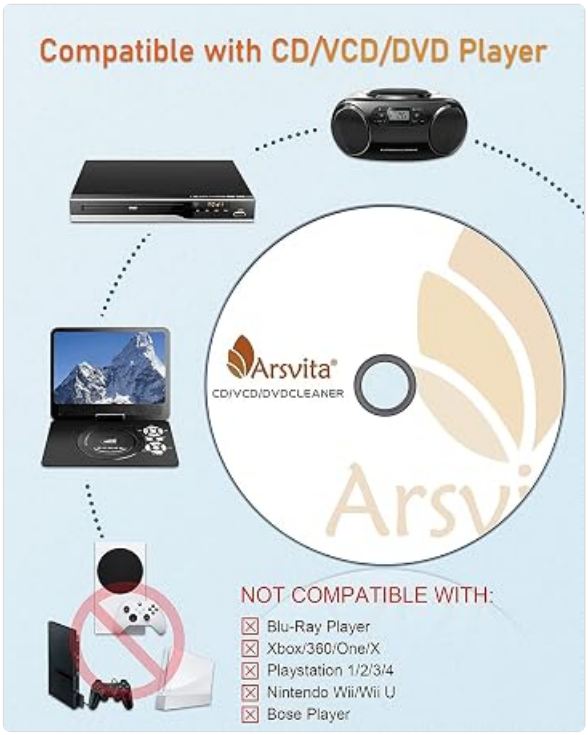


Image: Demonstrates applying 3-4 drops of cleaning fluid to the brushes on the cleaning disc.

2. **Insert the Disc:** Open the disc tray of your CD, VCD, or DVD player. Carefully place the Arsvita cleaning disc into the tray, ensuring it is seated correctly. Close the disc tray.



Image: A hand inserting the Arsvita cleaning disc into a DVD player.

3. **Start Cleaning:** Press the "Play" button on your player. The cleaning disc contains a silent track that will guide the brushes over the laser lens. Allow the disc to play through its entire cycle (approximately 20-30 minutes).
4. **Remove the Disc:** Once the cleaning cycle is complete, open the disc tray and carefully remove the cleaning disc. Store it in its protective case for future use.
5. **Test Playback:** Insert a regular CD, VCD, or DVD into your player and test its playback. You should observe improved audio and video quality, with reduced skipping or freezing.

Compatibility

This cleaning disc is compatible with standard CD, VCD, and DVD players, including home, portable, and car units.

- **Compatible Devices:** CD players, VCD players, DVD players.
- **Not Compatible With:** PS1/2/3/4, Xbox/Xbox 360/Xbox One/Xbox X, Wii/Wii U, Blu-ray players, or Bose players.



Image: Visual representation of compatible devices (VCD, DVD, CD players) and incompatible devices (gaming consoles, Blu-ray players).

Your browser does not support the video tag.

Video: Official Arsvita video demonstrating the usage of the laser lens cleaner disc in a car CD player. It shows inserting the disc and allowing it to play to clean the lens.

Maintenance

- After each use, gently wipe the cleaning disc with the provided microfiber cloth to remove any accumulated dust or residue from the brushes.
- Store the cleaning disc in its original storage box to protect it from dust and damage.
- The cleaning fluid is designed for multiple uses. Recap the bottle tightly after each application to prevent evaporation.



Image: The Arsvita cleaning disc, its storage box, and a microfiber cloth, highlighting proper storage and care.

Troubleshooting

If you continue to experience issues after using the cleaning disc, consider the following:

- **Repeated Cleaning:** For heavily soiled lenses, you may need to repeat the cleaning process 2-3 times.
- **Disc Condition:** Ensure the discs you are trying to play are clean and free from scratches or damage. The cleaning disc addresses lens issues, not disc damage.
- **Player Malfunction:** If cleaning does not resolve the issue, the problem may be due to a mechanical or electronic malfunction within the player itself, which the cleaning disc cannot fix.

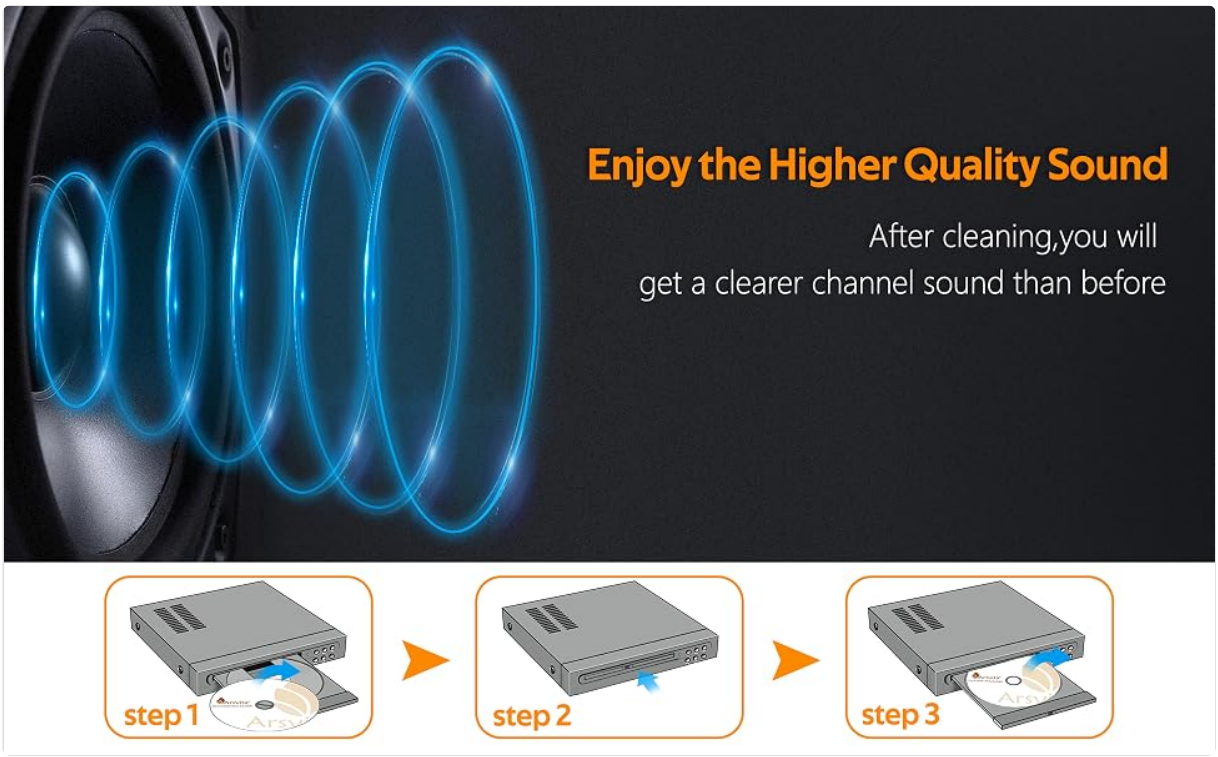


Image: A split image showing a TV screen with poor, static-filled playback on the left ("Before") and clear, high-quality

playback on the right ("After"), illustrating the potential improvement after cleaning.

Specifications

Brand	Arsvita
Model Name	ARCD-04 (Arsvita CD Laser Lens Cleaner Disc Cleaning Set)
Material	Microfibre (brushes)
Media Type Compatibility	CD, VCD, DVD
Compatible Devices	CD players, VCD players, DVD players
Water Resistance Level	Not Water Resistant

Warranty and Support

The Arsvita ARCD-04 Laser Lens Cleaner Disc comes with a**1-Year Manufacturer Warranty**.
If you encounter any problems or have questions regarding your product, please contact Arsvita customer support. We are available 24 hours to serve you.
Contact information can typically be found on the After Sales Card included in your package or on the official Arsvita website.

© 2026 Arsvita. All rights reserved.