Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hatteker RFC-7572

Hatteker Electric Shaver User Manual

Model: RFC-7572

Brand: Hatteker

Introduction

This manual provides detailed instructions for the safe and effective use of your Hatteker Electric Shaver. Please read it thoroughly before first use and keep it for future reference.

The Hatteker Electric Shaver features a 4D rotary system with floating double track blade nets and precision steel blades. It is designed to closely follow the contours of your face, neck, and jaw, minimizing pressure and irritation while providing a smooth, close, and comfortable shaving experience.



Figure 1: Hatteker Electric Shaver (Bronze)

What's in the Box

Upon opening the package, please ensure all components are present and in good condition:

- Hatteker Electric Shaver
- Shaver Cap
- USB Charging Cable
- Cleaning Brush
- Storage Bag
- User Manual (this document)



Figure 2: Package Contents

Setup

Charging the Shaver

Before first use, fully charge the shaver. Connect the USB charging cable to the shaver's charging port and plug the other end into a compatible USB power source (e.g., laptop, computer, power bank, or USB wall adapter). The LED display will indicate charging status.

- A full charge takes approximately **1.5 hours**.
- A fully charged shaver provides up to **60 minutes** of cordless shaving time.
- The LED display shows the remaining battery time in minutes.
- A charging reminder icon will appear when the battery is low.



Figure 3: USB Fast Charging and LED Display

Activating Travel Lock

To prevent accidental activation during travel, the shaver features a travel lock function. To activate or deactivate, press and hold the power button for 3 seconds. A lock icon will appear on the LED display when activated.

Operating Instructions

Shaving Your Face

The Hatteker Electric Shaver can be used for both wet and dry shaving.

- **Dry Shave:** For a quick and convenient shave, ensure your face is clean and dry.
- **Wet Shave:** For a more comfortable shave, you can use shaving foam or gel. The shaver is fully waterproof, allowing for use in the shower.

Press the power button to turn on the shaver. Gently move the shaver in small circular motions over your face and neck, following the contours of your skin. The 4D rotary heads are designed to adapt to your facial curves for an efficient shave.



Figure 4: Wet and Dry Shaving Capability

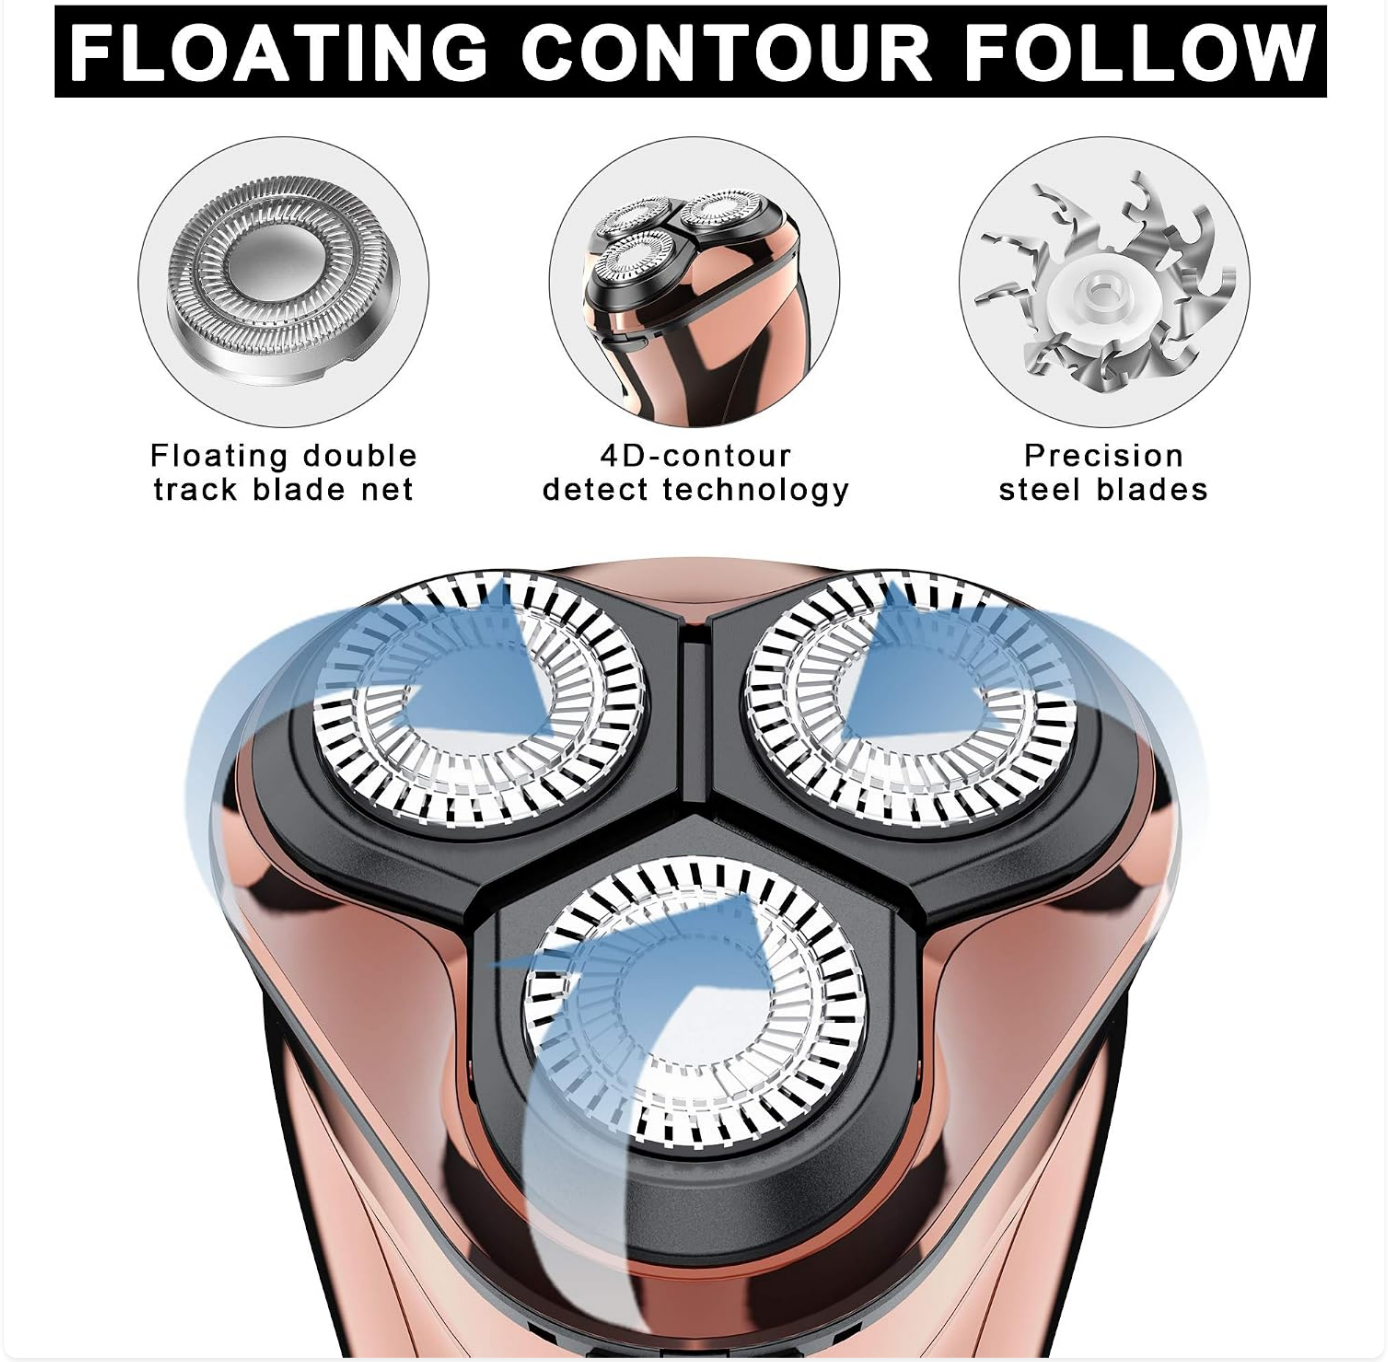


Figure 5: 4D Rotary Shaver Head Technology

Using the Pop-Up Trimmer

The integrated pop-up trimmer is located on the back of the shaver head. Slide the switch upwards to activate the trimmer. This is ideal for shaping sideburns, mustaches, goatees, and other facial hair styles.

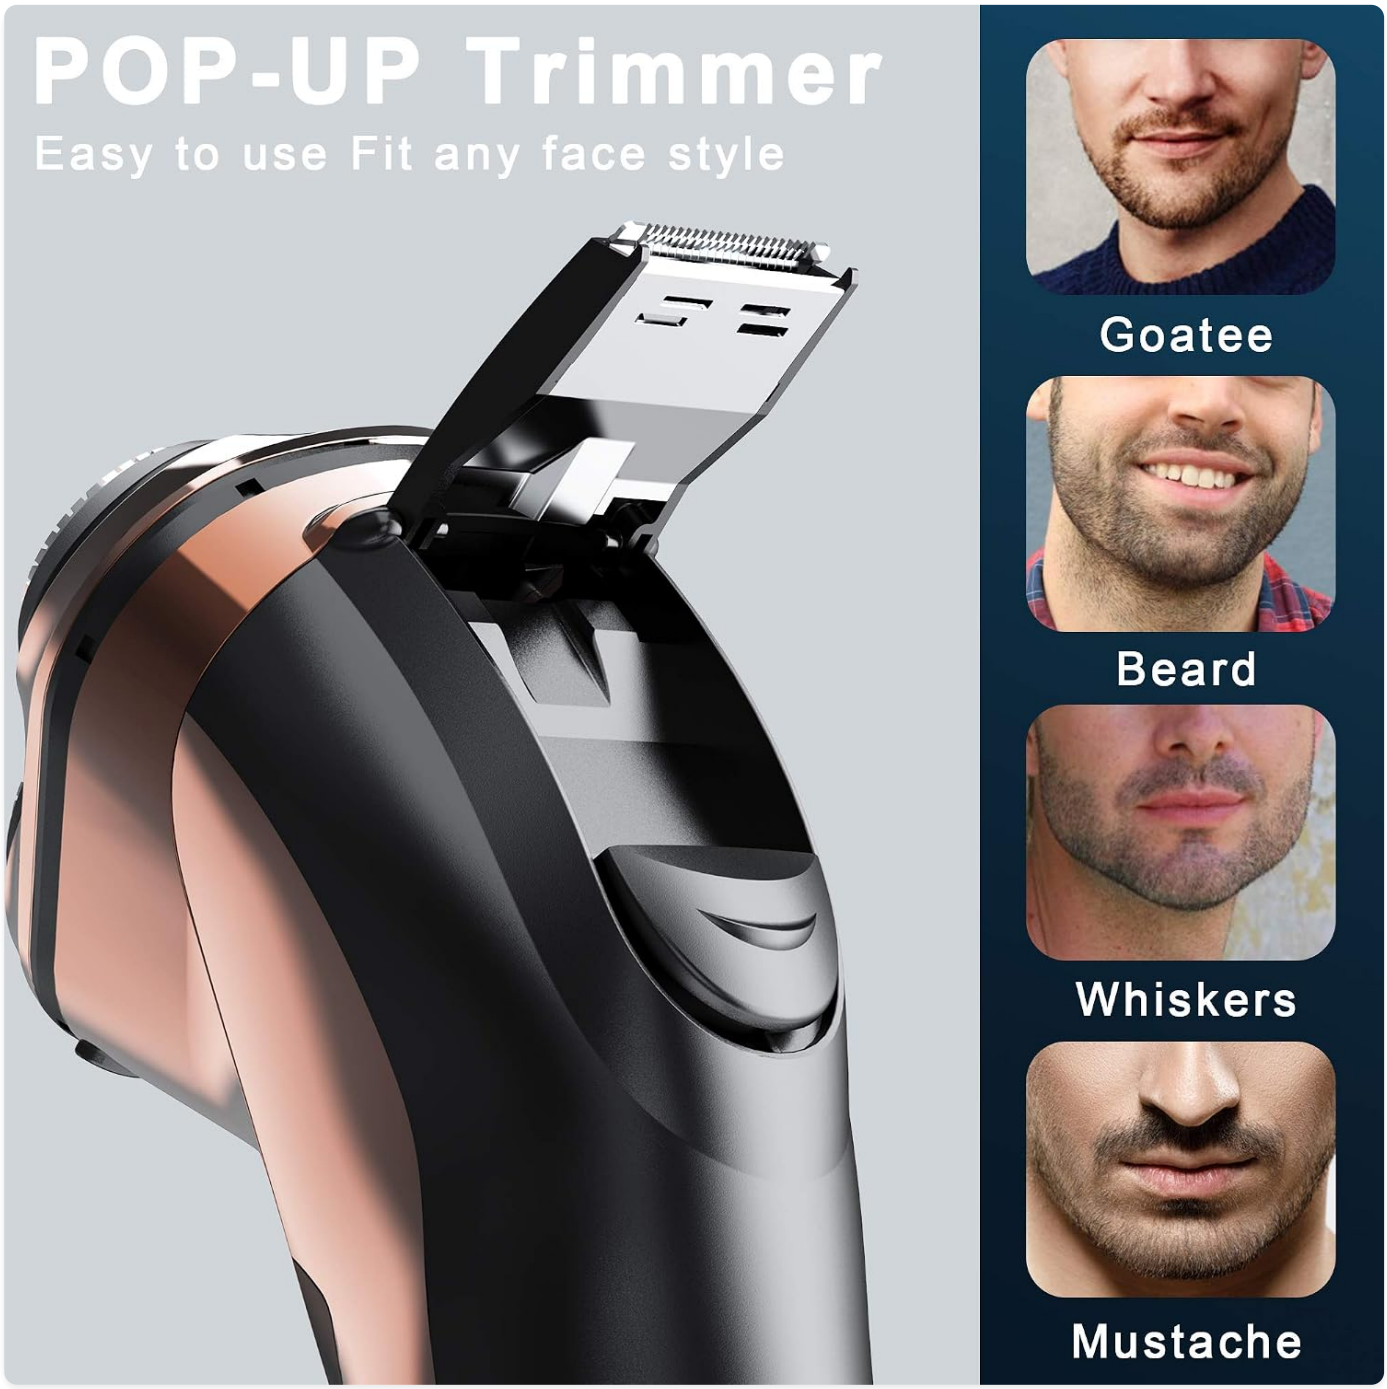


Figure 6: Pop-Up Trimmer for Styling

Maintenance

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene. The entire body of the shaver is waterproof and washable.

1. Turn off the shaver and disconnect it from the charging cable.
2. Open the shaver head by pressing the release button (if applicable, or gently pull open).
3. Rinse the shaver head and the internal shaving unit under running tap water.
4. Use the provided cleaning brush to remove any stubborn hair particles from the blades and inner chamber.
5. Allow the shaver head to air dry completely before closing it or reattaching the shaver cap.



Figure 7: Waterproof Cleaning

Blade Replacement

For best shaving results, it is recommended to replace the shaver heads every 12-18 months, depending on usage. Replacement heads can be purchased from authorized Hatteker retailers or online. Refer to the product packaging or Hatteker's official website for specific replacement part numbers.

Troubleshooting

If you encounter any issues with your Hatteker Electric Shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted; Travel lock is activated.	Charge the shaver; Deactivate travel lock by pressing and holding the power button for 3 seconds.

Problem	Possible Cause	Solution
Poor shaving performance.	Shaver heads are dirty or worn out.	Clean the shaver heads thoroughly; Consider replacing the shaver heads if they are old.
Skin irritation after shaving.	Incorrect shaving technique; Sensitive skin; Dirty blades.	Ensure gentle circular motions; Try wet shaving with foam; Clean blades regularly.
Shaver makes unusual noise.	Hair trapped in blades; Damaged shaver head.	Clean the shaver thoroughly; If noise persists, the shaver head may need replacement.

If the problem persists after trying these solutions, please contact Hatteker customer support.

Specifications

Feature	Detail
Model Number	RFC-7572
Brand	Hatteker
Head Type	Rotary
Blade Material	Alloy Steel
Power Source	Battery Powered
Battery Life	60 Minutes (cordless shaving)
Charging Time	Approx. 1.5 hours
Special Features	Wet & Dry Use, Cordless, Pop-up Trimmer, LED Display, Travel Lock
Color	Bronze
Item Weight	290 Grams
Product Dimensions	7.9 x 14.3 x 20.9 cm
Country of Origin	China

Warranty and Support

Warranty Information

This Hatteker Electric Shaver comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official Hatteker website for detailed terms and conditions regarding warranty coverage and duration. Extended warranty plans may also be available for purchase from your retailer.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Hatteker customer support. Contact details can typically be found on the official Hatteker website or on the product packaging.
When contacting support, please have your product model number (RFC-7572) and purchase information readily available.

© 2024 Hatteker. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08PYPN6R3

More documents and user manuals: **https://manuals.plus/**