Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Riptunes fgsvhryt-454

Riptunes Bluetooth Walkman Cassette Player User Manual

Model: fgsvhryt-454

Introduction

Welcome to the user manual for your Riptunes Bluetooth Walkman Cassette Player. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it thoroughly to ensure optimal performance and longevity of your player.

Product Overview

The Riptunes Bluetooth Walkman Cassette Player is a versatile audio device combining classic cassette playback with modern Bluetooth connectivity. It features stereo speakers, a headphone jack, USB/mSD slots, and AM/FM/SW radio capabilities.

Key Features

- Cassette Player with Auto Stop
- Bluetooth Connectivity for wireless audio streaming
- AM/FM/SW Radio Tuner
- USB and mSD Card Playback
- Built-in Stereo Speakers
- Headphone Jack
- One-Touch Recording (Cassette to USB/mSD)

Package Contents

- Riptunes Bluetooth Walkman Cassette Player
- AC Power Cable
- User Manual (This document)

Component Identification

Refer to the diagrams below to identify the various parts and controls of your Riptunes player.

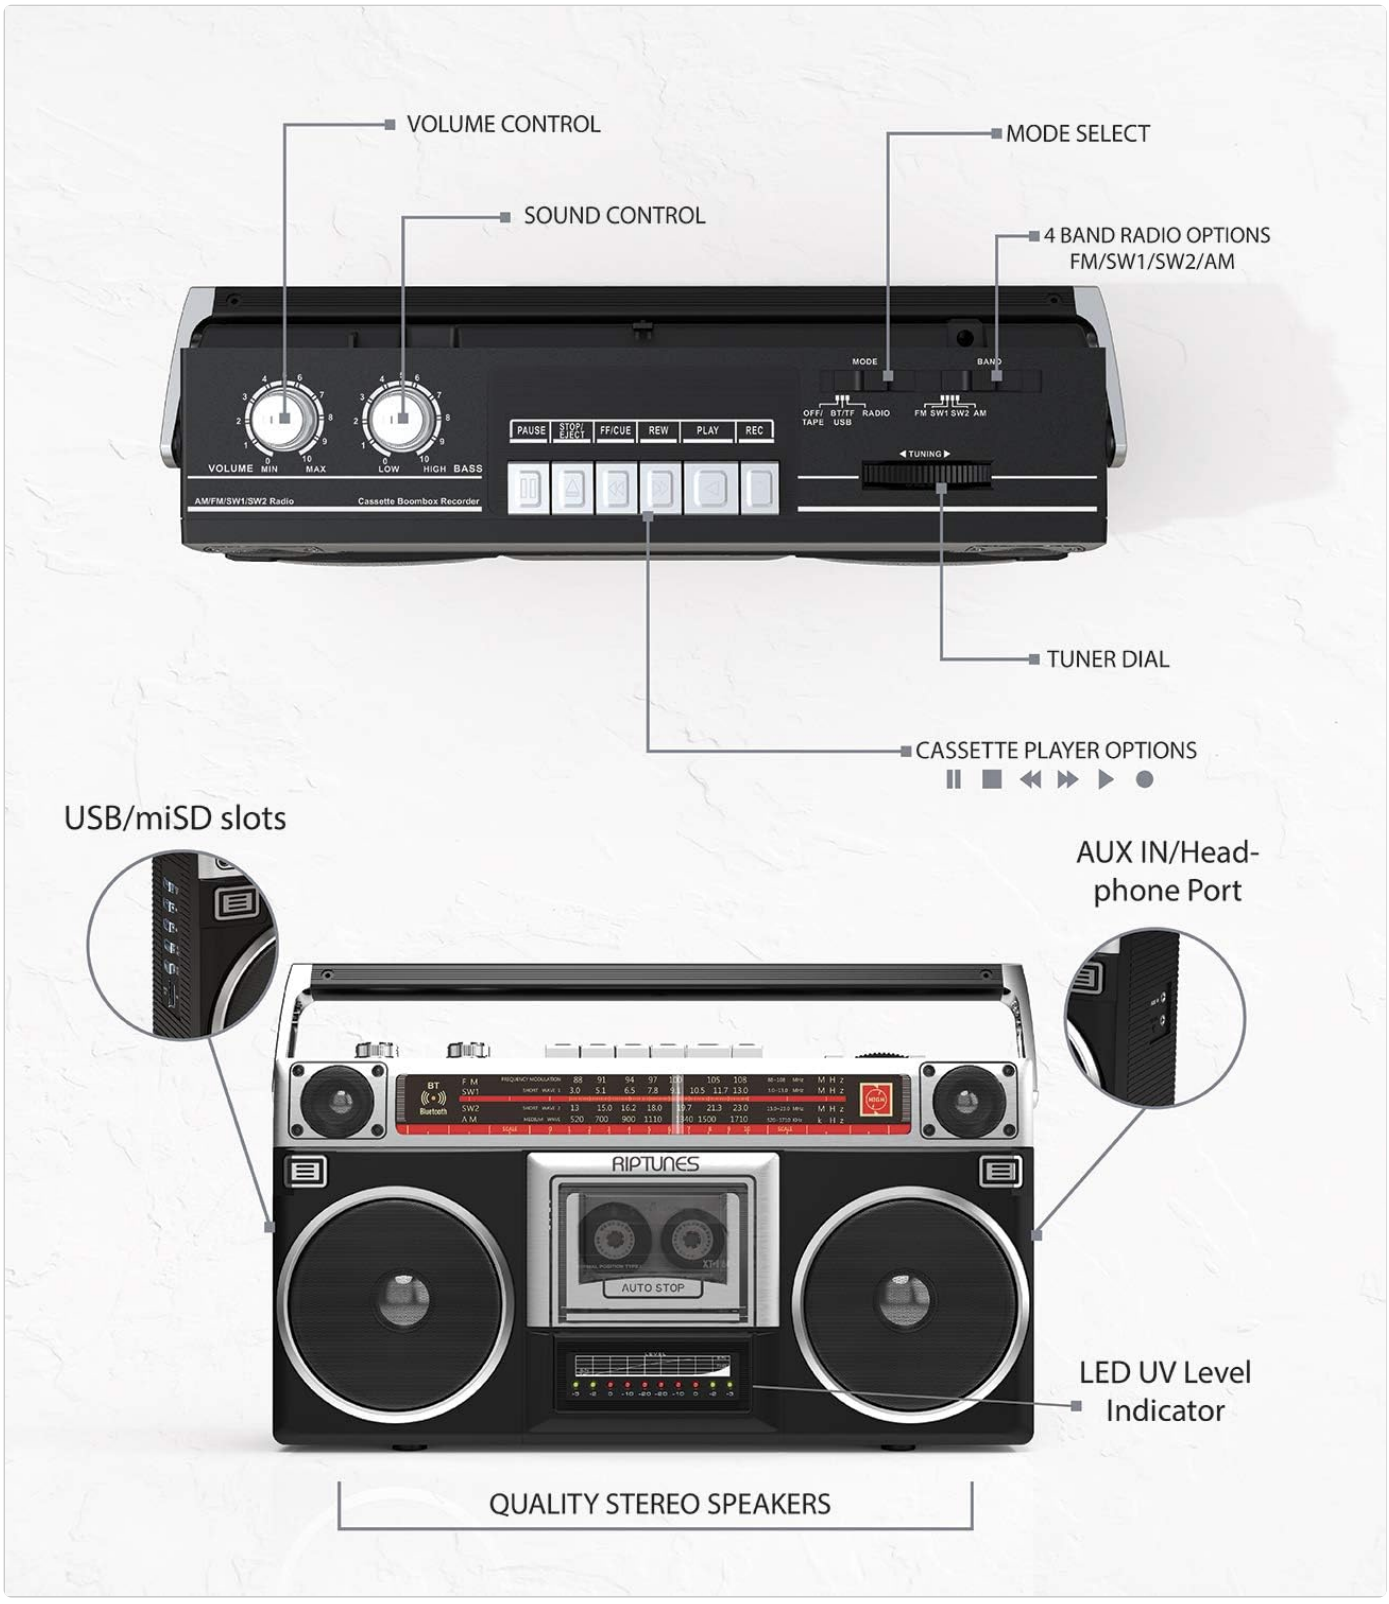


Figure 1: Top and Front Panel Controls

This image highlights the Volume Control, Sound Control (Bass/Treble), Mode Select, 4 Band Radio Options (FM/SW1/SW2/AM), Tuner Dial, Cassette Player Options (Pause, FF-CUE, REW, Play, REC), USB/mSD slots, AUX IN/Headphone Port, and LED UV Level Indicator.



Figure 2: Key Features and Dimensions

This image illustrates the overall dimensions of the unit (15.35" width, 10.00" height, 4.00" depth) and icons representing its main functionalities: Stereo Speakers, Headphone Jack, Cassette Player, Bluetooth connectivity, LED UV Meter, USB/mSD Slot, AUX Input, and AM/FM/SW Radio.

Setup

Powering the Device

The Riptunes player can be powered using an AC power cord or batteries (not included).

AC Power

1. Ensure the unit is turned off.
2. Insert the AC power cord into the AC socket on the back of the unit.
3. Plug the other end of the power cord into a standard wall outlet (AC 230V~50Hz).

Battery Power

1. Open the battery compartment cover on the back of the unit.
2. Insert the required number of D-size batteries (typically 4 x D-size, not included) according to the polarity markings (+/-).
3. Close the battery compartment cover securely.

Initial Power On

Turn the VOLUME knob clockwise to power on the unit. The LED UV level indicator will illuminate.

Operating Instructions

Radio Operation

1. Set the MODE SELECT switch to "RADIO".
2. Select the desired band (FM, SW1, SW2, AM) using the BAND switch.
3. Rotate the TUNER DIAL to tune into your desired radio station. Extend the telescopic antenna for better FM/SW reception. For AM, rotate the unit for optimal reception.

Cassette Playback

1. Set the MODE SELECT switch to "TAPE".
2. Press the STOP/EJECT button to open the cassette compartment.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette compartment.
5. Press the PLAY button to start playback.
6. Use FF-CUE (Fast Forward) or REW (Rewind) to navigate the tape.
7. Press PAUSE to temporarily stop playback. Press again to resume.
8. Press STOP/EJECT to stop playback and eject the tape.

Bluetooth Pairing and Playback

The unit supports Bluetooth connectivity for streaming audio from compatible devices.

1. Set the MODE SELECT switch to "BT" (Bluetooth). The Bluetooth indicator will flash, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, MP3 player), search for available Bluetooth devices.
3. Select "Riptunes BR636B-5" (or similar name) from the list.
4. Once paired, the Bluetooth indicator will stop flashing and remain solid. You can now play audio from your device through the Riptunes player.
5. Control playback (play/pause, skip tracks) from your connected device. Adjust volume using the VOLUME knob on the player and/or your connected device.



Figure 3: Bluetooth and Recording Functionality

This image demonstrates how to record radio or cassette content to a USB drive or mSD card, and how to listen to music from a Bluetooth-enabled device like a smartphone.

USB/mSD Playback

1. Insert a USB flash drive or mSD card into the corresponding slot.
2. Set the MODE SELECT switch to "USB" or "SD" (refer to unit markings if specific). The unit will automatically detect and begin playing compatible audio files (MP3, WAV, FLAC, SBC).
3. Use the playback controls (e.g., FF-CUE/REW for track navigation, PAUSE/PLAY) for media files.

Recording (Cassette to USB/mSD)

The Riptunes player supports one-touch recording from cassette to a connected USB drive or mSD card.

1. Insert a USB flash drive or mSD card into the appropriate slot.
2. Insert a cassette tape into the cassette compartment.
3. Set the MODE SELECT switch to "TAPE".
4. Press the PLAY button on the cassette player.
5. Press the REC (Record) button. The recording will begin, converting the cassette audio to a digital file on your USB/mSD storage.
6. Press STOP/EJECT to end the recording.

Using the AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the AUX IN port using a 3.5mm audio cable (not included).
2. Set the MODE SELECT switch to "AUX".
3. Play audio from your external device. Adjust volume on both the external device and the Riptunes player.

Using Headphones

Connect standard 3.5mm stereo headphones to the HEADPHONE JACK for private listening. The built-in speakers will be muted automatically.

Maintenance

Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the cassette head, use a specialized cassette head cleaning kit periodically.

Storage

When not in use for extended periods, remove batteries to prevent leakage. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
No power	AC cord not properly connected; Batteries depleted or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume; Disconnect headphones; Select the correct input mode (Radio, Tape, BT, USB/SD, AUX).
Poor radio reception	Antenna not extended; Unit position.	Extend telescopic antenna for FM/SW; Rotate unit for AM.

Problem	Possible Cause	Solution
Bluetooth not pairing	Unit not in pairing mode; Device too far; Bluetooth disabled on source device.	Ensure MODE SELECT is on "BT" and indicator is flashing; Move devices closer; Enable Bluetooth on your source device.
Cassette not playing	Tape incorrectly inserted; Tape damaged; PLAY button not pressed.	Re-insert tape correctly; Try a different tape; Press PLAY button firmly.

Specifications

Feature	Detail
Brand	Riptunes
Model Number	fgsvhryt-454
Connectivity Technology	Bluetooth
Compatible Devices	Smartphone, MP3 Player
Audio Output Mode	Stereo
Speaker Type	Stereo
Speaker Configuration	2.0 Channel
Supported Audio Formats	MP3, WAV, AAC, WMA, Dolby AC-3, FLAC, SBC
Power Source	AC Power, Battery Powered (Batteries not included)
Color	Black
Item Weight	2.69 Kilograms
Package Dimensions	41.91 x 24 x 17.91 cm

Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the Riptunes official website for detailed terms and conditions. Keep your purchase receipt as proof of purchase.

Customer Support

For further assistance, technical support, or service inquiries, please contact Riptunes customer support.

- **Website:** www.riptunes.com
- **Email:** support@riptunes.com
- **Phone:** Refer to your regional Riptunes support contact information.

When contacting support, please have your product model number (fgsvhryt-454) and purchase date available.

© 2023 Riptunes. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08Q35KQS6

More documents and user manuals: **https://manuals.plus/**