Proscenic X1

Proscenic X1 Robot Vacuum and Mop User Manual

Model: X1

1. Introduction

This manual provides essential information for the safe operation, maintenance, and troubleshooting of your Proscenic X1 Robot Vacuum and Mop. Please read it thoroughly before using the product and retain it for future reference.

2. Product Overview

2.1 What's in the Box



The image above illustrates the typical contents included with your Proscenic X1 Robot Vacuum and Mop. Please verify all items are present upon unboxing.

- Floobot X1 Robot Vacuum
- Auto-Empty Base
- User Manual
- Mopping Cloth (1 included, 1 extra)
- Vibration Mopping Pad
- Side Brush (1 included, 1 extra)
- Dustbin
- HEPA Filter (1 included, 1 extra)

- Dustbag (1 included, 1 extra)
- Power Adapter
- Remote Control

2.2 Product Features

- **All-in-One Cleaning:** Integrates vacuuming, mopping, and automatic dustbin emptying.
- **45-Day Hands-Free Cleaning:** The self-emptying base automatically collects dirt and debris, reducing the need for frequent dustbin emptying.
- **Powerful Suction:** Features 3,000 Pa suction for effective cleaning of various floor types, including carpets.
- **Advanced Filtration:** Equipped with a HEPA filter to capture fine dust and allergens.
- **Extended Battery Life:** Provides up to 140 minutes of cleaning on a single charge, with auto-recharge and resume functionality.
- **Smart Navigation:** Utilizes intelligent mapping for precise navigation, obstacle avoidance, and optimized cleaning paths.
- **Multi-Level Mapping:** Capable of creating and storing maps for up to 5 different levels of your home.
- **Customizable Cleaning:** Offers custom cleaning, zoning, and exclusion zone settings via the mobile app.
- **Ultrasonic Carpet Detection:** Automatically boosts suction on carpets for deeper cleaning and avoids mopping carpeted areas.
- **Sonic Mopping System:** Pressurized mopping pad scrubs up to 3,000 times per minute for effective stain removal.
- **Multiple Control Options:** Control via the Proscenic App (2.4GHz WiFi required), remote control, or voice commands (Alexa, Google Home, Siri, IFTTT).
- **Self-Emptying Base Indicators:** The base features LED indicators for Dust Bag, Power, Sterilization, and Status.

3. Setup Guide

3.1 Unpacking and Placement

1. Carefully remove all components from the packaging.
2. Choose a suitable location for the Auto-Empty Base. Ensure it is placed against a wall, on a hard, level surface, with at least 0.5 meters (1.6 feet) of clear space on either side and 1.5 meters (4.9 feet) in front. Avoid areas with direct sunlight or strong light sources.
3. Plug the power adapter into the Auto-Empty Base and connect it to a power outlet. Ensure the base is powered on.

3.2 Initial Charging


Place the Proscenic X1 robot vacuum onto the charging contacts of the Auto-Empty Base. Ensure the robot is properly aligned. The robot will begin charging automatically. For first-time use, fully charge the robot before operation.



The Proscenic X1 robot vacuum docked with its Auto-Empty Base.

3.3 App Connection (Optional but Recommended)

1. Download the "Proscenic" app from your mobile device's app store.
2. Open the app and follow the on-screen instructions to register an account.
3. Add your Proscenic X1 device by selecting the appropriate model.
4. Follow the app's instructions to connect the robot to your 2.4GHz Wi-Fi network.

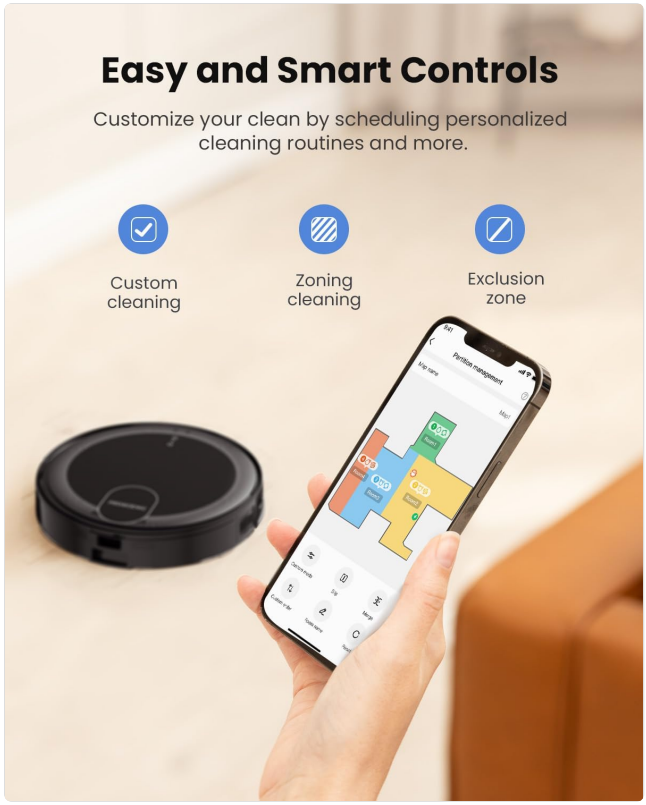


The Proscenic App allows for smart control and customization of cleaning routines.

4. Operating Instructions

4.1 Starting a Cleaning Cycle

- **From the Robot:** Press the power button on the robot once to start a cleaning cycle.
- **From the App:** Open the Proscenic app, select your device, and tap "Start" or choose a specific cleaning mode.
- **Using Remote Control:** Use the provided remote control to start, pause, or direct the robot.
- **Voice Command:** If integrated with Alexa, Google Home, or Siri, use voice commands such as "Alexa, start cleaning with X1."




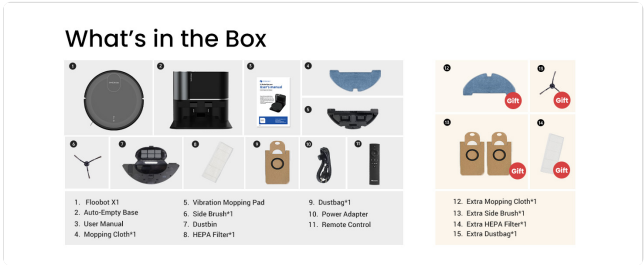

Control your Proscenic X1 using the remote or voice commands.

4.2 Vacuuming and Mopping

The Proscenic X1 is designed for both vacuuming and mopping. Ensure the mopping pad is attached and the water tank is filled for mopping functions. The robot will automatically detect carpets and adjust its cleaning mode accordingly, boosting suction for vacuuming and avoiding mopping on carpeted surfaces.

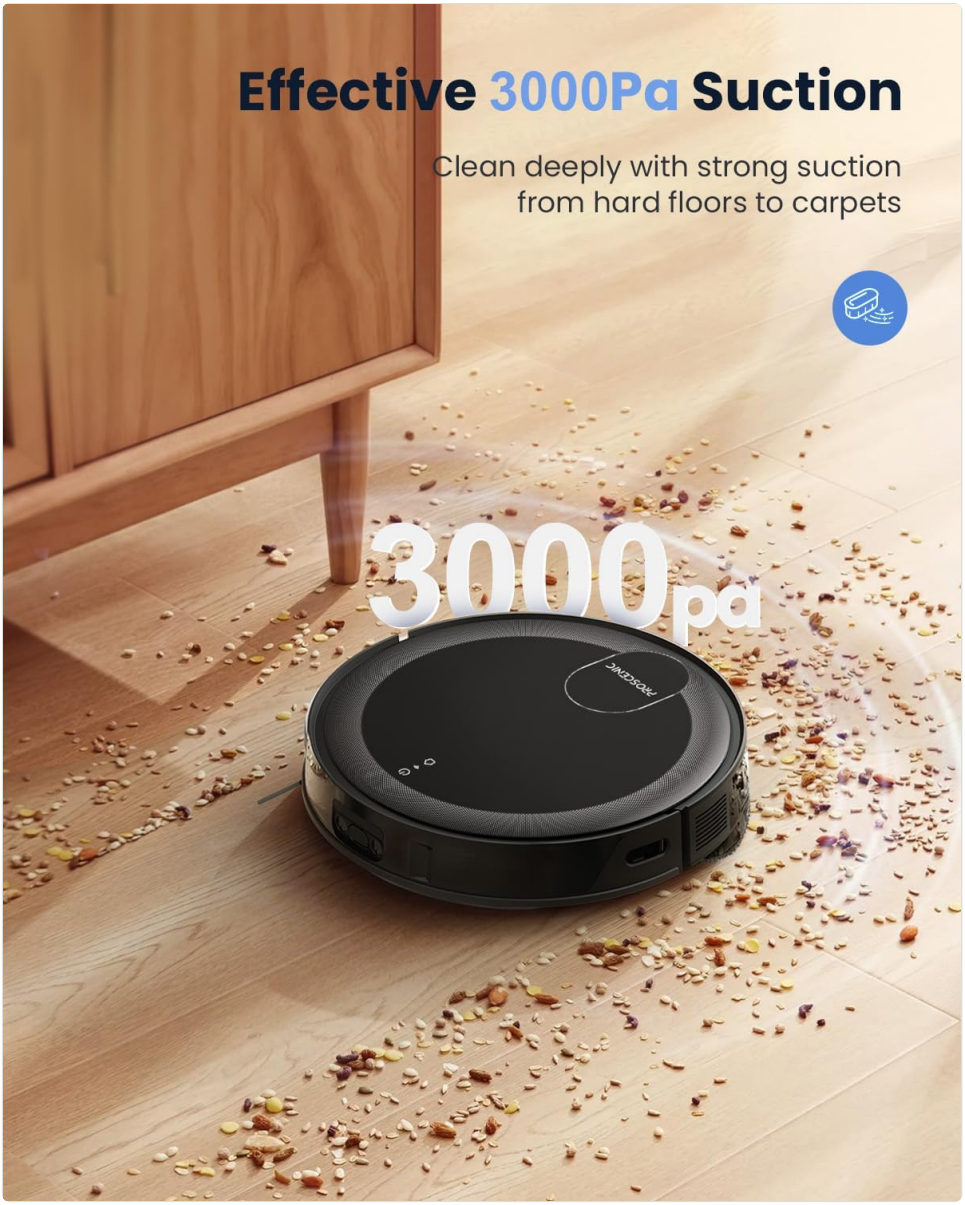

The robot vacuum demonstrates its powerful 3000Pa suction on hard floors.



The sonic mopping system ensures thorough cleaning with 3000 scrubs per minute.



The ultrasonic carpet detector intelligently adjusts cleaning modes for different surfaces.

4.3 Smart Navigation and Mapping

The Proscenic X1 uses advanced navigation to create accurate maps of your home, allowing for efficient cleaning paths and obstacle avoidance. You can view and manage these maps within the Proscenic app, setting specific cleaning areas, no-go zones, or virtual walls.



The robot intelligently navigates around obstacles in your home.



The app allows for management of multiple floor maps, up to 5 levels.


5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Proscenic X1. Always power off the robot before performing any maintenance.

5.1 Auto-Empty Base Dustbag Replacement

The Auto-Empty Base can hold up to 45 days of dust and debris. When the dustbag is full, the Dust Bag Indicator on the base will illuminate. Replace the dustbag as follows:

1. Open the lid of the Auto-Empty Base.
2. Carefully remove the full dustbag.
3. Insert a new dustbag, ensuring it is properly seated.
4. Close the lid securely.

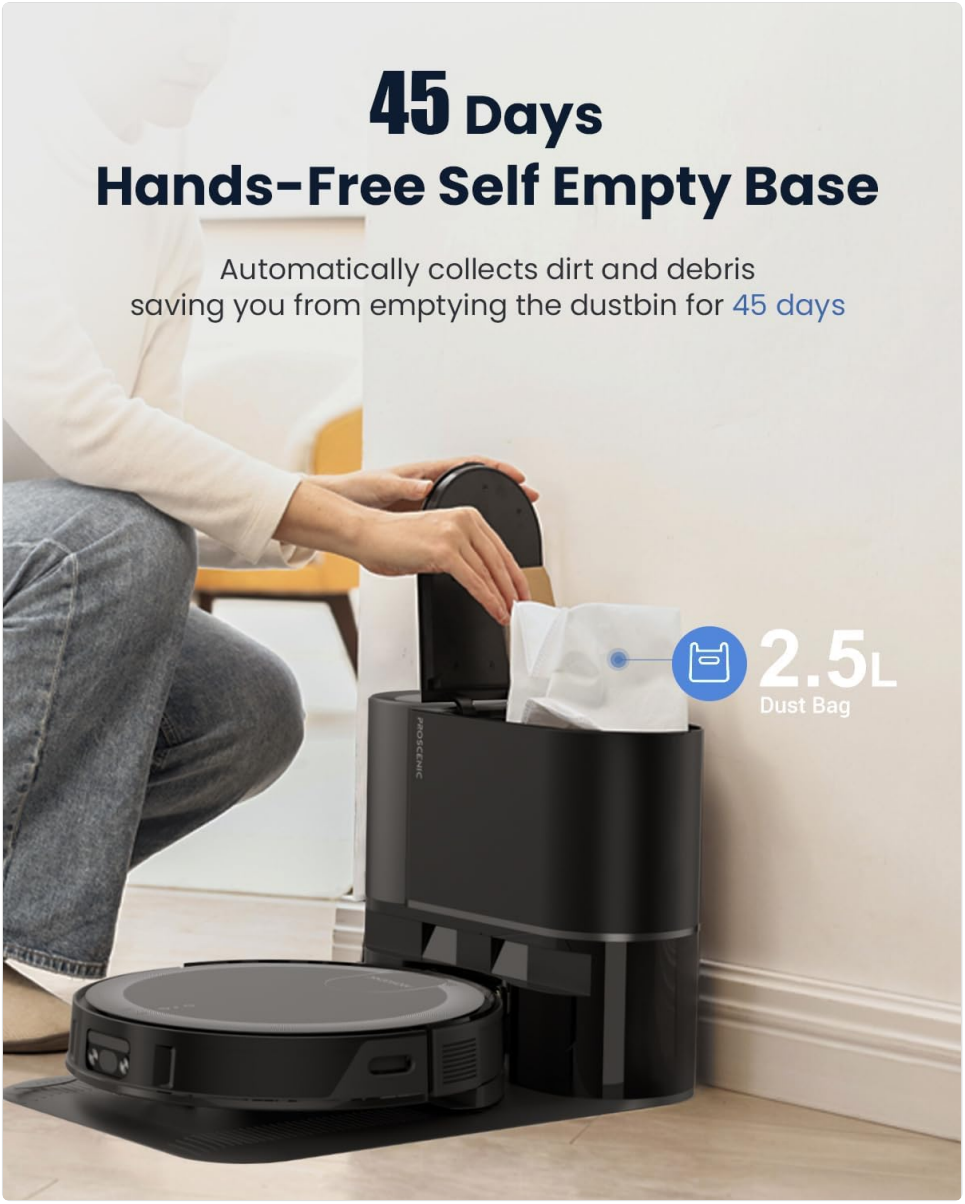

The self-emptying base automatically transfers debris into a sealed dustbag, requiring replacement approximately every 45 days.



Indicators on the Auto-Empty Base show dust bag status, power, sterilization, and general status.

5.2 Robot Dustbin and Filter Cleaning

Even with the auto-empty feature, it is recommended to periodically check and clean the robot's internal dustbin and HEPA filter.

1. Open the robot's top cover and remove the dustbin.
2. Empty the dustbin contents into a trash receptacle.
3. Remove the HEPA filter from the dustbin and tap it gently to remove dust. Do not wash the HEPA filter with water.
4. Rinse the dustbin with water if necessary, ensuring it is completely dry before reinserting.

5. Reinstall the HEPA filter and dustbin into the robot.

5.3 Main Brush and Side Brush Cleaning

- **Main Brush:** Remove the main brush cover and lift out the brush. Use the cleaning tool to remove tangled hair and debris.
- **Side Brushes:** If side brushes are worn or damaged, replace them with new ones. Periodically remove tangled hair or debris from the side brushes.

5.4 Mopping Pad Maintenance

After each mopping session, remove the mopping pad from the robot. Wash it thoroughly with water and mild detergent. Allow it to air dry completely before reattaching or storing.

5.5 Sensor Cleaning

Wipe all sensors (cliff sensors, wall sensor, charging contacts) on the robot and the charging contacts on the base with a clean, dry cloth. This prevents performance issues due to dust accumulation.

6. Troubleshooting

If you encounter issues with your Proscenic X1, please refer to the following common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; Power switch off.	Charge the robot; Ensure power switch is ON.
Robot cannot return to charging base.	Base obstructed; Robot too far; Charging contacts dirty.	Clear area around base; Manually place robot on base; Clean charging contacts.
Suction power is weak.	Dustbin full; Filter clogged; Main brush tangled.	Empty dustbin; Clean/replace filter; Clean main brush.
Robot gets stuck frequently.	Obstacles; Cliff sensors dirty.	Clear obstacles; Clean cliff sensors.
Mopping function is ineffective.	Water tank empty; Mopping pad dirty/dry.	Fill water tank; Clean/wet mopping pad.
App connection issues.	Incorrect Wi-Fi (not 2.4GHz); Router too far; App error.	Ensure 2.4GHz Wi-Fi; Move robot closer to router; Restart app/robot.

7. Specifications

Feature	Detail
Brand	Proscenic
Model Name	X1 Robot Vacuum and Mop
Special Features	Cordless, Self-Emptying, Ultrasonic Wiping System, Carpet Detection
Color	Black
Robot Dimensions (L x W x H)	Approx. 5.12" x 5.12" x 1.15" (Note: This dimension appears to be for a component, not the full robot. The robot is round.)

Feature	Detail
Filter Type	Foam (HEPA)
Battery Life	Up to 140 minutes
Voltage	3.7 Volts
Dust Bag Capacity (Base)	2.5 Liters (up to 45 days)
Power Source	Battery Powered
Suction Power	3000 Pa
Mopping Frequency	3000 times per minute (sonic scrubbing)
Navigation Type	Smart Navigation, Mapping
Wi-Fi Support	2.4GHz only
Voice Assistant Support	Alexa, Google Home, Siri, IFTTT
Approximate Package Weight	22 pounds
Country of Origin	China

8. Warranty and Support

Proscenic is committed to providing excellent customer service. Your Proscenic X1 Robot Vacuum and Mop comes with the following support:

- **24/7 Rapid Responding Service Team:** Dedicated support available around the clock.
- **30-Day Money-Back Service:** For returns or exchanges within 30 days of purchase.
- **Up to 24-Month Warranty:** Comprehensive warranty coverage for up to two years from the date of purchase.
- **Fast Shipping from Local Warehouses:** Efficient delivery for parts and replacements.

For further assistance, please visit the official Proscenic website or contact their customer support team directly.

© 2024 Proscenic. All rights reserved.