Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Cesun TC

Cesun Small Bathroom Trash Can User Manual

Model: TC

Introduction

Thank you for choosing the Cesun Small Bathroom Trash Can. This manual provides essential information for the proper setup, operation, and maintenance of your new trash can. Designed for narrow spaces, this 1.6-gallon stainless steel garbage can features a soft-close lid, a sturdy step pedal, and an anti-fingerprint finish, ensuring convenience and durability.





Figure 1: Cesun Small Bathroom Trash Can (Matt Black)

Setup

Your Cesun trash can comes pre-assembled, requiring minimal setup. Follow these steps to prepare it for use:

1. **Unpacking:** Carefully remove the trash can and its components from the packaging. Ensure all parts, including the outer shell and the inner bucket, are present and undamaged.
2. **Inner Bucket Placement:** The removable inner bucket is designed to hold the trash bag and facilitate easy waste disposal.



Figure 2: Inner bucket removed from the trash can.

Gently lift the inner bucket out of the main body. Place a trash bag inside the inner bucket, ensuring the edges of the bag are tucked neatly around the rim. The inner bucket features a retention hole to secure the garbage bag in place and hide any excess bag material for a cleaner appearance.

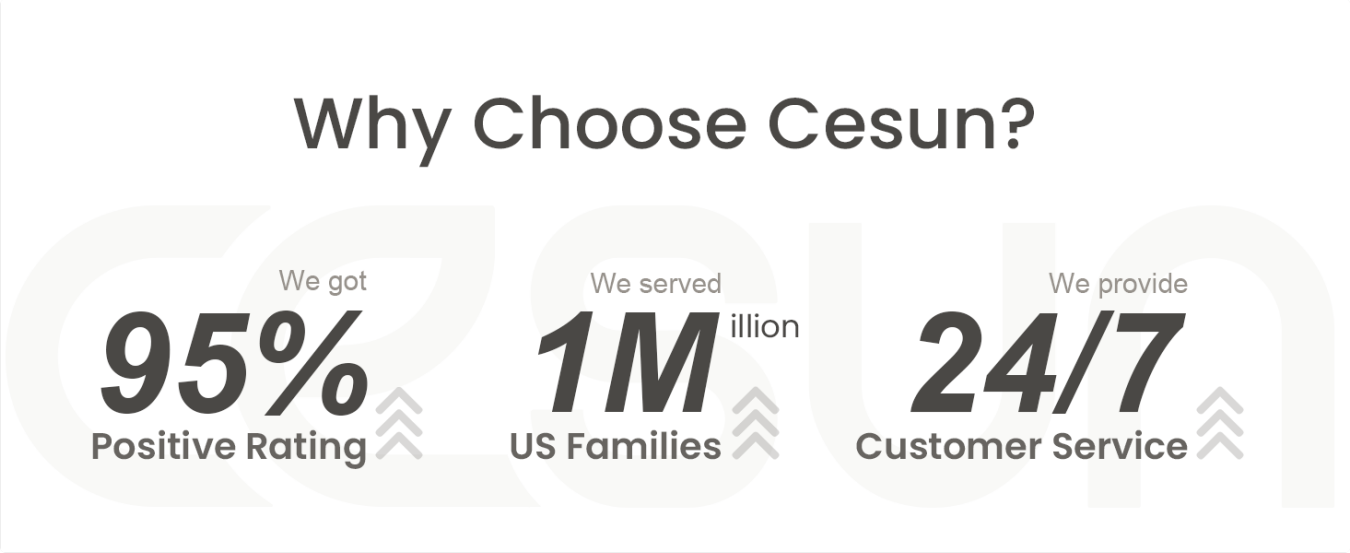


Figure 3: Removable inner bucket with trash bag retainer hole.

Once the bag is secured, carefully lower the inner bucket back into the main trash can body.

3. **Positioning:** Place the trash can in your desired location. Its slim, rectangular design is ideal for narrow spaces such as bathrooms, bedrooms, or home offices.

Operating Instructions

The Cesun trash can is designed for convenient, hands-free operation.

- **Opening the Lid (Hands-Free):** To open the lid, gently step on the foot pedal located at the base of the trash can. The lid will open smoothly and silently.



Figure 4: Step on the pedal to open the lid hands-free.

- **Soft-Close Mechanism:** When you release the foot pedal, the lid will close slowly and quietly, preventing slamming and reducing noise. This soft-close feature ensures a peaceful environment.

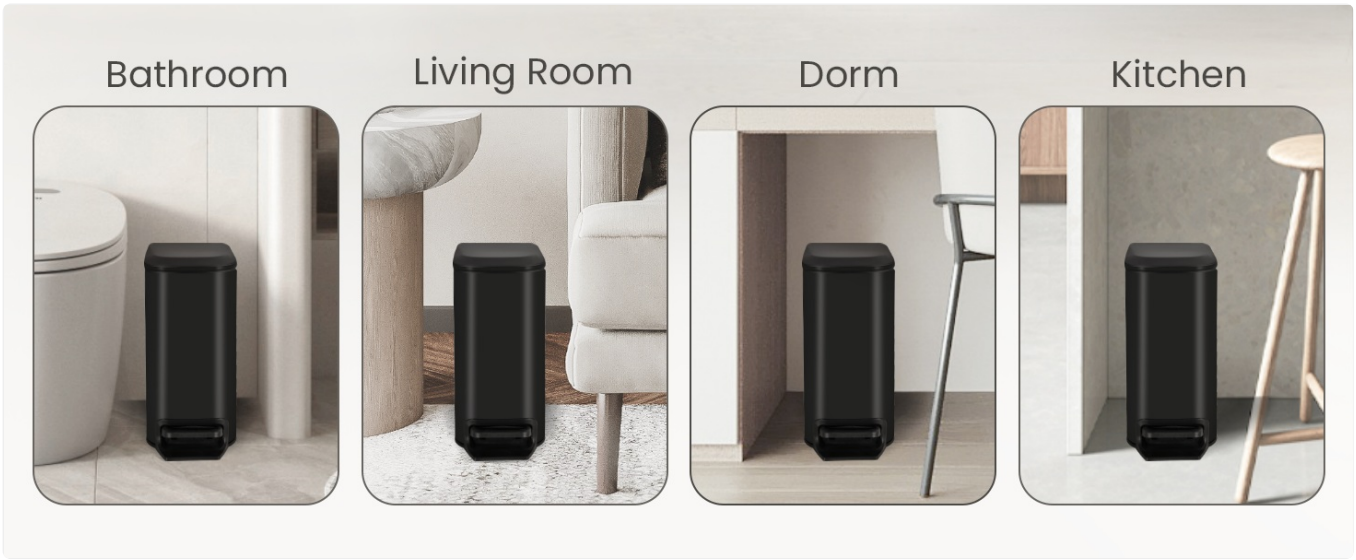


Figure 5: The lid features a soft-close mechanism for quiet operation.

- **Stay-Open Function:** For extended use or when changing trash bags, you can manually push the lid to a 90-degree angle. The lid will remain open until you gently push it back down to engage the soft-close mechanism.



Figure 6: Push the lid to 90 degrees to keep it open.

- **Odor Control:** The lid is designed to fit closely to the mouth of the trash can, effectively containing odors and preventing garbage exposure. This also helps prevent pets from accessing the contents.



Figure 7: The close-fitting lid helps contain odors.

Maintenance and Care

Proper care will ensure the longevity and appearance of your Cesun trash can.

- **Cleaning the Exterior:** The stainless steel body features an anti-fingerprint finish. To clean, simply wipe the exterior with a soft cloth dampened with water. Avoid abrasive cleaners or scouring pads, which can damage the finish.



Figure 8: Easily clean the anti-fingerprint stainless steel surface.

- **Cleaning the Inner Bucket:** The removable inner bucket can be easily cleaned with soap and water. Rinse thoroughly and allow it to dry completely before placing it back into the main body.
- **Pedal Care:** The sturdy steel pedal is engineered for long-term durability. No special maintenance is required for the pedal mechanism under normal use.

Troubleshooting

If you encounter any issues with your Cesun trash can, please refer to the following common solutions:

Problem	Possible Cause	Solution
Lid does not close softly.	Obstruction in the hinge mechanism or debris.	Check for any obstructions around the hinge area. Clean any debris. Ensure the lid is not manually forced closed.
Pedal is stiff or unresponsive.	Debris under the pedal or mechanism.	Inspect the pedal area for any foreign objects. Gently clean around the pedal mechanism.

Problem	Possible Cause	Solution
Inner bucket does not fit properly.	Incorrect alignment or debris.	Ensure the inner bucket is aligned correctly with the main body. Check for any debris at the bottom of the main body that might prevent proper seating.

If the problem persists, please contact Cesun customer service for further assistance.

Product Specifications

Feature	Detail
Brand	Cesun
Model Number	TC
Capacity	1.6 Gallons (6 Liters)
Color	Matt Black
Opening Mechanism	Step-On Pedal
Material	Stainless Steel
Recommended Uses	Indoor (Bathroom, Bedroom, Home Office)
Special Features	Compact, Odor Seal, Quiet Close, Removable Bucket, Anti-Fingerprint Finish
Shape	Rectangular
Finish Type	Powder Coated
Item Weight	2.47 pounds (1.12 kg)
Product Dimensions (L x W x H)	11.2" x 5.9" x 12.2" (28.4 cm x 15 cm x 31 cm)
UPC	749235859488



Figure 9: Product dimensions for the Cesun trash can and its inner bucket.

Warranty and Support

For any questions, concerns, or support needs regarding your Cesun Small Bathroom Trash Can, please contact Cesun customer service. Cesun is dedicated to providing top-notch products and outstanding customer care, including 24/7 customer service. You can find contact information on the official Cesun website or through your purchase platform.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08Q7MMJHH

More documents and user manuals: **https://manuals.plus/**