Foxsky 40FSFHS

Foxsky 40-inch Full HD Smart LED TV 40FSFHS Pro Series User Manual

Model: 40FSFHS

1. Introduction

Thank you for choosing the Foxsky 40-inch Full HD Smart LED TV, model 40FSFHS Pro Series. This manual provides essential information for the safe and efficient use of your television. Please read these instructions thoroughly before operating the device and retain them for future reference.

2. Safety Information

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings. Ensure adequate space around the TV for proper airflow.
- Use only the power cord supplied with the TV.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. What's in the Box

Carefully unpack your Foxsky TV and check that all items are present:

- 1 x Foxsky 40-inch Full HD Smart LED TV
- 1 x Table Top Stand
- 1 x Wall Mount
- 1 x User Manual (this document)
- 1 x Warranty Card

- 1 x Remote Control
- Batteries for Remote Control

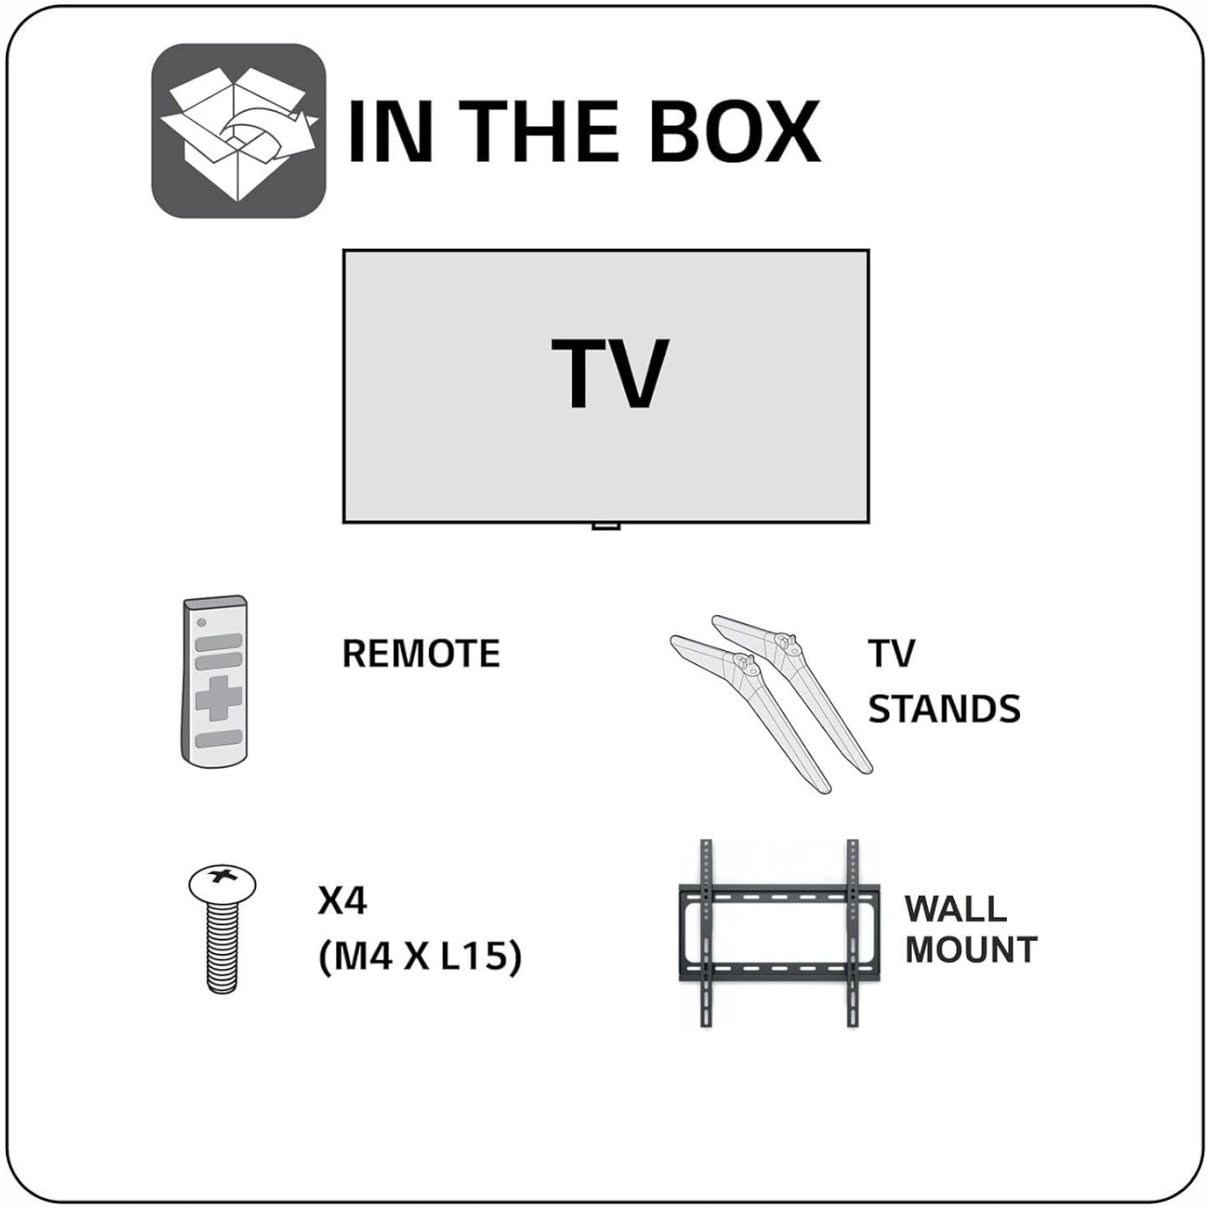


Figure 3.1: Contents of the TV Box

4. Setup

4.1 Physical Installation

Your Foxsky TV offers two installation options: tabletop stand or wall mount.

4.1.1 Tabletop Stand Installation

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Attach the two stand bases to the bottom of the TV, aligning the screw holes.
3. Secure the stands with the provided screws (M4 x L15).

4.1.2 Wall Mount Installation

If you choose to wall mount your TV, ensure you use the provided wall mount and follow its specific instructions. Professional installation is recommended for wall mounting.



Figure 4.1: Rear View with Wall Mount Points

4.2 Initial Power On and Network Connection

1. Connect the power cord to the TV and a power outlet.
2. Press the power button on the TV or remote control to turn it on.
3. Follow the on-screen prompts to complete the initial setup, including language selection and network connection.
4. To connect to Wi-Fi, select your network from the list and enter the password.

5. Operating the TV

5.1 Remote Control Overview

The smart remote control provides easy access to all TV functions and popular streaming services.

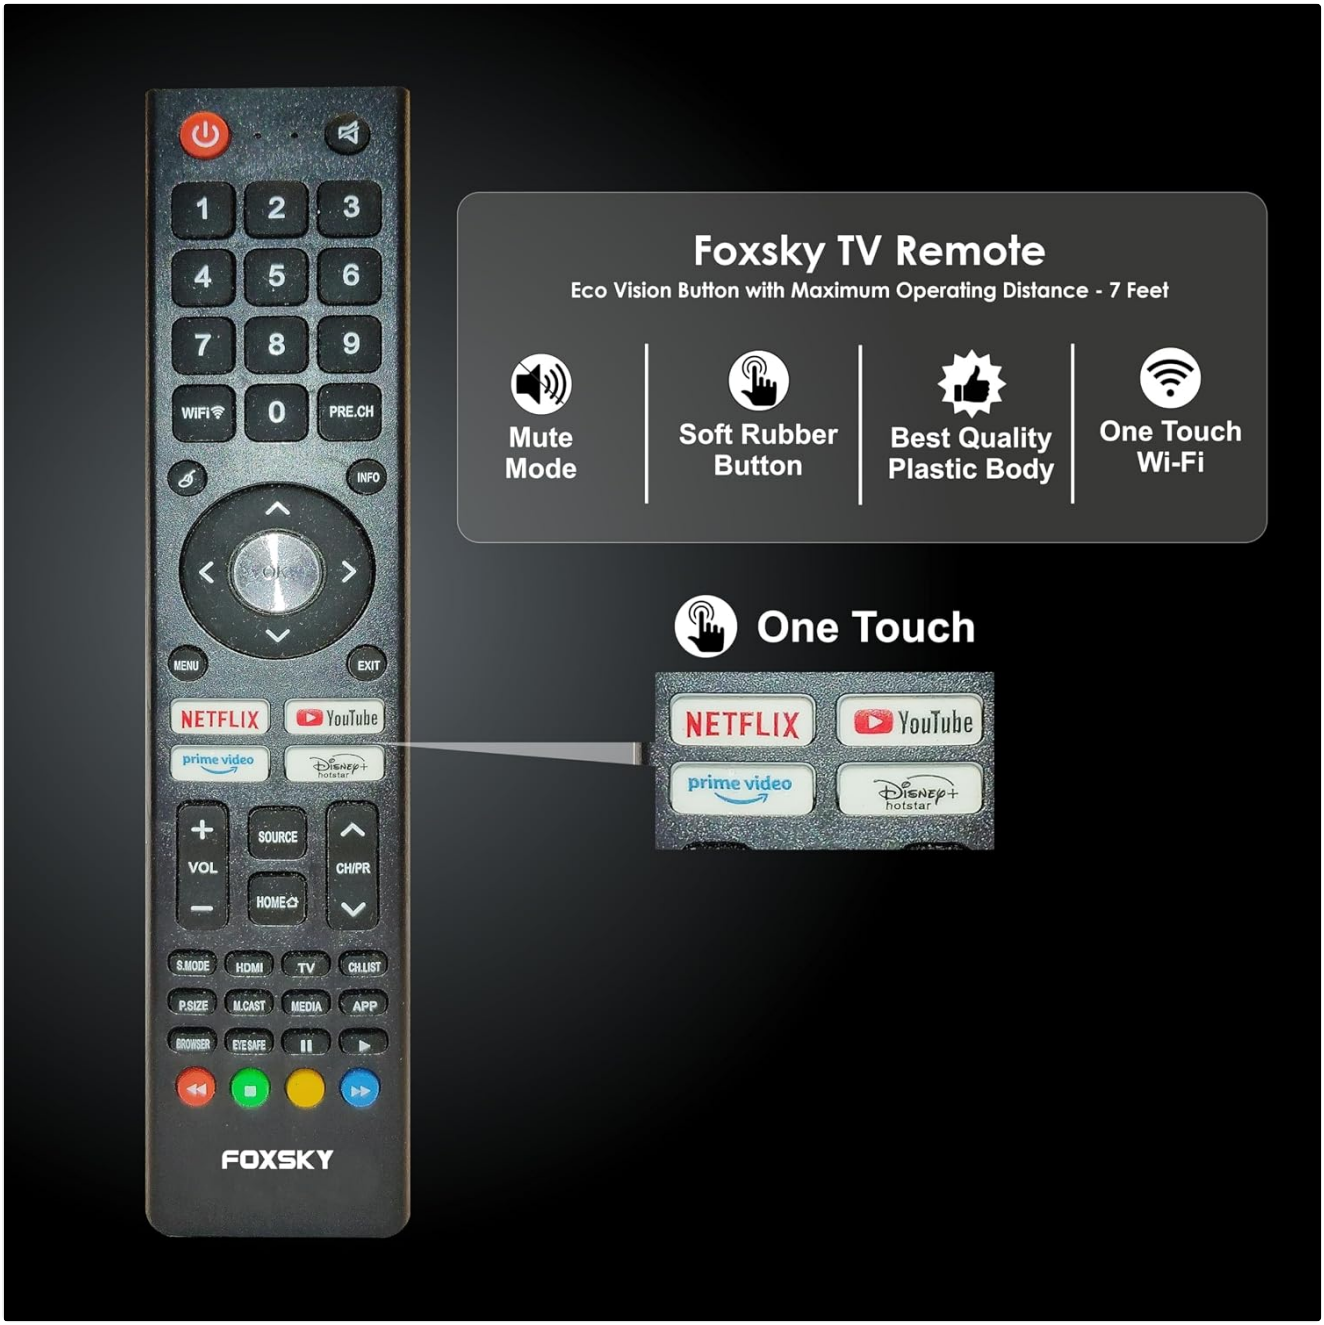


Figure 5.1: Remote Control Layout

Key features of the remote include:

- **Power Button:** Turns the TV on or off.
- **Number Buttons:** For direct channel selection.
- **Navigation Pad:** For menu navigation.
- **Volume Up/Down:** Adjusts audio level.
- **Dedicated Hotkeys:** Quick access to Netflix, YouTube, Prime Video, and Disney+ Hotstar.
- **Wi-Fi Button:** One-touch access to Wi-Fi settings.

5.2 Smart TV Features (Android OS)

Your Foxsky TV runs on an Android 9.0 Based OS, providing access to a wide range of applications and smart functionalities.



Figure 5.2: Android Smart TV Interface

- **Built-in Wi-Fi:** Connects to your home network for internet access.
- **Google Play Store:** Download and install additional applications.
- **Pre-loaded Apps:** Includes Netflix, YouTube, Sony Liv, Disney+ Hotstar, Zee5, and more.
- **Built-in Miracast:** Wirelessly mirror content from compatible devices to your TV screen.



Figure 5.3: Miracast Functionality

5.3 Connectivity

The TV features multiple ports for connecting external devices:

- **2 x HDMI Ports:** Connect set-top boxes, Blu-Ray players, gaming consoles, and other HDMI-enabled devices.
- **2 x USB Ports:** Connect hard drives, USB flash drives, and other USB devices for media playback.
- **Other Ports:** Includes AV input (RCA), LAN port for wired internet, and RF input.



Figure 5.4: TV Connectivity Ports

5.4 Display Features

Experience clear and vibrant visuals with the TV's advanced display technology:

- **Full HD (1920 x 1080) Resolution:** Provides sharp and detailed images.
- **60 Hz Refresh Rate:** Ensures smooth motion for various content.
- **A+ Grade Panel:** Offers superior picture quality and consistency.
- **HDR-10 Support:** Enhances contrast and color accuracy for a more dynamic viewing experience.
- **178-degree Viewing Angle:** Maintains picture quality from wide viewing positions.



Figure 5.5: Full High Definition Display



Figure 5.6: Full HD Visuals



Figure 5.7: HDR10 Detail Perfection

5.5 Audio Features

The TV is equipped with powerful audio capabilities for an immersive sound experience:

- **30 Watts Output:** Delivers clear and robust sound.
- **Dolby Audio System:** Provides enhanced audio quality.
- **Dolby ATMOS & DTS:** Supports advanced surround sound technologies for a cinematic experience.



Figure 5.8: 30 Watt Speaker Output

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your TV.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs. Do not spray cleaner directly onto the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Avoid using abrasive cleaners or solvents.
- **Software Updates:** Periodically check for and install software updates through the TV's settings menu to ensure optimal performance and access to new features.
- **Power Management:** Unplug the TV from the power outlet during electrical storms or if it will be left unattended for an extended period.

7. Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into both the TV and a working power outlet. Check the power indicator light.
No picture, but sound is present	Check the input source. Ensure the connected device (e.g., set-top box) is turned on and functioning correctly.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio settings and external audio connections.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and within range. Re-enter the Wi-Fi password carefully. Restart both the TV and the router.
Picture is distorted or unclear	Check the cable connections to external devices. Adjust picture settings (brightness, contrast, sharpness).

If the problem persists after trying these solutions, please contact Foxsky customer support.

8. Specifications

Detailed technical specifications for your Foxsky 40FSFHS TV:

Feature	Specification
Brand	Foxsky
Model	40FSFHS
Screen Size	40 Inches (101.6 cm)
Resolution	Full HD (1920 x 1080)
Refresh Rate	60 Hz
Display Technology	LED, A+ Grade Panel
Viewing Angle	178 Degrees
Operating System	Android 9.0 Based OS
RAM Memory	1 GB
Storage Capacity	8 GB
Sound Output	30 Watts
Audio Features	Dolby Audio System, Dolby ATMOS, DTS
Connectivity	2 x HDMI, 2 x USB, Wi-Fi, Ethernet (LAN), RCA (AV In)
Special Features	HDR-10, Wide Color Gamut, Built-in Miracast, Google Play Store
Product Dimensions (LxWxH)	19.8 x 88.9 x 52.7 cm
Item Weight	7 kg
Power Source	AC 110 Volts

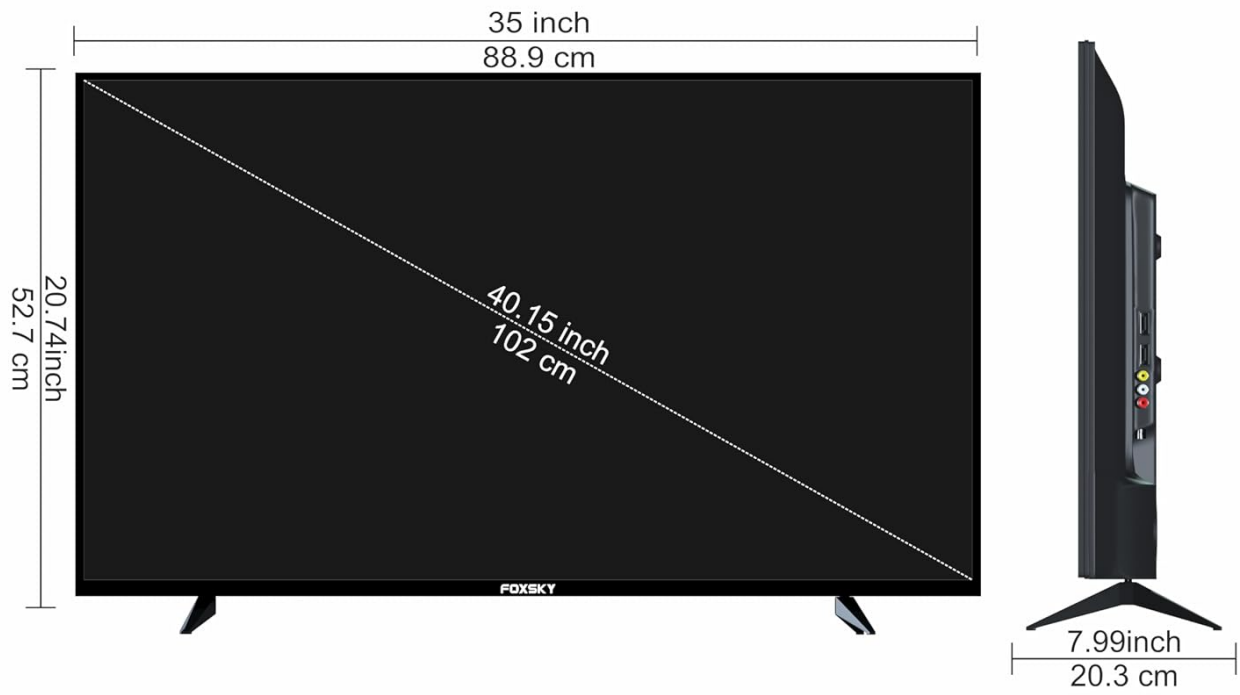


Figure 8.1: TV Dimensions

9. Warranty and Support

9.1 Warranty Information

Your Foxsky 40-inch Full HD Smart LED TV comes with a**1-year warranty** provided by the manufacturer from the date of purchase. Please retain your purchase receipt for warranty claims.

9.2 Customer Support

For any technical assistance, service requests, or warranty inquiries, please contact Foxsky customer support:

- **Toll-Free Number:** +91-7079797902
- **Email:** customercare@foxskyindia.com
- **Website:** www.foxskyindia.com

Please have your TV model number (40FSFHS) and purchase details ready when contacting support.

© 2025 Foxsky. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question