Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Foxsky 40FS-GOOGLE

Foxsky 40FS-GOOGLE 40-inch Full HD Smart LED TV User Manual

Model: 40FS-GOOGLE

1. Introduction

Thank you for choosing the Foxsky 40FS-GOOGLE 40-inch Full HD Smart LED TV. This manual provides essential information for setting up, operating, and maintaining your new television. Please read this manual thoroughly before using the TV and retain it for future reference.

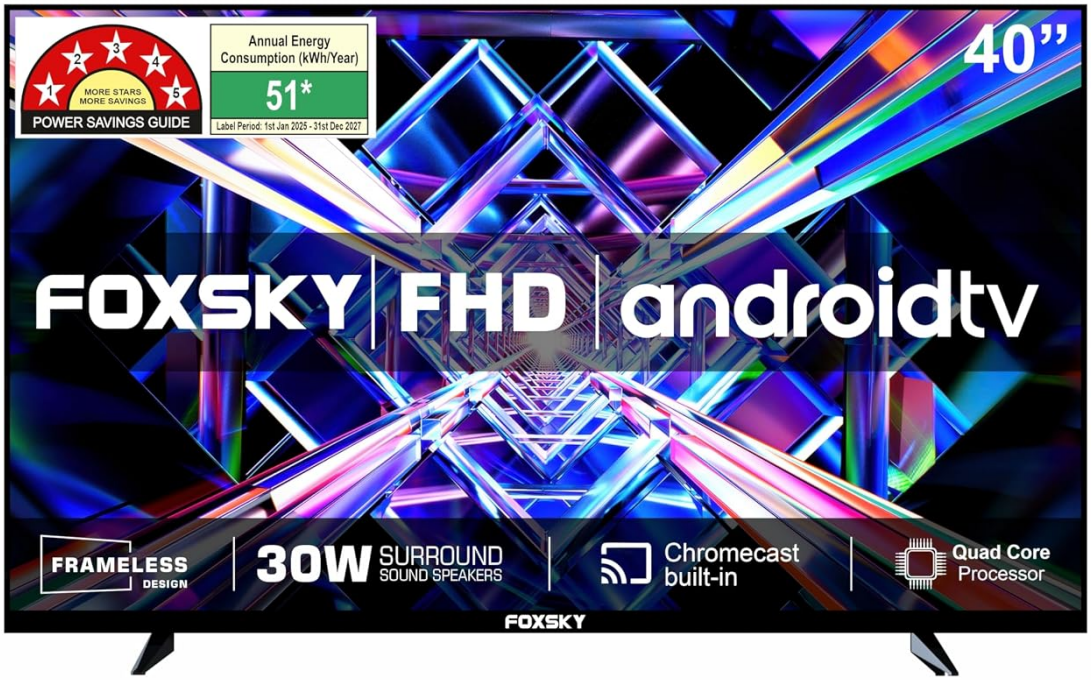


Image 1.1: Front view of the Foxsky 40-inch Full HD Smart LED TV.

2. Safety Information

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Do not open the TV casing. Refer all servicing to qualified personnel.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the TV on a stable, level surface or mount it securely to a wall.
- Keep the TV away from direct sunlight, heat sources, and excessive dust.
- Unplug the power cord during lightning storms or when unused for long periods.

3. Package Contents

Verify that all items are present in the packaging:

- 1 x Foxsky 40-inch Full HD Smart LED TV
- 1 x Table Top Stand (set)
- 1 x Wall Mount (set)
- 1 x User Manual (this document)
- 1 x Warranty Card
- 1 x Remote Control
- Batteries for Remote Control

4. Setup

4.1 Physical Installation

You can install your TV using either the included tabletop stand or a wall mount.

Tabletop Stand Installation:

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Attach the two stand bases to the bottom of the TV using the provided screws. Ensure they are securely fastened.
3. Place the TV on a stable, flat surface.

Wall Mount Installation:

If using the wall mount, follow the instructions provided with the wall mount kit. Ensure the wall can support the TV's weight (approximately 7 kg) and that the mounting is done by qualified personnel.

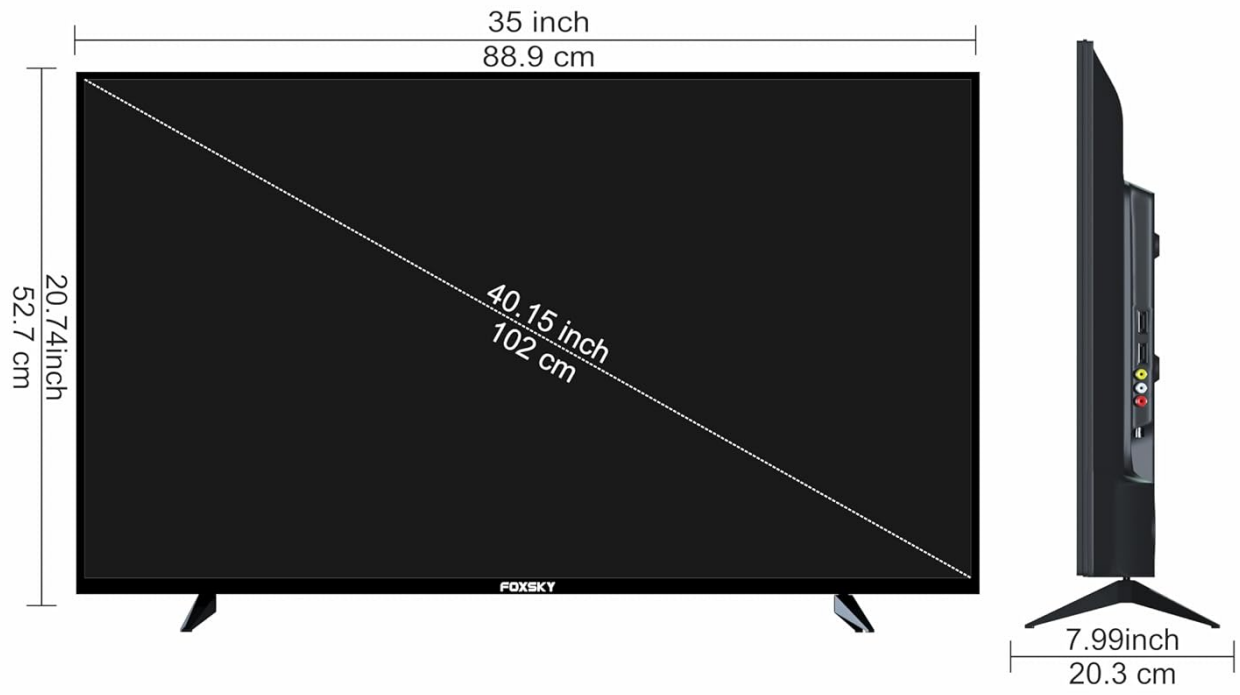


Image 4.1: TV dimensions and side profile for installation planning.



Image 4.2: Rear view of the TV, illustrating VESA mounting points for wall installation.

4.2 Connecting Power

Plug the power cord into the TV's power input, then plug the other end into a suitable AC power outlet (110 Volts).

4.3 Connecting External Devices

Your Foxsky TV offers various ports for connecting external devices:

- **HDMI Ports (x2):** For connecting set-top boxes, gaming consoles, Blu-ray players, etc.
- **USB Ports (x2):** For connecting USB storage devices (e.g., pen drives) for media playback.
- **AV Input:** For older devices using composite video and stereo audio.
- **LAN Port:** For a wired internet connection.



Image 4.3: Detailed view of the TV's connectivity ports, including HDMI, USB, AV, and LAN.

4.4 Initial Power-on and Network Connection

1. After connecting power, press the power button on the remote control or TV to turn it on.
2. Follow the on-screen instructions to complete the initial setup, including language selection and time zone.
3. Connect to your home network: Choose Wi-Fi and select your network, then enter the password. Alternatively, connect an Ethernet cable to the LAN port for a wired connection.
4. Sign in with your Google Account to access Smart TV features, download apps, and personalize your experience.

5. Operating Your TV

5.1 Remote Control Functions

The included smart remote control provides easy access to all TV functions. Insert the provided batteries before use.



Image 5.1: The Foxsky Smart TV remote control, featuring dedicated hotkeys for popular streaming services and Google Assistant.

- **Power Button:** Turns the TV on or off.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and select options.
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Source:** Selects input sources (HDMI, AV, USB).
- **Home:** Returns to the Smart TV home screen.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Dedicated Hotkeys:** Quick access to Netflix, Amazon Prime Video, Disney+Hotstar, etc.
- **Google Assistant Button:** Activates voice commands for search and control.

5.2 Smart TV Features

Your Foxsky TV runs on Android OS, providing a smart and interactive viewing experience.

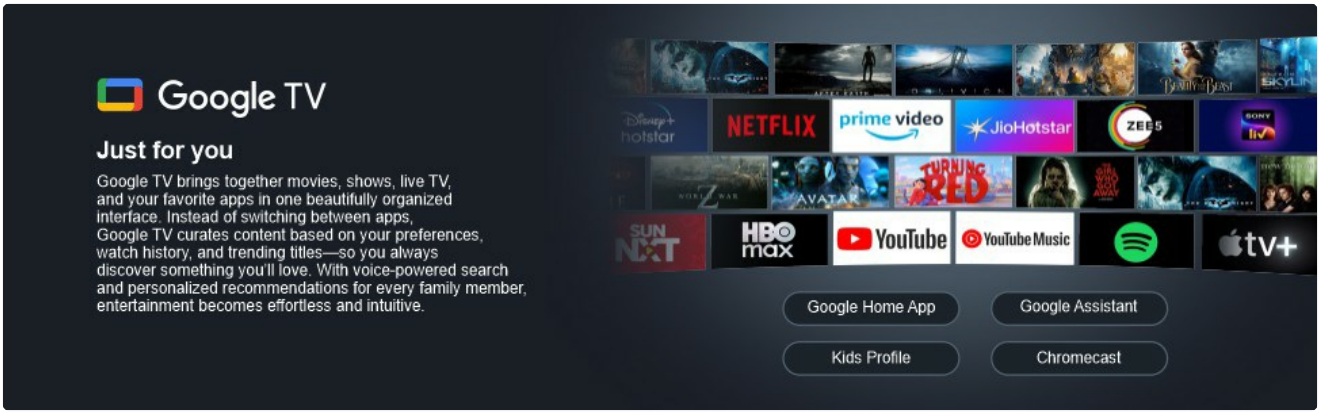


Image 5.2: The Google TV interface, showcasing a selection of available streaming applications.

- **Android OS:** Access a wide range of applications from the Google Play Store.
- **Pre-loaded Applications:** Enjoy popular streaming services like Sony Liv, Disney+Hotstar, Zee5, YouTube, Netflix, and Amazon Prime Video.
- **Google Assistant:** Use voice commands to search for content, control smart home devices, and get information.
- **Chromecast Built-in:** Cast content from your smartphone or tablet directly to the TV screen.
- **HDR-10 Support:** Experience enhanced contrast and color detail with HDR-10 content.



Image 5.3: Visual representation of improved detail and color with HDR-10 technology.

5.3 Media Playback via USB

Insert a USB storage device into one of the TV's USB ports. The TV will typically detect the device and prompt you to open a media player. You can browse and play supported media formats such as AVI, MPEG, MP3, and WMA.

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your TV.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.
- **Cleaning the Casing:** Use a soft, dry cloth to wipe the TV casing. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, contact customer support for replacement.

7. Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into both the TV and the power outlet. Ensure the outlet is working. Try pressing the power button on the TV itself.
No picture, but sound is present	Ensure the correct input source is selected. Check all cable connections (HDMI, AV). Try restarting the TV.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections. Check audio settings on the TV and external devices.
Remote control not working	Check and replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password carefully. Try restarting both the TV and the router.
Smart TV apps not loading or crashing	Check your internet connection. Clear the cache for the problematic app in the TV settings. Ensure the TV's software is up to date. Restart the TV.

If the problem persists after trying these solutions, please contact Foxsky customer support.

8. Specifications

Detailed technical specifications for the Foxsky 40FS-GOOGLE 40-inch Full HD Smart LED TV:

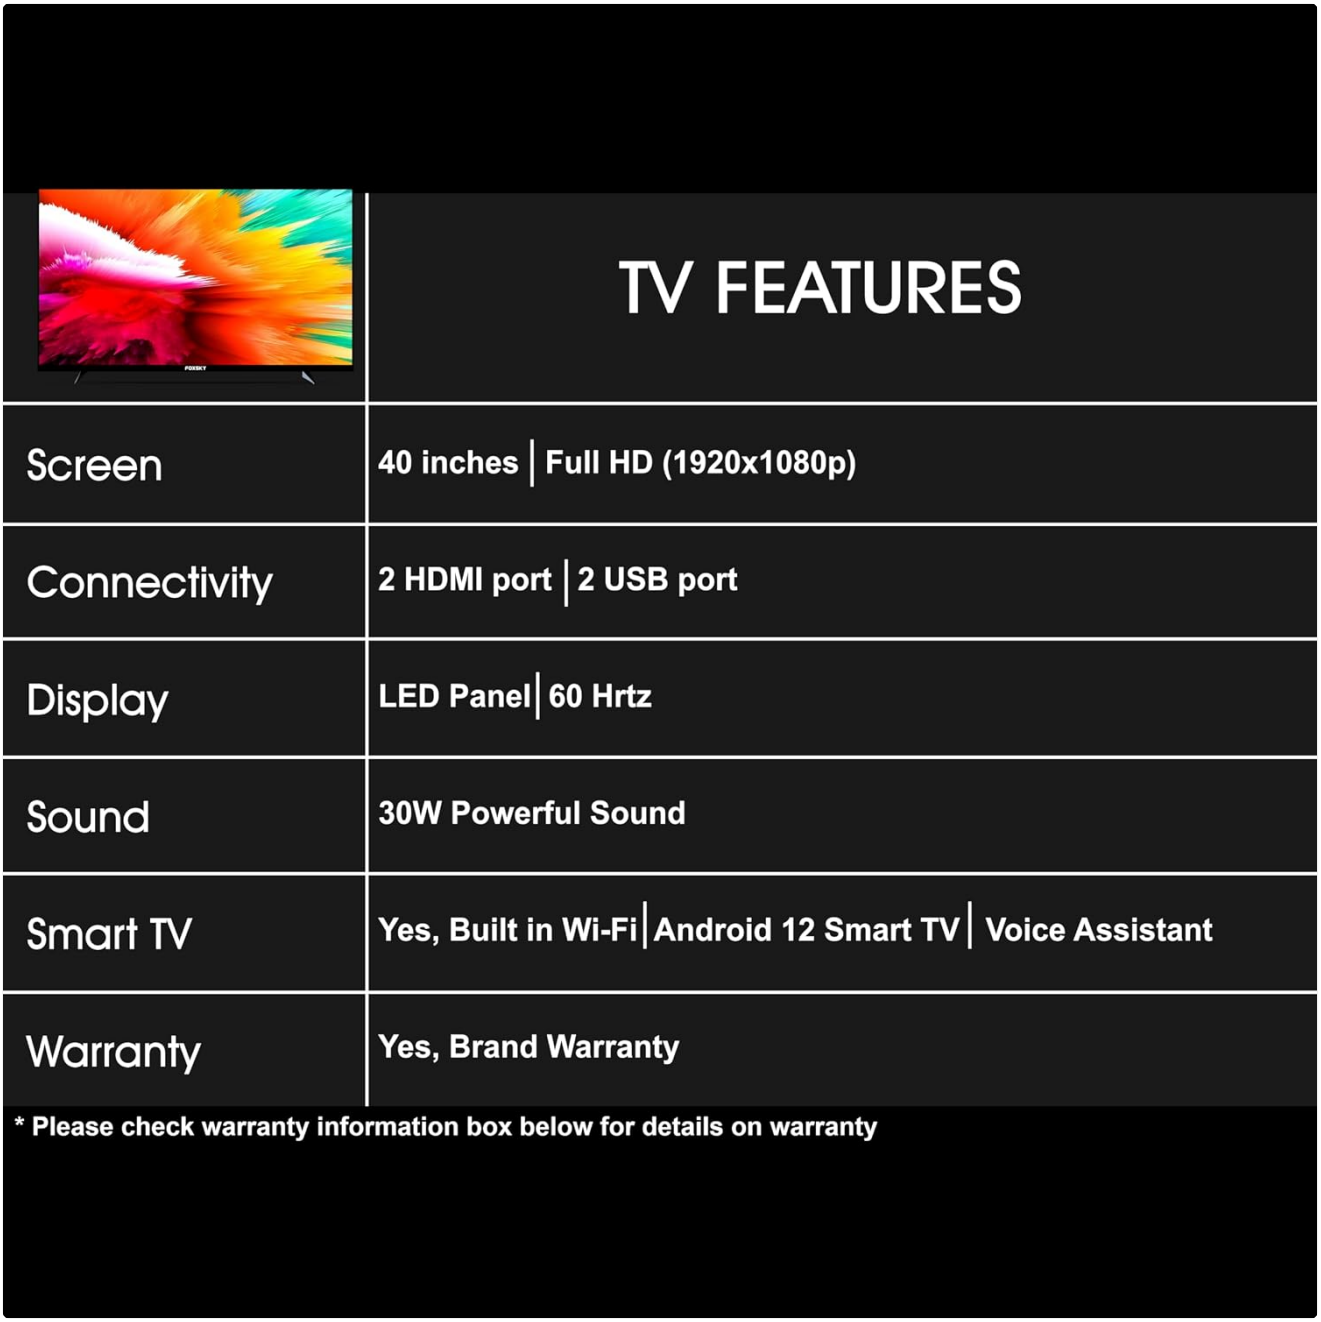


Image 8.1: Overview of key TV features including screen size, connectivity, display, sound, and smart TV capabilities.

Feature	Detail
Brand	Foxsky
Model	40FS-GOOGLE
Screen Size	40 Inches (101.6 cm)
Display Technology	LED, A+ Display Type
Resolution	Full HD (1920 x 1080 Pixels)
Refresh Rate	60 Hz
Operating System	Android
Memory Storage Capacity	8 GB
RAM Memory Installed Size	1 GB

Feature	Detail
Graphics Coprocessor	Multicore Processor
Response Time	10 Milliseconds
Viewing Angle	178 Degrees
Image Contrast Ratio	4000:1
Audio Output Power	30 Watts (DTS Surround Sound)
Connectivity	HDMI (x2), USB (x2), LAN, AV (RCA)
Wireless Connectivity	Wi-Fi, Chromecast Built-in (Bluetooth not supported)
Special Features	Remote, Android OS, HDR-10, Wide Color Gamut, Google Assistant, Pre-loaded Apps
Product Dimensions (LxWxH)	19.8 x 88.9 x 52.7 cm
Item Weight	7 kg
Power Source	AC (110 Volts)

9. Warranty and Support

9.1 Warranty Information

Your Foxsky 40FS-GOOGLE TV comes with a 1-year brand warranty. The warranty can be availed using the invoice. Please refer to the included Warranty Card for detailed terms and conditions.

9.2 Customer Support

For any technical assistance, service requests, or warranty claims, please contact Foxsky customer care:

- **Toll Free No.:** +91-7079797902
- **Email:** customercare@foxskyindia.com
- **Website:** www.foxskyindia.com

Please have your TV model number (40FS-GOOGLE) and purchase invoice ready when contacting support.

© 2025 Foxsky. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08QX17ZJ3

More documents and user manuals: **https://manuals.plus/**