Bellemave bed-frames

Bellemave Twin Over Twin/King Bunk Bed with Trundle Instruction Manual

1. Introduction

Thank you for choosing the Bellemave Twin Over Twin/King Bunk Bed with Trundle. This versatile bed frame is designed to maximize space and comfortably accommodate up to four people. It features a twin-size upper bunk, an extendable lower bunk that can convert from twin to king size, and a pull-out trundle bed. This manual provides essential information for safe assembly, operation, and maintenance of your new bunk bed.

Please read these instructions carefully before assembly and retain them for future reference.

2. Important Safety Information

- Exercise caution around sharp edges during unpacking and assembly.
- Always assemble the bunk bed strictly according to the provided instructions to ensure structural stability and safety.
- Do not exceed the maximum weight capacity:**200 lbs** for the upper bunk, **200 lbs** for the lower bunk (twin configuration), **400 lbs** for the lower bunk (king configuration), and **200 lbs** for the trundle bed.
- Keep the area around the bunk bed clear of obstructions to prevent falls and injuries.
- Ensure all connections are securely tightened before use and periodically check for loose hardware.
- The upper bunk is equipped with a full-length guardrail for safety. The lower bunk includes both a headboard and footboard.
- Only use mattresses that comply with the recommended dimensions for each bed section.

3. Package Contents

Before beginning assembly, please verify that all components and hardware are present and undamaged. Refer to the parts list provided in the assembly instructions (Image 14) for a detailed inventory.

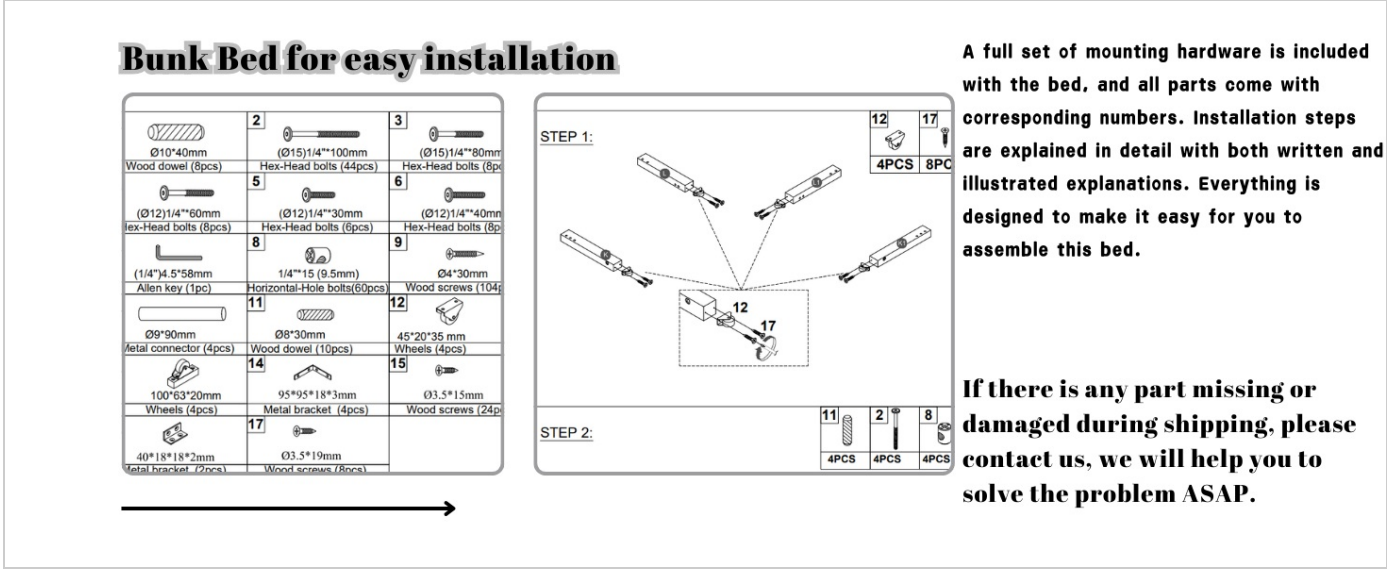


Image 14: Detailed diagram showing all parts and hardware included for the Bellemave bunk bed assembly, labeled with numbers and quantities. This image illustrates the components required for installation.

If any parts are missing or damaged, please contact Bellemave customer support immediately for assistance. Do not proceed with assembly if parts are missing or damaged.

4. Setup and Assembly Instructions

Assembly of the Bellemave bunk bed is designed to be straightforward. We recommend two adults for efficient and safe assembly. Follow the step-by-step instructions provided with your product packaging. All necessary mounting hardware is included, and parts are numbered for easy identification.

- **Tools Required:** An Allen key is typically included. Additional tools like a screwdriver may be helpful.
- **Assembly Area:** Choose a spacious, clear area for assembly to avoid damage to the product or your flooring.
- **Ladder Placement:** The ladder can be installed on either the left or right side of the bed, depending on your room layout and preference.
- **No Box Spring Needed:** The bed features 14 sturdy wood slats that provide ample mattress support, eliminating the need for a box spring.

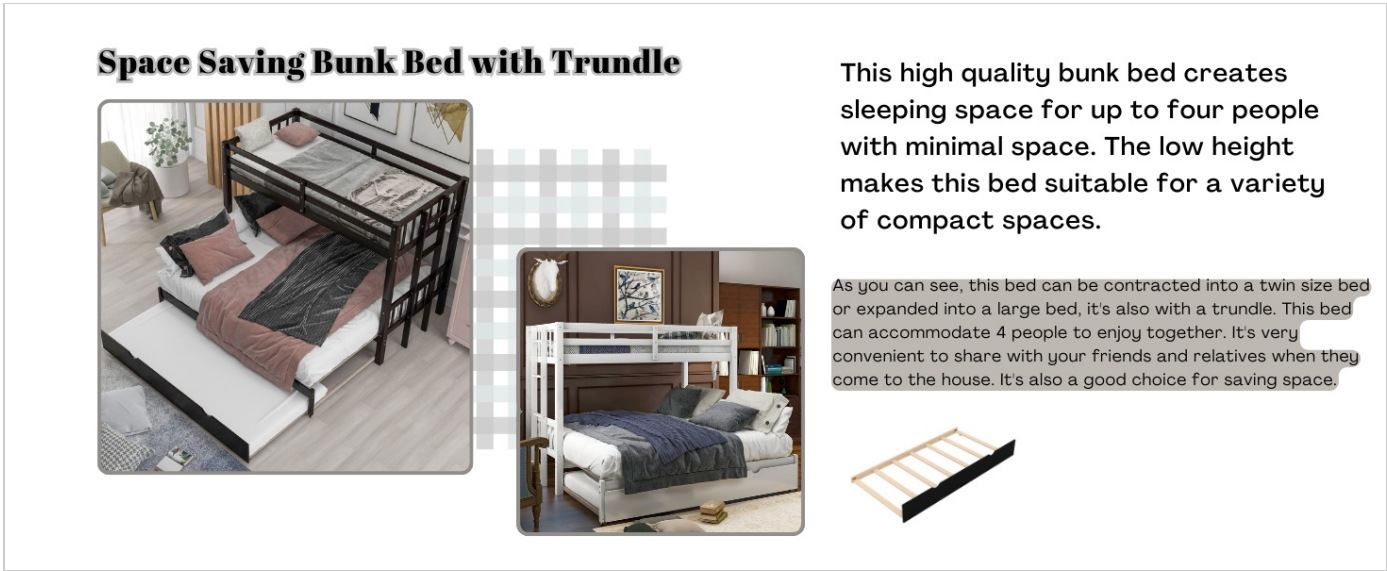


Image 15: This image illustrates the multi-functional design of the bunk bed, showing the upper bunk, lower bunk, and trundle. It also highlights the flexibility of ladder placement on either side.



Image 16: A close-up view demonstrating the full-length security fence on the upper bunk and the sturdy wood slats that support the mattress without needing a box spring.

5. Operating Instructions

This bunk bed offers flexible sleeping arrangements:

- **Trundle Bed:** The under-bed trundle glides smoothly on castor wheels, allowing for easy pull-out and storage. Simply pull the trundle frame out from under the lower bunk when an additional sleeping space is needed, and push it back in when not in use to save space.
- **Extendable Lower Bunk:** The lower bunk can be extended to convert from a twin size to a king size, providing ample space for two adults or more sleeping capacity. This feature allows the bed to accommodate up to four people comfortably.



Image 17: A visual representation of the bunk bed's versatility, showcasing its ability to function as a twin over twin/king bed with a pull-out trundle, ideal for maximizing sleeping space.

6. Maintenance

- **Cleaning:** Wipe the bed frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Hardware Check:** Periodically inspect all bolts, screws, and connections to ensure they remain tight. Re-tighten any loose hardware to maintain the bed's stability and safety.
- **Wood Care:** Protect the wood finish from direct sunlight and extreme temperature changes to prevent warping or fading.

7. Troubleshooting

- **Squeaking Noises:** If the bed develops squeaking noises, check all hardware connections and tighten any that are loose. Ensure the bed is on a level surface.
- **Difficulty with Trundle Movement:** Check the castor wheels for any obstructions or debris. Ensure the trundle track is clear.
- **Wobbling:** A wobbling bed often indicates loose connections. Re-check and tighten all bolts and screws. Ensure the bed is assembled correctly according to the instructions.

For issues not covered here, please contact Bellemave customer support.

8. Specifications

Feature	Detail
Brand	Bellemave
Model Number	bed-frames
Product Dimensions	79.5"L x 77.5"W x 59.8"H
Size	Twin Over Twin (extendable to Twin Over King)
Color	White

Material	Pine Wood, Engineered Wood
Assembly Required	Yes
Compatible Mattress Size	Twin, King
Weight Capacity (Upper Bunk)	200 lbs
Weight Capacity (Lower Bunk)	200 lbs (Twin) / 400 lbs (King)
Weight Capacity (Trundle)	200 lbs



Image 18: A detailed diagram illustrating the overall dimensions of the bunk bed in inches, providing measurements for length, width, and height.

9. Warranty and Support

For warranty information, product support, or to report missing/damaged parts, please contact Bellemave customer service. Refer to your purchase documentation for specific contact details or visit the official Bellemave website.