Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZOOZEE Z50

ZOOZEE Z50 Robot Vacuum Cleaner User Manual

Model: Z50

1. Introduction

Thank you for choosing the ZOOZEE Z50 Robot Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. The Z50 is designed to provide efficient 2-in-1 vacuuming and mopping for various floor types, featuring intelligent navigation and smart control options.



Image 1.1: ZOOZEE Z50 Robot Vacuum Cleaner and its companion app.

2. Product Overview

2.1 Package Contents

- ZOOZEE Z50 Robot Vacuum Cleaner
- Charging Base
- Power Adapter
- Dust Container (600ml)
- Water Tank (400ml)
- Side Brushes (2 pairs, including spares)
- HEPA Filter (2, including spare)
- Cleaning Tool
- User Manual

2.2 Key Features

- **2-in-1 Vacuuming & Mopping:** Simultaneous cleaning with separate dust and water tanks.
- **Powerful Suction:** Up to 3000Pa suction power, automatically adjusting for carpets.
- **Long Battery Life:** 5200mAh LG battery provides up to 290 minutes of cleaning.
- **Automatic Recharge:** Returns to the charging base when battery is low or cleaning is complete.
- **Smart Navigation:** Equipped with 26 sets of advanced sensors for obstacle avoidance and cliff detection.
- **App & Voice Control:** Compatible with a smart robot app, Amazon Alexa, and Google Assistant.
- **HEPA Filtration:** Captures fine dust and allergens for a healthier home environment.



Image 2.1: The ZOOZEE Z50's 2-in-1 design with separate dust and water containers.

3. Setup

3.1 Unpacking and Initial Charging

1. Remove all packaging materials and protective films from the robot and charging base.
2. Attach the side brushes by pressing them onto the designated posts until they click into place. Ensure they are

correctly matched (L for left, R for right).

3. Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters of clear space on either side and 1.5 meters in front of the base.
4. Connect the power adapter to the charging base and plug it into a power outlet.
5. Place the robot onto the charging base. The indicator light on the robot will illuminate to show it is charging. Fully charge the robot before first use (approximately 4-6 hours).



Image 3.1: The ZOOZEE Z50 automatically recharges at its charging base.

3.2 App Connection and Voice Control

1. Download the ZOOZEE smart robot app from your smartphone's app store.
2. Follow the in-app instructions to connect your Z50 robot vacuum cleaner to your home Wi-Fi network.
3. Once connected, you can control the robot, schedule cleanings, and monitor its status from your smartphone.
4. For voice control, enable the ZOOZEE skill/action in your Amazon Alexa or Google Assistant app and link your ZOOZEE account.

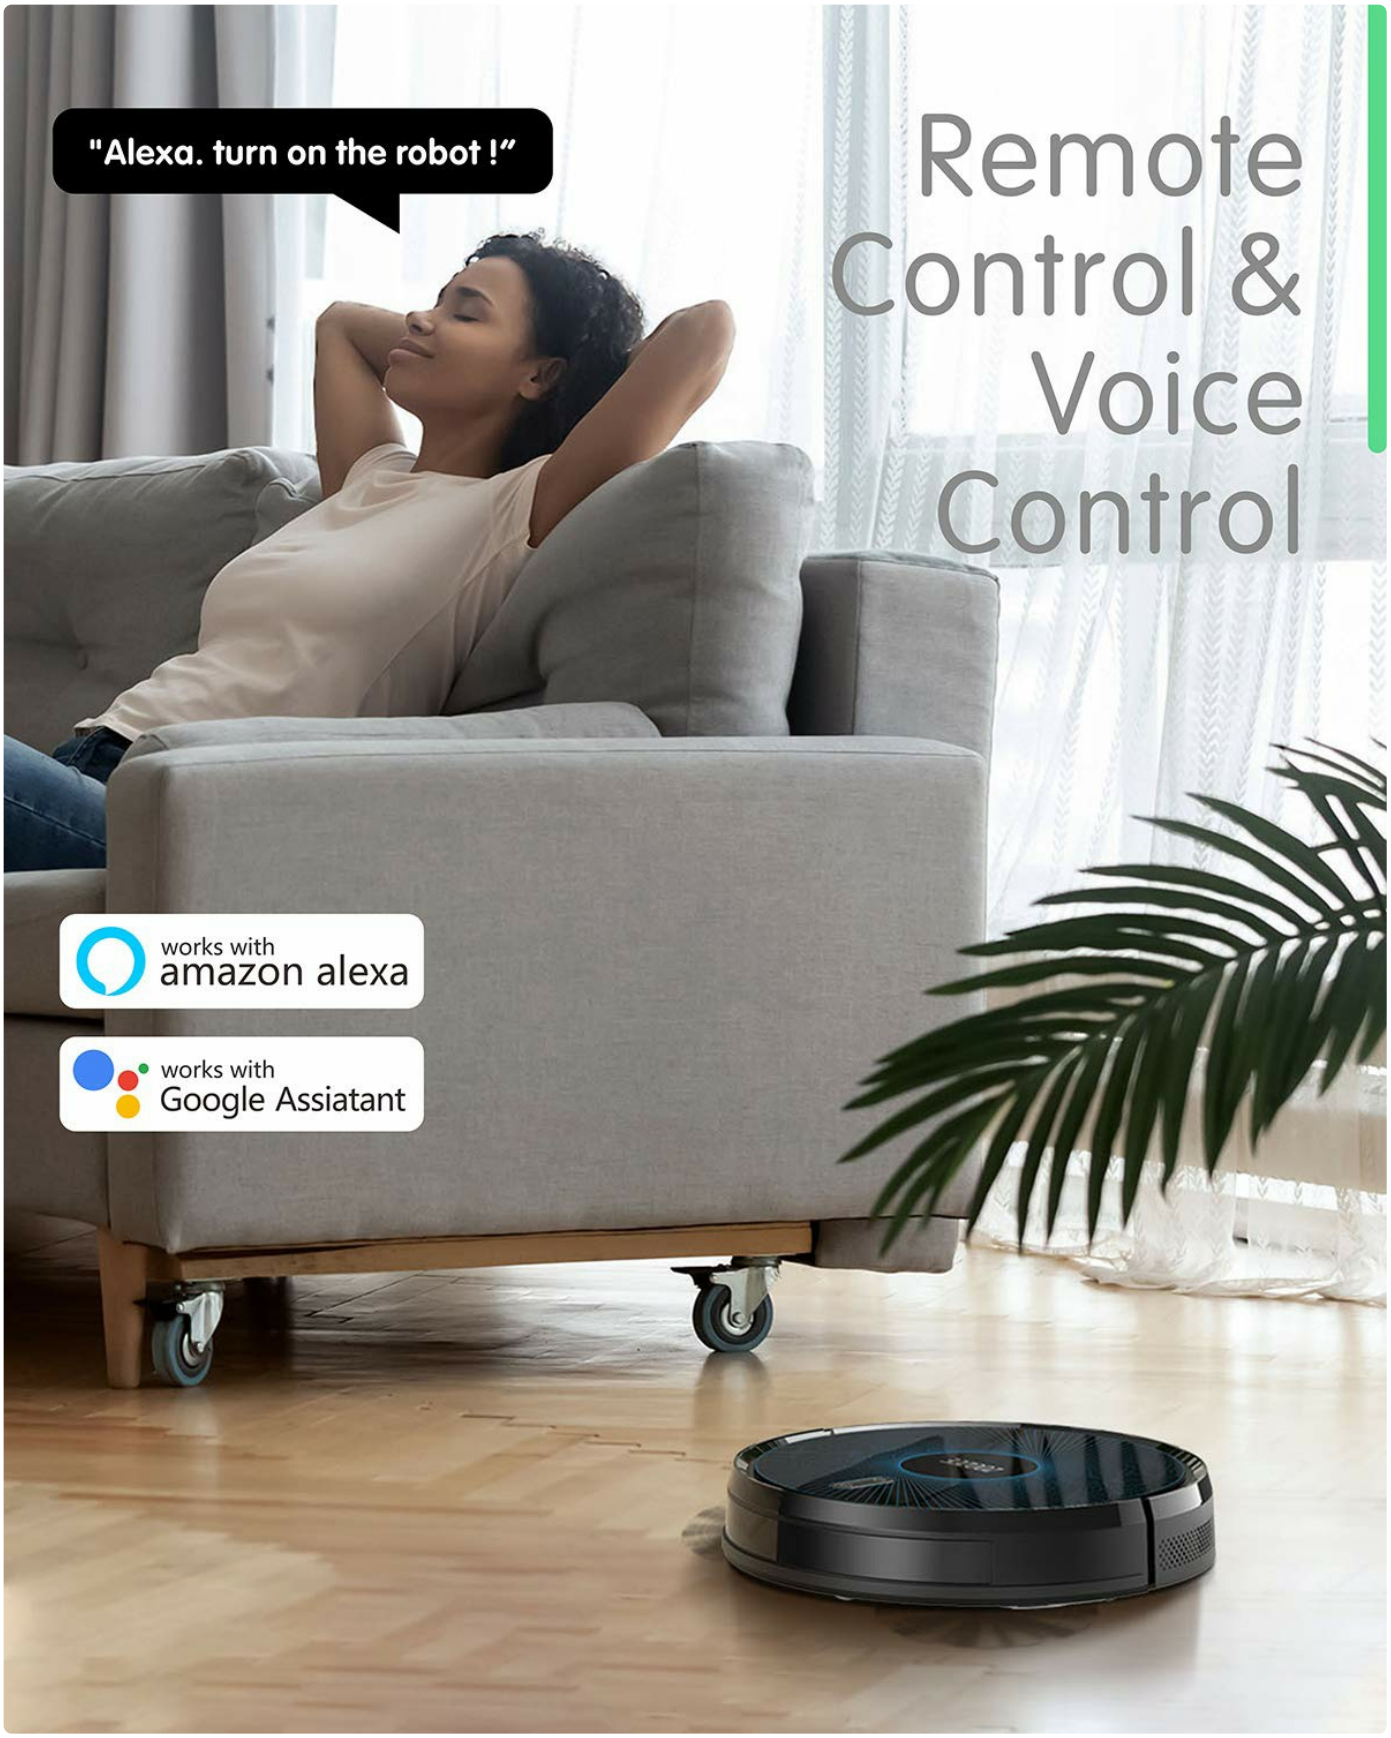


Image 3.2: The ZOOZEE Z50 supports remote and voice control via Alexa and Google Assistant.

4. Operating Instructions

4.1 Starting and Stopping Cleaning

- **Start Cleaning:** Press the power button on the robot, use the app, or issue a voice command.
- **Pause Cleaning:** Press the power button again or use the app/voice command.
- **Return to Charging Base:** Press the home button on the robot or use the app/voice command.

4.2 Cleaning Modes

The Z50 offers several cleaning modes to suit different needs, accessible via the app or remote control:

- **Auto Mode:** The robot intelligently navigates and cleans the entire accessible area.
- **Bow Clean:** Cleans in a systematic back-and-forth pattern.
- **Edge Clean:** Cleans along walls and furniture edges.
- **Area Clean:** Cleans a specific user-defined area.
- **Local Clean:** Focuses on a small, concentrated area for intensive cleaning.
- **Appointment:** Schedule cleaning times in advance.

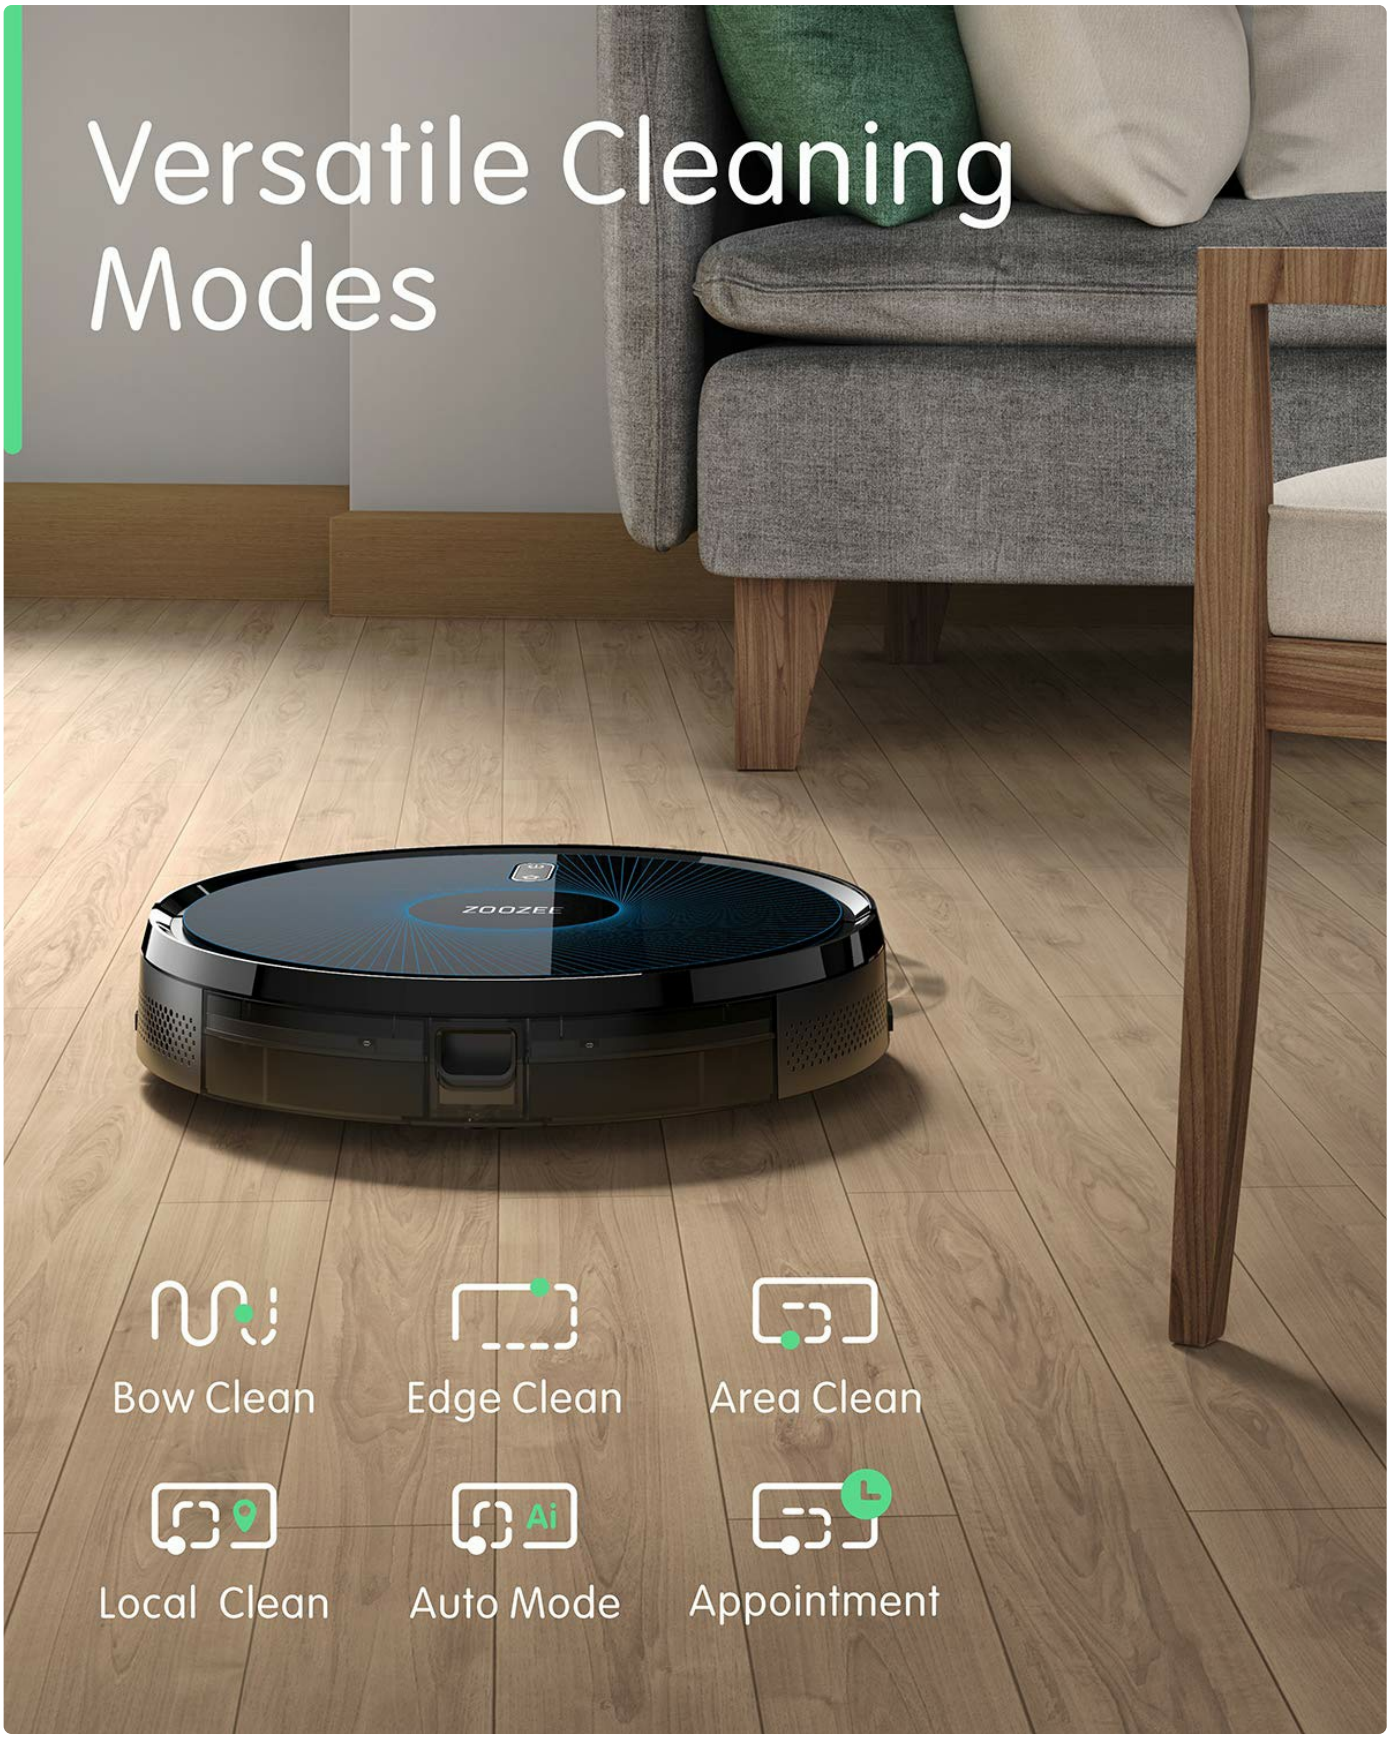


Image 4.1: The ZOOZEE Z50 offers versatile cleaning modes for different needs.

4.3 Vacuuming Function

- Ensure the dust container is properly installed.
- The robot will automatically adjust suction power based on the floor type. For example, it will increase suction to 3000Pa on carpets from 2200Pa on hard floors.



Image 4.2: The ZOOZEE Z50 intelligently increases suction on carpets.

4.4 Mopping Function

1. Remove the dust container and fill the water tank with clean water. Do not use cleaning solutions that may clog the water outlet.
2. Attach the mopping pad to the water tank.
3. Insert the filled water tank assembly back into the robot.

4. Select the mopping mode or a combined vacuuming and mopping mode via the app.
5. Adjust the water volume (three levels available) through the app to suit your floor type and cleaning preference.

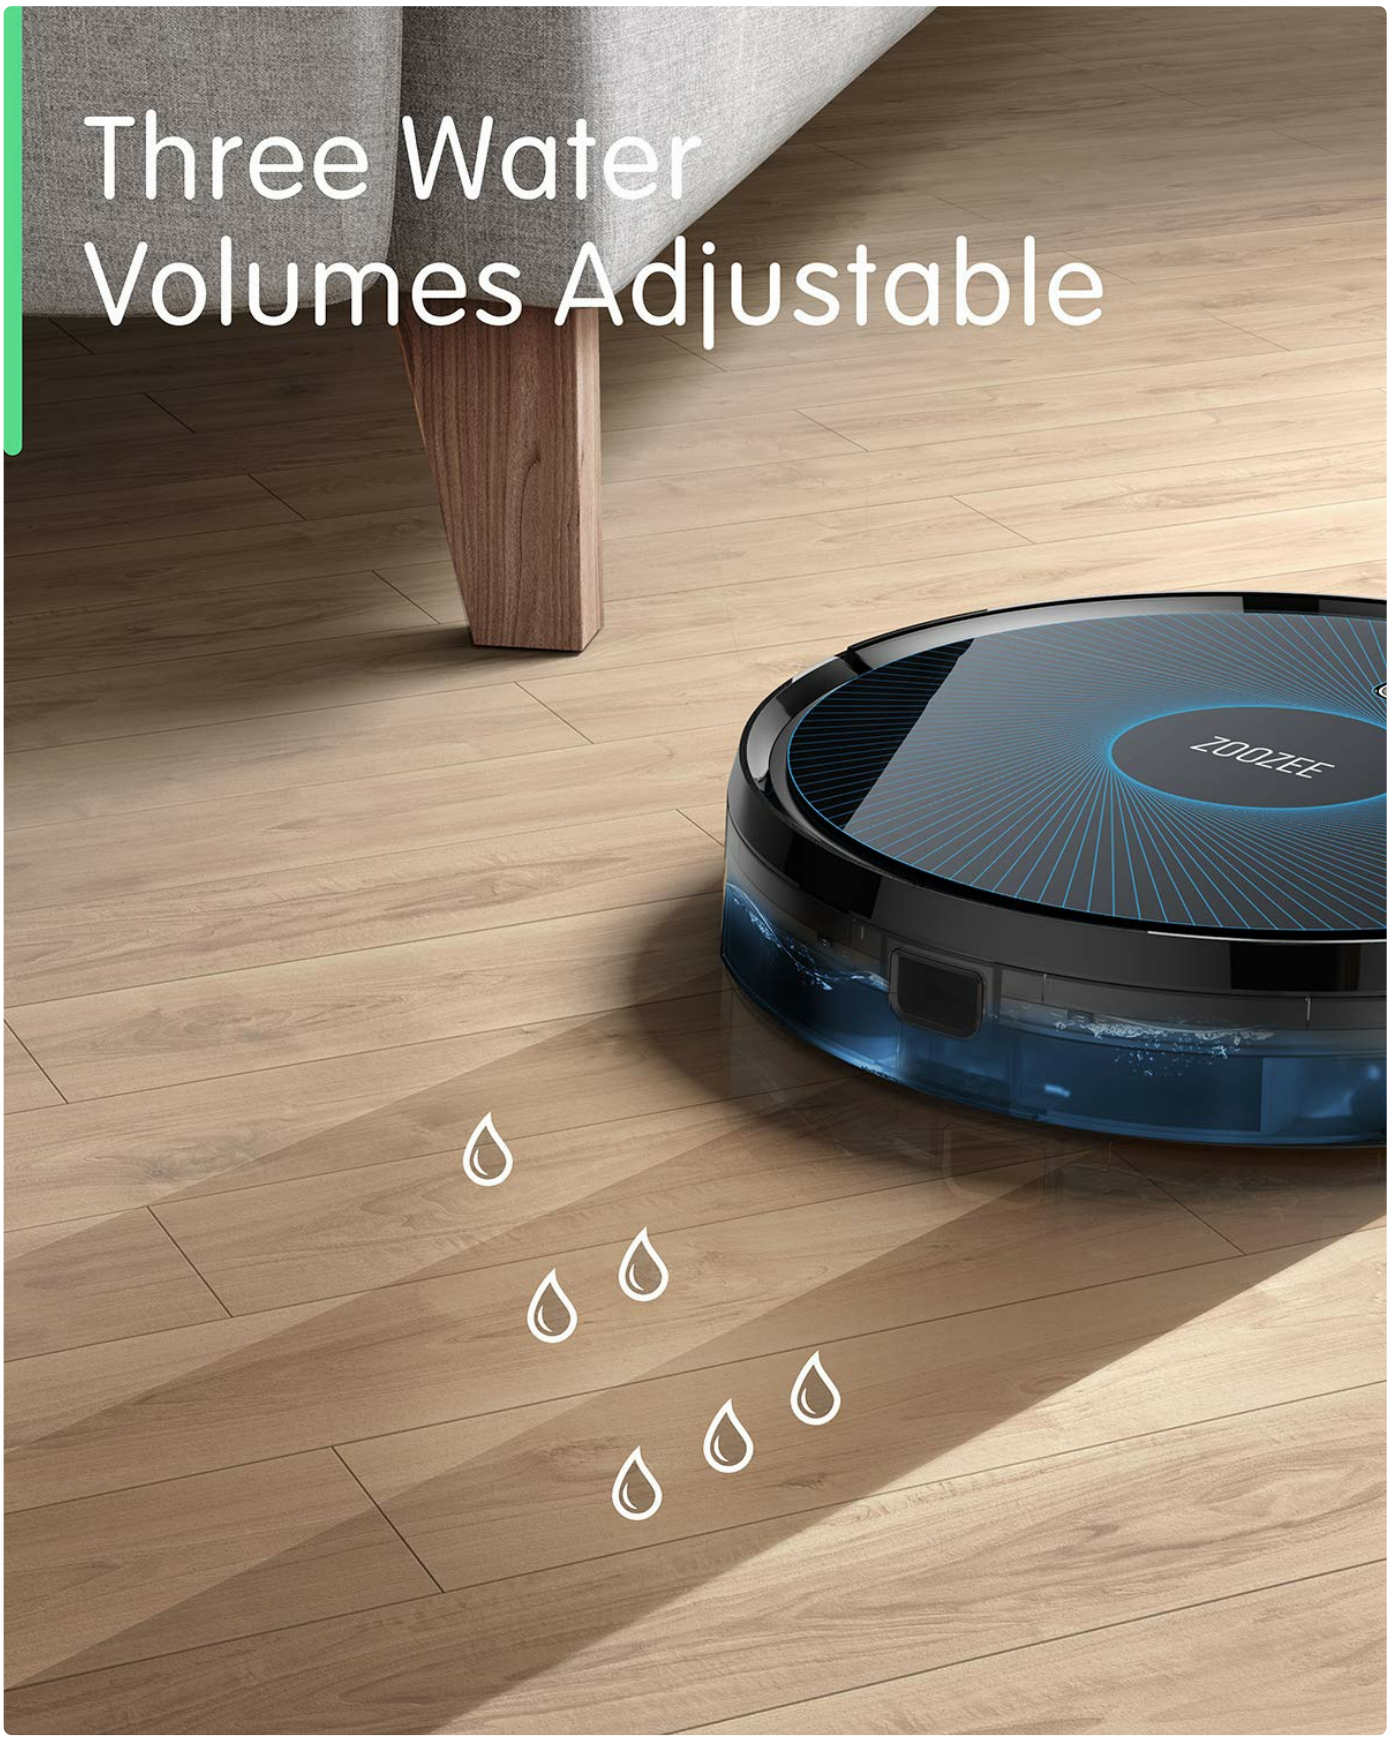


Image 4.3: The ZOOZEE Z50 allows for three adjustable water volumes during mopping.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your ZOOZEE Z50.

5.1 Emptying the Dust Container

- Press the release button to remove the dust container.
- Open the dust container lid and empty its contents into a trash bin.
- Clean the internal filter screen and the HEPA filter.

5.2 Cleaning the HEPA Filter

- Tap the HEPA filter gently to remove dust. Do not wash the HEPA filter with water, as this can damage it.
- Replace the HEPA filter every 3-6 months, or as needed, to maintain suction performance.

5.3 Cleaning Brushes

- **Main Brush:** Remove the main brush cover and lift out the main brush. Use the cleaning tool to remove hair and debris tangled around the brush.
- **Side Brushes:** Pull the side brushes upwards to remove them. Clean any hair or debris. If brushes are worn, replace them with new ones.

5.4 Cleaning the Water Tank and Mopping Pad

- After mopping, remove the water tank and empty any remaining water.
- Rinse the water tank thoroughly with clean water.
- Remove the mopping pad and wash it by hand or machine. Allow it to air dry completely before reattaching.

5.5 Cleaning Sensors

- Wipe the cliff sensors, wall sensors, and charging contacts on the robot and charging base with a clean, dry cloth.

6. Troubleshooting

If your ZOOZEE Z50 encounters an issue, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on	Low battery; Power button not pressed	Charge the robot; Press and hold the power button
Robot does not charge	Charging contacts dirty; Charging base not powered	Clean charging contacts; Ensure power adapter is connected
Robot gets stuck frequently	Obstacles; Uneven surfaces	Clear cables and small objects; Use magnetic boundary strips for restricted areas
Poor cleaning performance	Dustbin full; Brushes tangled; Filter clogged	Empty dustbin; Clean main/side brushes; Clean/replace HEPA filter
Mopping function not working	Water tank empty; Water outlet clogged; Mopping pad dirty	Fill water tank; Clean water outlet; Wash mopping pad

7. Specifications

Feature	Specification
Brand	ZOOZEE
Model Name	Z50
Product Dimensions	35L x 35W x 8H Centimeters
Item Weight	2 kg 950 g
Battery Life	Up to 290 Minutes
Battery Type	5200mAh LG Lithium-ion
Suction Power	3000Pa (Max)
Dust Container Capacity	0.6 Litres
Water Tank Capacity	0.4 Litres
Filter Type	HEPA
Control Method	App, Voice (Alexa, Google Assistant)
Compatible Devices	Alexa, Google Assistant

8. Warranty and Support

For warranty information, please refer to the documentation provided at the time of purchase. The manufacturer provides a 2-year EU spare part availability duration for this product.
If you encounter any issues not covered in this manual or require further assistance, please contact ZOOZEE customer support through the official website or your retailer.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08RP4PCXP

More documents and user manuals: **https://manuals.plus/**