Promate EVOKE.UK-BK

Promate Evoke Digital Alarm Clock User Manual

Model: EVOKE.UK-BK

Brand: Promate

1. PRODUCT OVERVIEW

The Promate Evoke is a versatile digital alarm clock designed to enhance your daily routine with multiple functionalities. It integrates a powerful 10W speaker, FM radio, Bluetooth connectivity, and a 10W Qi wireless charging pad, alongside a USB charging port. The device also features a white noise function for relaxation and an integrated microphone for hands-free calls. Control is made easy with a smart mobile application.

Figure 1.1: Front view of the Promate Evoke Digital Alarm Clock, displaying the time and the fabric speaker grille.

Key Features:

- Multifunction smart alarm clock with 10W Qi wireless charger and USB port.
- Powerful 10W speaker and Bluetooth pairing for PCs, tablets, and mobile phones.
- Easy-to-tune FM radio.

- Alarm with flashing tone, snooze function, and white noise for relaxation.

- Integrated microphone for hands-free calls.

- Smart control app for programming and controlling the alarm from your mobile device.

2. SETUP GUIDE

2.1 Power Connection

To power on the Promate Evoke, connect the provided power cable to the DC input port on the back of the unit and plug the other end into a standard wall outlet. The device will automatically power on and the LED display will illuminate.

2.2 Initial Time Setting

Upon first power-up or after a power outage, you may need to set the correct time. Refer to the device's physical buttons for time adjustment, typically involving a 'Time Set' or 'Clock' button followed by arrow keys to adjust hours and minutes. Confirm your selection to save the time.

2.3 Smart Control App Installation

For enhanced control and customization, download the 'Promate Evoke' smart control application on your mobile device. The app is available on both the App Store (for iOS devices) and Google Play (for Android devices).

Figure 2.1: The Promate Evoke Smart Control App provides easy navigation and control from your smartphone. Download from App Store or Google Play.

Once installed, open the app and follow the on-screen instructions to pair it with your Promate Evoke device via Bluetooth.

3. OPERATING INSTRUCTIONS

3.1 Alarm Functions

- **Setting an Alarm:** Press the 'Alarm' button, then use the navigation buttons to set the desired alarm time. Confirm to save. Multiple alarms may be set via the smart control app.
- **Snooze Function:** When the alarm sounds, press the 'Snooze' button (often a large button on top) to temporarily silence the alarm for a set period (e.g., 9 minutes).
- **Turning Off Alarm:** To turn off the alarm completely, press the 'Alarm' button again or use the dedicated 'Alarm Off' button if available. Alarms can also be managed through the app.

3.2 FM Radio Operation

Press the 'FM' or 'Mode' button to switch to FM radio mode. Use the tuning buttons (often +/- or arrow keys) to scan for available radio stations. Some models may have an auto-scan feature to save stations as presets.

3.3 Bluetooth Pairing

To pair your mobile device with the Promate Evoke via Bluetooth:

1. Press the 'Bluetooth' or 'Mode' button on the Evoke until 'BT' or 'Bluetooth' appears on the display, indicating pairing mode.
2. On your mobile device, go to Bluetooth settings and search for available devices.
3. Select 'Promate Evoke' from the list. Once connected, a confirmation sound or message will indicate successful pairing.

Figure 3.1: The Promate Evoke features a powerful 10W speaker for clear audio playback from Bluetooth devices or FM radio.

3.4 Wireless (Qi) Charging

The Promate Evoke features a 10W Qi wireless charging pad on its top surface. To charge a compatible device, simply

place it centrally on the charging pad. Ensure the device is properly aligned for optimal charging. A charging indicator (e.g., an LED light) on the Evoke may illuminate to confirm charging is active.

Figure 3.2: Place your Qi-enabled device on the non-slip charging surface for 10W wireless charging.

3.5 USB Charging Port

A USB charging port is located on the back of the unit. Connect your device's USB charging cable to this port to charge devices that do not support Qi wireless charging or for simultaneous charging.

3.6 White Noise Function

The Promate Evoke includes a white noise function designed to aid relaxation and sleep by mimicking natural environments. Activate this feature by pressing the dedicated 'White Noise' button or selecting it via the smart control app. You may be able to cycle through different white noise sounds.

3.7 Hands-Free Calling

When your mobile device is connected via Bluetooth, the integrated microphone allows you to answer and make calls

directly through the Promate Evoke. Press the 'Call' or 'Play/Pause' button to answer or end a call. Adjust volume using the volume controls on the unit or your phone.

4. MAINTENANCE

4.1 Cleaning

To clean the Promate Evoke, ensure the device is unplugged from the power source. Use a soft, dry, lint-free cloth to wipe down the exterior surfaces. For stubborn marks, a slightly damp cloth may be used, but avoid excessive moisture. Do not use abrasive cleaners, solvents, or aerosol sprays, as these can damage the finish or internal components.

4.2 Storage

When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to keep the original packaging for storage and transport.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Power cable not connected or power outlet is faulty.	Ensure the power cable is securely connected to both the device and a working power outlet. Try a different outlet.
Bluetooth connection issues / No audio from Bluetooth.	Device not in pairing mode; mobile device Bluetooth off; incorrect pairing; audio output not selected.	- Ensure the Evoke is in Bluetooth pairing mode. - Turn off and on Bluetooth on your mobile device. - Forget 'Promate Evoke' from your mobile device's Bluetooth list and re-pair. - Ensure your mobile device's audio output is set to 'Promate Evoke' after connecting. - Check volume levels on both the Evoke and your mobile device.
Wireless charging not working.	Device not Qi-compatible; device not aligned correctly; foreign objects on charging pad; thick phone case.	- Verify your device supports Qi wireless charging. - Reposition your device centrally on the charging pad. - Remove any foreign objects (e.g., metal, cards) from the charging pad. - Remove thick phone cases that might interfere with charging.

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm not set; alarm volume too low; alarm turned off.	• Ensure the alarm is correctly set and activated. • Increase the alarm volume. • Check the alarm status in the smart control app.
Poor FM radio reception.	Weak signal; interference.	• Adjust the position of the device to improve reception. • Extend any built-in antenna if present. • Move away from other electronic devices that may cause interference.

6. SPECIFICATIONS

Feature	Detail
Brand	Promate
Model Number	EVOKE.UK-BK
Color	Black
Display Type	LED
Connections	USB, Bluetooth
Special Features	Radio, Wireless Speaker, Alarm Clock, White Noise Function, Hands-Free Calling
Total USB Ports	1
Speaker Resistance	4 ohms
Power Source	Electric Cable
Battery Composition	Lithium-ion (1 included)
Rechargeable Battery	Yes
Compatible Devices	Smartphones (iPhone 12, 12 Pro, 12 Pro Max, XR, XS Max, XS, X, 8, 8 Plus, Samsung Galaxy S20, S10, S9, Note 20, Note 10), iPads, AirPods with wireless charging case, and other Bluetooth/Qi-enabled devices.
Manufacturer	Promate Technologies Ltd.

7. WARRANTY AND SUPPORT

7.1 Product Warranty

Warranty information for the Promate Evoke Digital Alarm Clock is typically provided with your purchase documentation. Please refer to the warranty card or leaflet included in the product packaging for details regarding warranty period, coverage, and terms and conditions. Keep your proof of purchase for warranty claims.
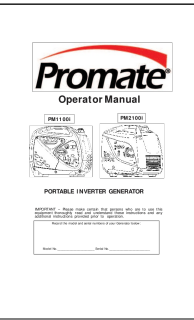
7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact Promate customer support. Visit the official Promate website for the most up-to-date contact information, including email, phone numbers, or online support portals. When contacting support, please have your product model number (EVOKE.UK-BK) and purchase details ready.

Related Documents - EVOKE.UK-BK

	Promate Generator Operator Manual: Safety, Operation, and Maintenance Comprehensive operator manual for Promate generators, covering safety rules, preparation, operation, maintenance, storage, and warranty information. Learn how to safely start, use, and maintain your Promate generator.
	Promate PM12500ES Portable Gasoline Generator Operator Manual Comprehensive operator manual for the Promate PM12500ES portable gasoline generator, covering safety precautions, operation, maintenance, specifications, and service information.
	Promate PM1100i & PM2100i Portable Inverter Generator Operator Manual Comprehensive operator manual for Promate PM1100i and PM2100i portable inverter generators, covering safety, operation, maintenance, specifications, and troubleshooting.

Nova Bluetooth Headset User Guide | Promate

Comprehensive user guide for the Nova Bluetooth headset by Promate, covering features, specifications, operation instructions, and safety precautions.

Promate SnapShot Extendable Monopod Kit with Bluetooth Shutter - User Guide

User guide for the Promate SnapShot, an extendable monopod kit with built-in Bluetooth shutter for iOS and Android devices. Learn about its features, specifications, operation, and precautions.

Promate Teeny TWS Earphones User Manual & Specifications (HT22)

User manual and technical specifications for Promate Teeny (also known as HT22) True Wireless Stereo (TWS) earphones by Promate Technologies Ltd. Includes features, operation, charging, and compliance details.