Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JustFine RMT-AH103U

JustFine Replacement Remote Control for Sony HT-CT80 Sound Bar AV System User Manual

Model: RMT-AH103U (Replacement) | Brand: JustFine

1. Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your JustFine replacement remote control. This remote is designed to be compatible with various Sony Sound Bar AV Systems, including models HT-CT80, SA-CT80, and SS-WCT80. It is pre-programmed and requires no additional setup for compatible devices.

2. Package Contents

- 1 x JustFine Replacement Remote Control

Note: Batteries and additional instruction manuals are not included in the package.

3. Setup

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

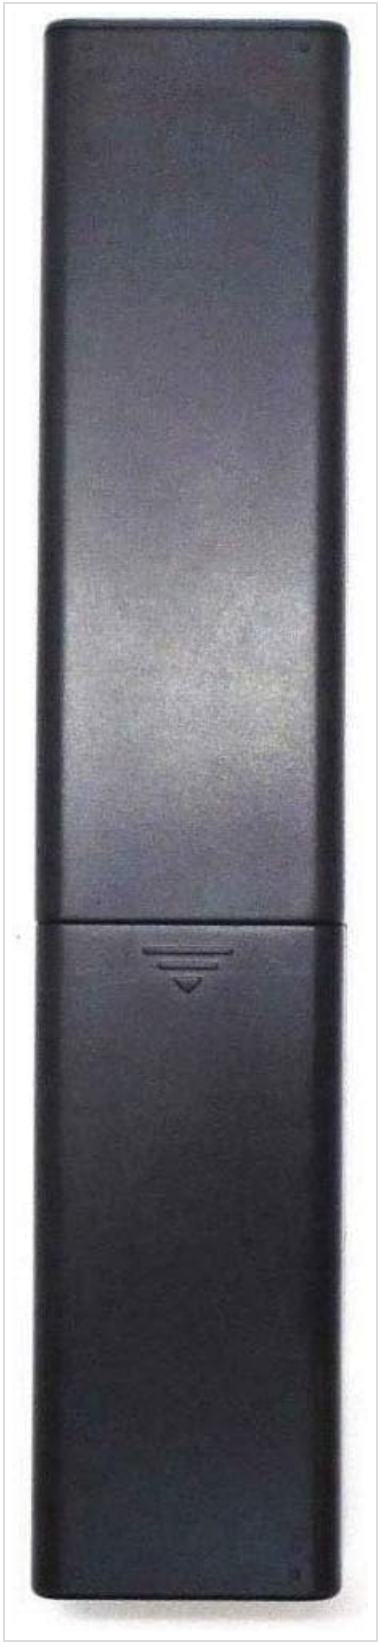


Figure 1: Back of the remote control with the battery compartment. The cover slides down to reveal the battery slots.

The remote control is pre-programmed and ready for use with compatible Sony Sound Bar AV Systems once batteries are installed. No additional programming is required.

4. Operating Instructions

Point the remote control directly at your Sony Sound Bar AV System. Ensure there are no obstructions between the remote and the system's infrared receiver.



Figure 2: Front view of the remote control with labeled buttons.

4.1 Button Functions

- **I/O (Power)**: Turns the Sound Bar AV System on or off.
- **AUDIO**: Selects the audio input source.
- **USB**: Selects the USB input source.
- **OPTICAL**: Selects the Optical input source.
- **ANALOG**: Selects the Analog input source.
- **Volume (+/-)**: Increases or decreases the main volume level.
- **Mute (Speaker with cross)**: Mutes or unmutes the audio output.

- **SW (+/-)**: Adjusts the subwoofer volume level.
- **CLEAR AUDIO+**: Activates or deactivates the Clear Audio+ sound mode.
- **VOICE**: Enhances vocal clarity.
- **SURROUND**: Activates or deactivates surround sound effects.
- **NIGHT**: Optimizes sound for low-volume listening.
- **Playback Controls (Play/Pause, Skip Forward, Skip Backward)**: Controls media playback when applicable (e.g., USB input).

5. Maintenance

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

6. Troubleshooting

- **Remote not responding**: Ensure fresh batteries are correctly installed. Check for any obstructions between the remote and the Sound Bar AV System. Confirm the remote is pointed directly at the system's infrared receiver.
- **Limited functionality**: Verify that your Sound Bar AV System model is listed as compatible. While this remote is a replacement, some advanced functions specific to original remotes might vary.

7. Specifications

Product Dimensions	4.53 x 1.57 x 1.38 inches
Item Weight	2.65 ounces
Connectivity Technology	Infrared
Compatible Devices	Sony HT-CT80, SA-CT80, SS-WCT80 Sound Bar AV Systems
Max Number of Supported Devices	1

8. Warranty and Support

This product is sold with a money-back guarantee and a 30-day quality warranty, ensuring a hassle-free return process if needed.

For any problems or inquiries, please contact us via email. Refer to your purchase documentation for specific contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08SBV8JNN

More documents and user manuals: **https://manuals.plus/**