Tefal SW701110

Tefal Snack XL Sandwich and Waffle Maker User Manual

Model: SW701110

Introduction

Welcome to the user manual for your new Tefal Snack XL Sandwich and Waffle Maker. This versatile appliance is designed to help you prepare delicious, generously filled sandwiches and thick, fluffy waffles with ease. Its extra-deep and extra-wide removable plates ensure perfect results every time, accommodating various bread types and fillings without overflow. Please read these instructions carefully before first use to ensure safe and optimal operation.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Product Overview

The Tefal Snack XL comes with two sets of interchangeable non-stick plates: one for sandwiches and one for waffles.



Image: The Tefal Snack XL appliance shown open with the sandwich plates installed, and the waffle plates displayed separately next to it. This illustrates the two types of removable plates included with the product.

- **Appliance Body:** Houses the heating elements and controls.
- **Interchangeable Plates:** Two sets (sandwich and waffle) with non-stick coating.
- **Power Indicator Light:** Illuminates when the appliance is powered on.
- **Ready Indicator Light:** Illuminates when the appliance has reached the optimal cooking temperature.
- **Handle:** For opening and closing the appliance.
- **Plate Release Buttons:** Located on the side for easy plate removal.

Setup and First Use

1. **Unpack:** Carefully remove the appliance and all accessories from the packaging. Remove any stickers or promotional materials.
2. **Clean Plates:** Before first use, wash the removable plates with warm, soapy water. Rinse thoroughly and dry completely. The plates are dishwasher safe.
3. **Install Plates:** Ensure the appliance is unplugged and cool. Select the desired plates (sandwich or waffle). Align the plates with the slots in the appliance and press down until they click securely into place.



Image: A close-up view of hands demonstrating the process of removing or installing the cooking plates by pressing the release button and lifting the plate.

4. **Initial Heating:** Plug the appliance into a suitable electrical outlet. The power indicator light will illuminate. Allow the appliance to preheat for approximately 5-7 minutes until the ready indicator light illuminates. This initial heating helps to burn off any manufacturing residues. A slight odor or smoke may be present during this first use; this is normal.
5. **Cool Down:** Unplug the appliance and allow it to cool completely.
6. **Wipe Clean:** Once cool, wipe the plates with a damp cloth. The appliance is now ready for use.

Operating Instructions

Making Sandwiches

1. **Prepare Plates:** Ensure the sandwich plates are securely installed.
2. **Preheat:** Close the appliance and plug it in. Allow it to preheat until the ready indicator light illuminates

(approximately 5-7 minutes).

3. **Prepare Sandwiches:** Butter the outer sides of your bread slices. Place your desired fillings between the slices. The extra-deep and wide plates allow for generous fillings and larger bread types.



Image: A close-up view of a sandwich being cooked in the appliance, highlighting the "XL" depth capacity for thicker sandwiches.

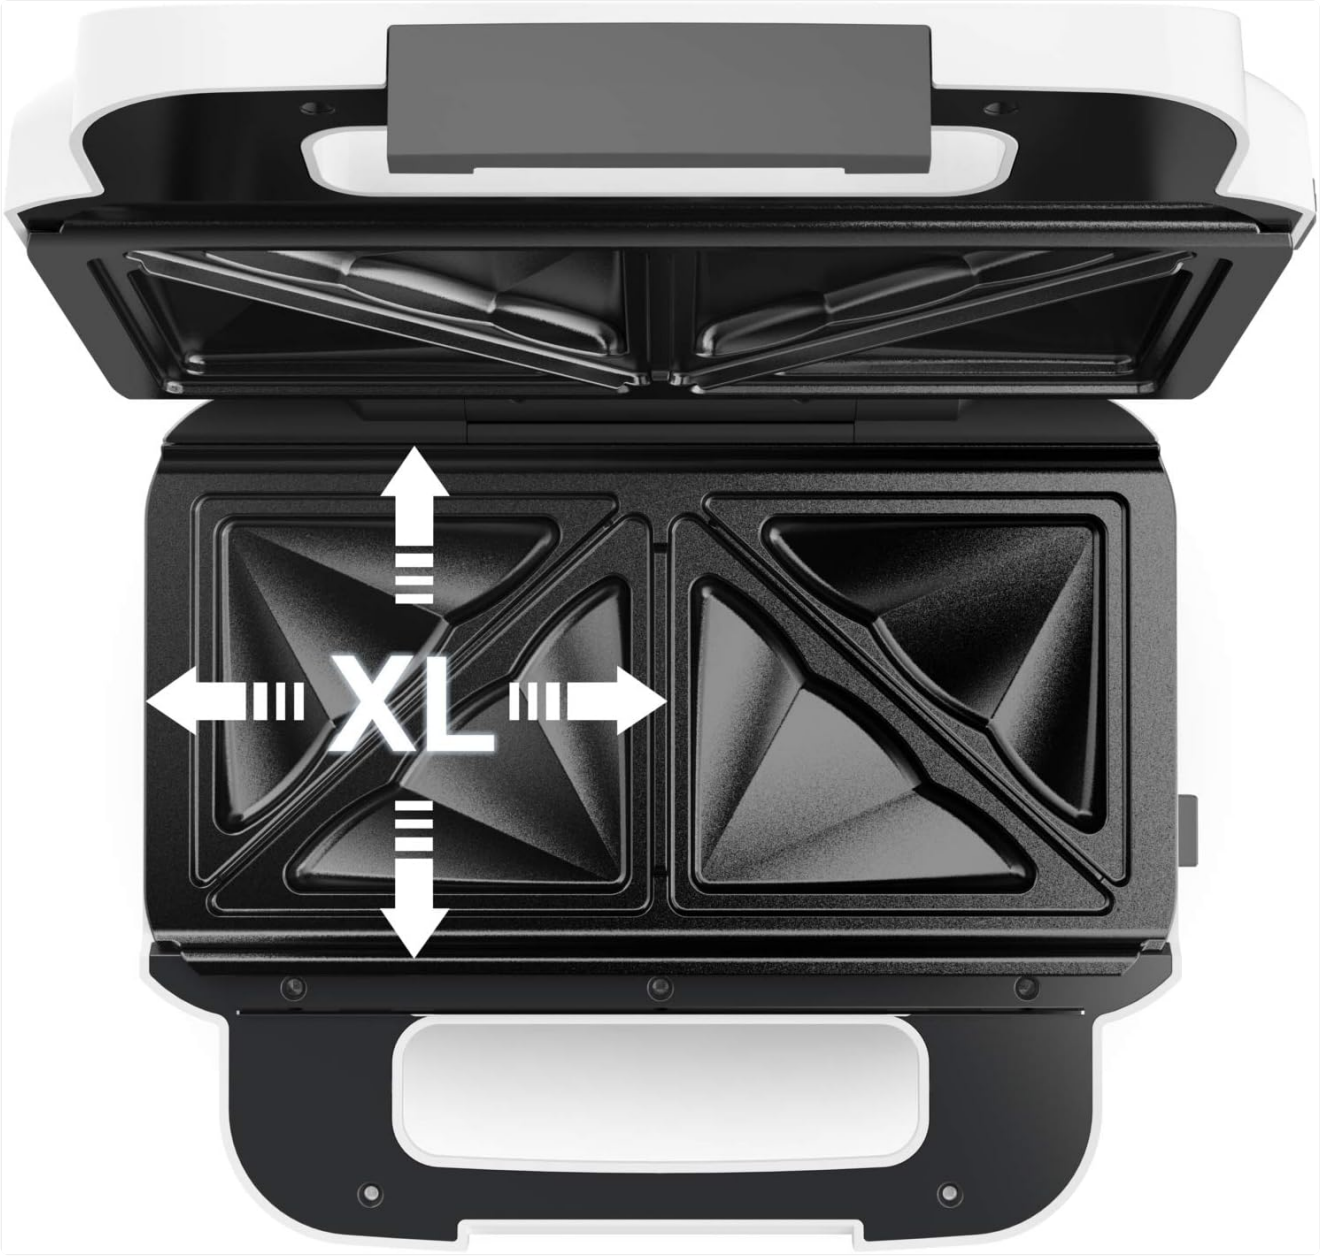


Image: An overhead view of the open sandwich maker, illustrating the "XL" width of the plates, suitable for larger bread slices.

4. **Cook:** Carefully open the appliance and place the prepared sandwiches onto the bottom plate. Close the lid firmly.



Image: The Tefal Snack XL appliance shown open with two golden-brown sandwiches cooking on the lower plate.

5. **Monitor:** Cooking time typically ranges from 3-6 minutes, depending on your desired crispness and filling. The ready light may cycle on and off during cooking, indicating temperature regulation.
6. **Remove:** Once cooked, carefully open the appliance and remove the sandwiches using a heat-resistant plastic or wooden utensil. Do not use metal utensils as they can damage the non-stick coating.
7. **Repeat:** Close the lid to maintain heat for subsequent batches.

Making Waffles

1. **Prepare Plates:** Ensure the waffle plates are securely installed.
2. **Preheat:** Close the appliance and plug it in. Allow it to preheat until the ready indicator light illuminates (approximately 5-7 minutes).
3. **Prepare Batter:** Use your favorite waffle batter recipe.
4. **Cook:** Carefully open the appliance. Pour or ladle the waffle batter evenly onto the center of each waffle plate, filling it about two-thirds full. Close the lid firmly.



Image: The Tefal Snack XL appliance shown open with two golden-brown waffles cooking on the lower plate.

5. **Monitor:** Cooking time typically ranges from 4-8 minutes, depending on your batter and desired crispness. The ready light may cycle on and off during cooking.
6. **Remove:** Once cooked and golden brown, carefully open the appliance and remove the waffles using a heat-resistant plastic or wooden utensil.
7. **Repeat:** Close the lid to maintain heat for subsequent batches.

Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your Tefal Snack XL.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Remove Plates:** Press the plate release buttons on the side of the appliance to detach the cooking plates.
3. **Clean Plates:** The non-stick plates are dishwasher safe. For hand washing, use warm, soapy water and a non-

abrasive sponge or cloth. For stubborn residue, soak the plates in warm water for a few minutes before cleaning. Rinse thoroughly and dry completely.

4. **Clean Appliance Body:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the appliance body in water or any other liquid.
5. **Storage:** Once clean and dry, the appliance can be stored vertically to save space. The cord can be wrapped around the designated area on the base.



Image: The bottom view of the Tefal Snack XL, illustrating its design for vertical storage and the integrated cord wrap feature.



Image: The Tefal Snack XL appliance stored upright in a kitchen cabinet next to dishes, demonstrating its space-saving vertical storage capability.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in or power outlet is faulty.	Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker.
Food sticks to plates.	Plates not properly seasoned or cleaned; too little butter/oil.	Ensure plates are clean and dry. Lightly butter or oil the plates before adding food. Do not use cooking sprays as they can leave a sticky residue.
Ready light does not illuminate.	Appliance not preheated long enough.	Allow the appliance to preheat for the recommended 5-7 minutes. The light indicates optimal temperature.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate quickly.
Sandwiches/waffles are not evenly cooked.	Uneven distribution of batter/filling; appliance not fully preheated.	Ensure batter/filling is spread evenly. Always preheat until the ready light illuminates.

Specifications

Brand: Tefal

Model Number: SW701110

Power: 850 Watts

Voltage: 240 Volts

Material: Stainless Steel

Product Dimensions (L x W x H):23.8 x 27.6 x 9.8 cm (approximately 9.37 x 10.87 x 3.86 inches)

Item Weight: 3.4 Kilograms (approximately 7.5 pounds)

Included Components: Waffle plates, Sandwich plates

Special Features: Multifunction appliance, Deep and wide plates, Vertical storage, Dishwasher-safe removable plates, Non-stick coating, Rapid heating.

Warranty and Support

Tefal products are designed for durability and performance. This appliance comes with a**2-year warranty**. For detailed warranty information, service, or support, please refer to the warranty card included with your purchase or visit the official Tefal website.
Repairability: This product is designed for repairability for 15 years.
For further assistance, you may contact Tefal customer service through their official channels.

© 2025 Tefal. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question