Nokia 6300 4G (TA-1324)

Nokia 6300 4G User Manual

Brand: Nokia
Model: 6300 4G (TA-1324)

1. Introduction

This manual provides detailed instructions for the Nokia 6300 4G, an unlocked dual SIM phone featuring WiFi Hotspot, social applications, Google Maps, and Google Assistant. Designed for reliable communication and essential smart features, this device is built with a durable polycarbonate shell.





Image: Front view of the Nokia 6300 4G, showcasing its display and physical keypad.

Key Features:

- **GSM Carrier Compatibility:** Works with AT&T, Boost, Cricket, H2O Wireless, Metro, Net10, T-Mobile, Tracfone. (Note: Not compatible with Verizon or Verizon subsidiaries).
- **Social Connectivity:** Stay in touch with WhatsApp and Facebook.
- **Entertainment:** Stream content on YouTube.
- **High-Speed Connectivity:** Enjoy speedy 4G and share internet with the WiFi hotspot feature (carrier dependent).
- **Smart Assistance:** Utilize Google Assistant for quick answers, calls, and organizing plans.



Image: Close-up of the phone's screen highlighting social apps like WhatsApp and Facebook.

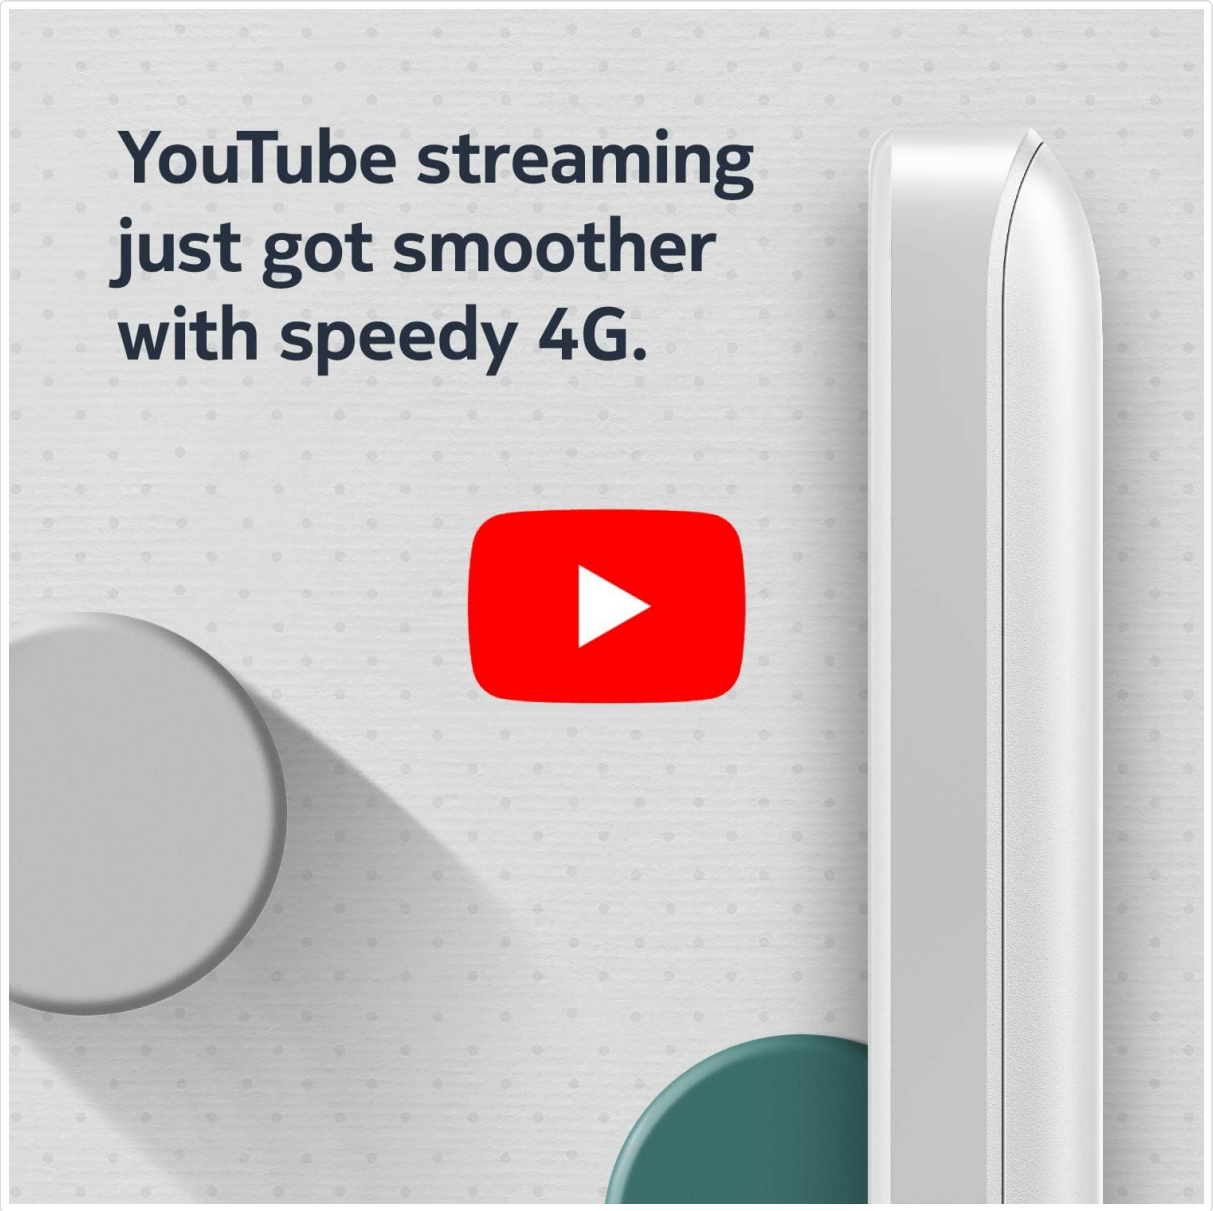


Image: Visual representation of YouTube streaming capability on the device.

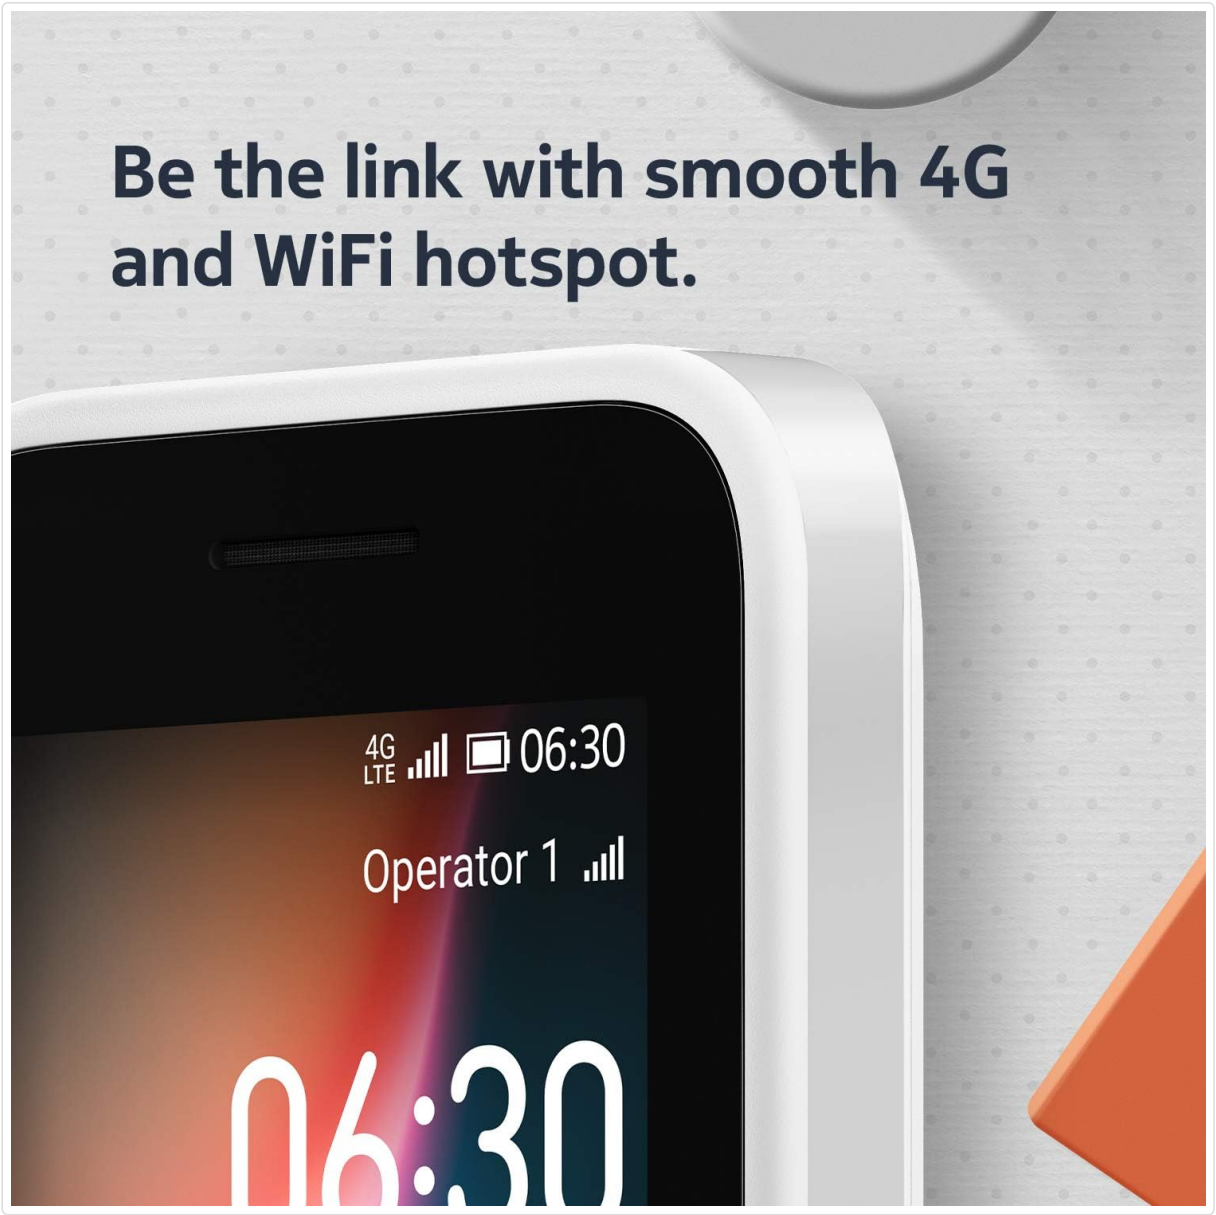


Image: The phone's display indicating 4G LTE connectivity and WiFi hotspot functionality.



Image: The phone alongside the Google Assistant logo, illustrating voice command features.

2. What's in the Box

Upon unboxing your Nokia 6300 4G, please ensure all the following items are present:

- Nokia 6300 4G device
- Battery
- Quick start guide
- Micro USB charger (Charging Cable and Charging Adapter)



Image: Contents of the Nokia 6300 4G retail box.

3. Setup Guide

3.1. Inserting the SIM Card

This device uses a nano SIM card. If you do not have a nano SIM card or your current SIM card does not fit, please contact your carrier for assistance in obtaining a new SIM card.

1. Locate the SIM card tray, typically found in the battery compartment.
2. Carefully insert your nano SIM card into the designated slot.

3.2. Charging the Device

The Nokia 6300 4G is designed to be charged using the charging adapter and cable provided in the product box. Using other charging equipment may cause device malfunction.

1. Connect the charging cable to the phone's charging port.
2. Plug the charging adapter into a power outlet.
3. Observe basic safety steps when charging and do not use malfunctioning or damaged equipment.

3.3. Initial Power On and Network Connection

1. Once your SIM card is inserted, power on your phone.
2. Proceed through the on-screen product setup steps.
3. If you are unable to connect to your network after setup, contact your carrier support for assistance.

4. Operating Instructions

The Nokia 6300 4G runs on KaiOS, providing a user-friendly interface for essential communication and smart features.

4.1. Navigation

Use the physical keypad and navigation buttons to move through menus and select options. The central navigation key allows for scrolling and selection.

4.2. Making Calls and Sending Messages

Use the numeric keypad to dial numbers and the messaging application to compose and send text messages.

4.3. Using Social Apps and Google Services

Access pre-installed applications like WhatsApp, Facebook, and YouTube from the main menu. Google Maps and Google Assistant are also available for navigation and voice commands.

4.4. Wi-Fi Hotspot

To enable the Wi-Fi hotspot feature, navigate to the settings menu. Note that Wi-Fi hotspot functionality is dependent on carrier support.

5. Specifications

Feature	Detail
Product Dimensions	5.17 x 2.09 x 0.54 inches
Item Weight	3.7 ounces
Item Model Number	TA-1324
Operating System	KaiOS
RAM	0.5 GB (512 MB)
Memory Storage Capacity	4 GB
Screen Size	2.4 Inches
Resolution	240 x 320
Refresh Rate	60 Hz
Battery Power Rating	1500 mAh
Phone Talk Time	8 Hours
Charging Time	5 Watts
Wireless Communication Technologies	Bluetooth, Cellular, Wi-Fi
Connectivity Technologies	Bluetooth, Wi-Fi, USB
GPS	True
Special Features	Basic Phone, Text/Messaging, Camera, LTE, Mobile Hotspot Capability
Human Interface Input	Microphone, Buttons, Numeric Keypad
Audio Jack	3.5 mm
Color	White
Manufacturer	HMD Global Oy
Date First Available	January 12, 2021



Image: Diagram showing the physical dimensions of the Nokia 6300 4G.




NOKIA



Image: Rear view of the Nokia 6300 4G, highlighting the camera and speaker grille.

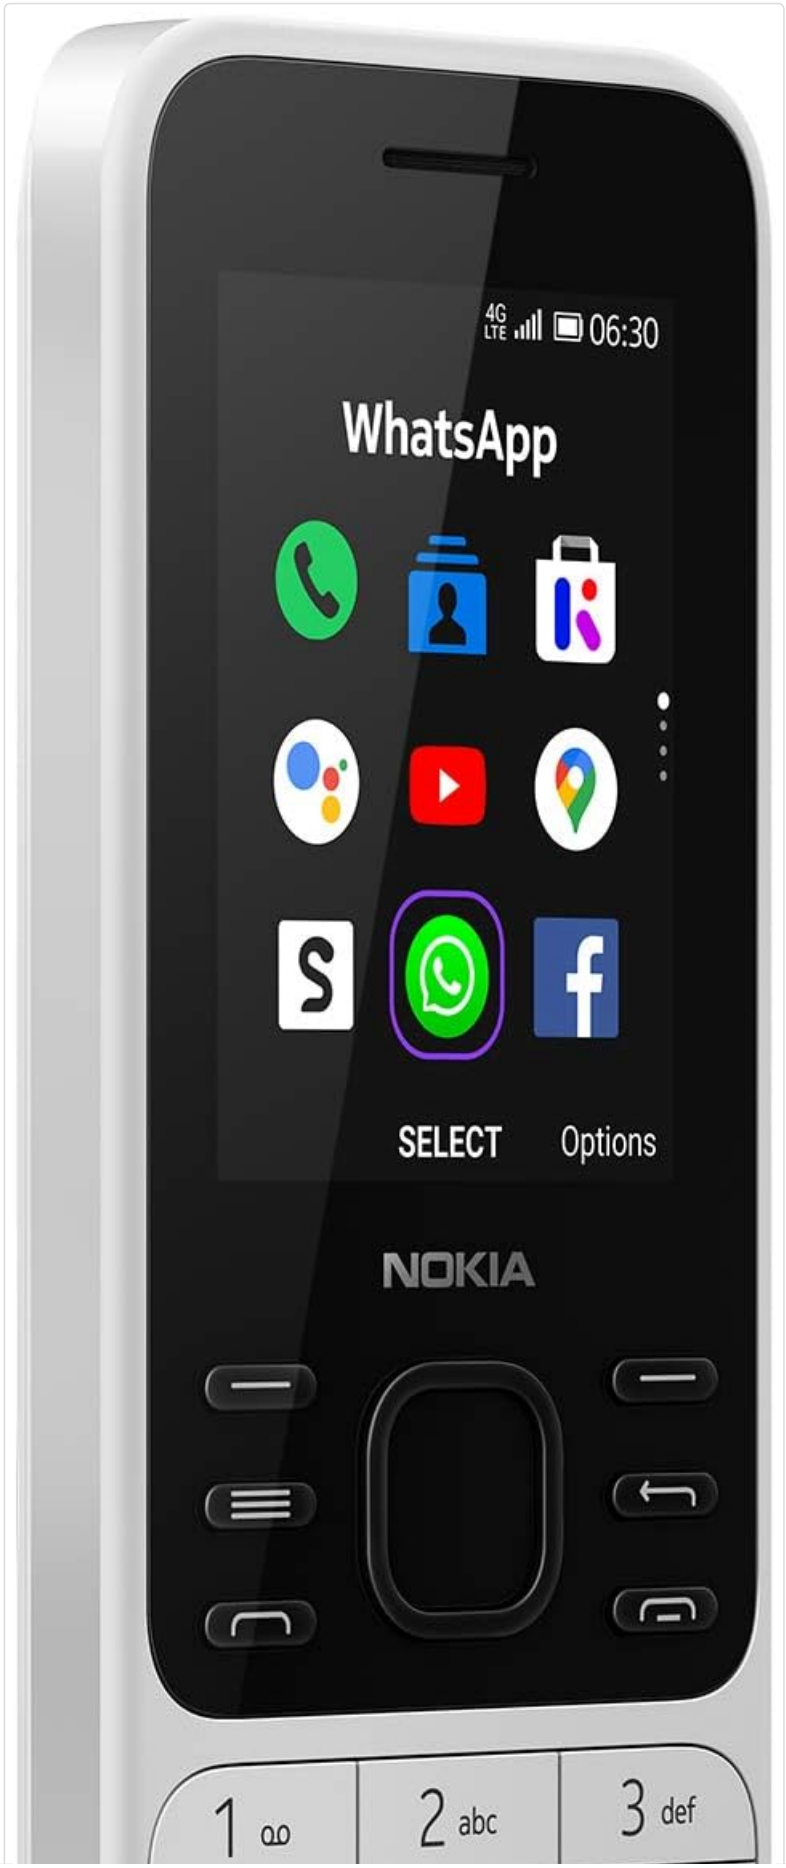




Image: Angled view of the Nokia 6300 4G, providing a perspective of its design.





Image: Side profile of the Nokia 6300 4G.

6. Maintenance

6.1. Charging Precautions

Always use the original charging adapter and cable. Avoid charging the device with malfunctioning or damaged equipment to prevent device malfunction and ensure safety.

6.2. Cleaning Your Device

To maintain optimal performance, ensure the screen is clean and free from dirt or debris. If experiencing microphone or audio issues, check the headphone port for any obstructions.

6.3. Handling Buttons

If you encounter issues with buttons, particularly the Google Assistant button, ensure it is not stuck or dirty, as this can affect microphone functionality.

7. Troubleshooting

This section addresses common issues you might encounter with your Nokia 6300 4G.

7.1. Network Connection / Hotspot Issues

If your phone has issues connecting to your mobile network or the hotspot feature is not working, please contact your carrier for assistance with network connections and hotspot activation. Ensure your SIM card is correctly inserted and compatible with GSM carriers.

7.2. Microphone Issues

If others cannot hear you, check if the Google Assistant button is stuck or dirty. Also, ensure there is no dirt or debris in the headphone port.

7.3. Phone Feeling Warm / Slowing Down

During extended operation, the device may feel warm, which is normal. To prevent overheating, the device may automatically slow down, close apps, switch off charging, or even switch itself off. If the device is not working properly, visit Nokia's customer support website.

7.4. Charging Problems

If your phone is not charging:

1. Check the power source by plugging your phone into a different outlet.
2. Inspect the power cable and charging port for any damage or debris.
3. If the battery is completely drained, it might take 2-3 minutes to show charging activity after plugging in.

7.5. Button Malfunctions

Before further troubleshooting, ensure there is no physical damage, water exposure, or dirt affecting the buttons.

For more detailed troubleshooting, you may refer to the officialTroubleshooting Guide (PDF).

8. Warranty and Support

For support with SIM card or network-related issues, please contact your carrier for assistance in connecting your device to the chosen compatible network.

For general product support, including issues not covered in this manual, please visit the officiaNokia customer support website.

You can also find additional information in theUser Manual (PDF) or User Guide (PDF).

© 2024 Nokia. All rights reserved. Product specifications are subject to change without notice.