ZdalaMit Replacement Remote Applicable for Westinghouse Roku TV WR50UT4009 WR70UX4200 WR43UT4009 WR24HT2200 WR42FX2002 WR75UX4200

User Manual: ZdalaMit Replacement Remote Control for Westinghouse Roku TV

Model Compatibility: WR50UT4009, WR70UX4200, WR43UT4009, WR58UX4019, WR65UX4019, WR32HB2200, WR43FX2019, WR24HT2200, WR42FX2002, WR75UX4200, WR43UX4019, WR24HX2200, WR50UX4019, WR40FX2019, WR55UX4019, WR58UC4139, WR50UT4212, WR24HX2210, WR24HT2212

1. Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your ZdalaMit Replacement Remote Control. This remote is designed to be compatible with various Westinghouse Roku TV models, offering a seamless replacement experience without the need for complex programming.

2. Setup


2.1. Battery Installation

The remote control requires two (2) 1.5V AAA Alkaline batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2.2. Initial Use

No programming or pairing is required for this replacement remote control. Once the batteries are correctly installed, the remote is ready for immediate use with your compatible Westinghouse Roku TV.

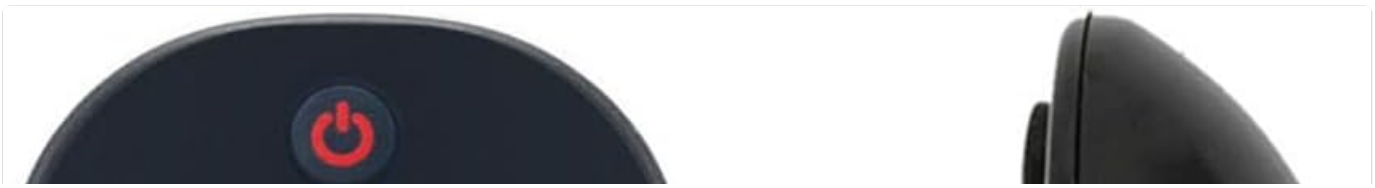


OK
NETFLIX
hulu
sling



Figure 1: Front view of the ZdalaMit Replacement Remote Control. This image illustrates the button layout and overall design of the remote, which is ready for use after battery installation.

3. Operating Instructions

This section details the functions of the buttons on your ZdalaMit Replacement Remote Control.

Button	Function
Power ( )	Turns the TV on or off.
Back (←)	Returns to the previous screen or menu.
Home (⌂)	Navigates to the Roku Home screen.
Navigation Pad (Up, Down, Left, Right)	Moves cursor through menus and content.
OK	Confirms a selection or opens an item.
Rewind ( )	Rewinds video playback.
Play/Pause ( )	Plays or pauses video playback.
Fast Forward ( )	Fast forwards video playback.
Instant Replay (↻)	Replays the last few seconds of video.
Options (★)	Accesses additional options or settings.
Sleep Timer ( )	Activates or adjusts the sleep timer function.
Volume Up ( )	Increases the TV volume.
Volume Down ( )	Decreases the TV volume.
Mute ( )	Mutes or unmutes the TV sound.
Dedicated App Buttons (Netflix, Hulu, Sling, etc.)	Launches the corresponding streaming application directly.

4. Maintenance

4.1. Battery Replacement

If the remote control's performance degrades or it stops responding, the batteries may need to be replaced. Follow the battery installation steps in Section 2.1 to replace the old batteries with new 1.5V AAA Alkaline batteries. Always replace both batteries at the same time.

4.2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's finish or internal components.

5. Troubleshooting

- **Remote not responding:**
  - Ensure batteries are inserted correctly with proper polarity (+/-).
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote and the TV's IR receiver.
  - Ensure the remote is pointed directly at the TV.
- **Short operating range:**
  - This typically indicates low battery power. Replace the batteries.
  - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.
- **Specific buttons not working:**
  - This could indicate a faulty button or very low battery power. Try replacing batteries first.
  - If only specific app buttons are not working, ensure your TV is connected to the internet and the apps are installed and updated.

6. Specifications

Feature	Detail
Product Dimensions	4 x 1.2 x 0.5 inches
Item Weight	1.41 ounces
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Compatible Devices	Westinghouse Roku TVs (various models listed in Introduction)
Special Feature	Pre-Programmed (No setup required)
Color	Black

7. Support

For any queries or assistance regarding your ZdalaMit Replacement Remote Control, please feel free to contact the seller or manufacturer. Refer to your purchase documentation for specific contact details.

© 2024 ZdalaMit. All rights reserved.