Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WOPET 7L

WOPET Automatic Pet Feeder Instruction Manual

Model: 7L Pet Food Dispenser

Introduction

The WOPET Automatic Pet Feeder is designed to provide convenient and consistent feeding for your cats and dogs. With its programmable features, you can schedule meals, control portion sizes, and even record a personalized voice message to call your pet to mealtime. This feeder ensures your pet receives their food on schedule, promoting healthier eating habits and providing peace of mind for pet owners.
This 7L capacity feeder is suitable for dry food only, with food pellet sizes within 15mm. It offers dual power supply options, operating via ordinary wall outlets or 3 D-size batteries (not included) for backup during power outages.

Setup Guide

1. Power Supply

The WOPET Automatic Pet Feeder supports dual power supply for reliable operation.

- **AC Adapter:** Connect the power adapter to the feeder's power port and plug it into a standard wall outlet.
- **Battery Backup:** For power outage protection, install 3 D-size batteries (not included) into the battery compartment located at the bottom of the feeder. Ensure correct polarity.

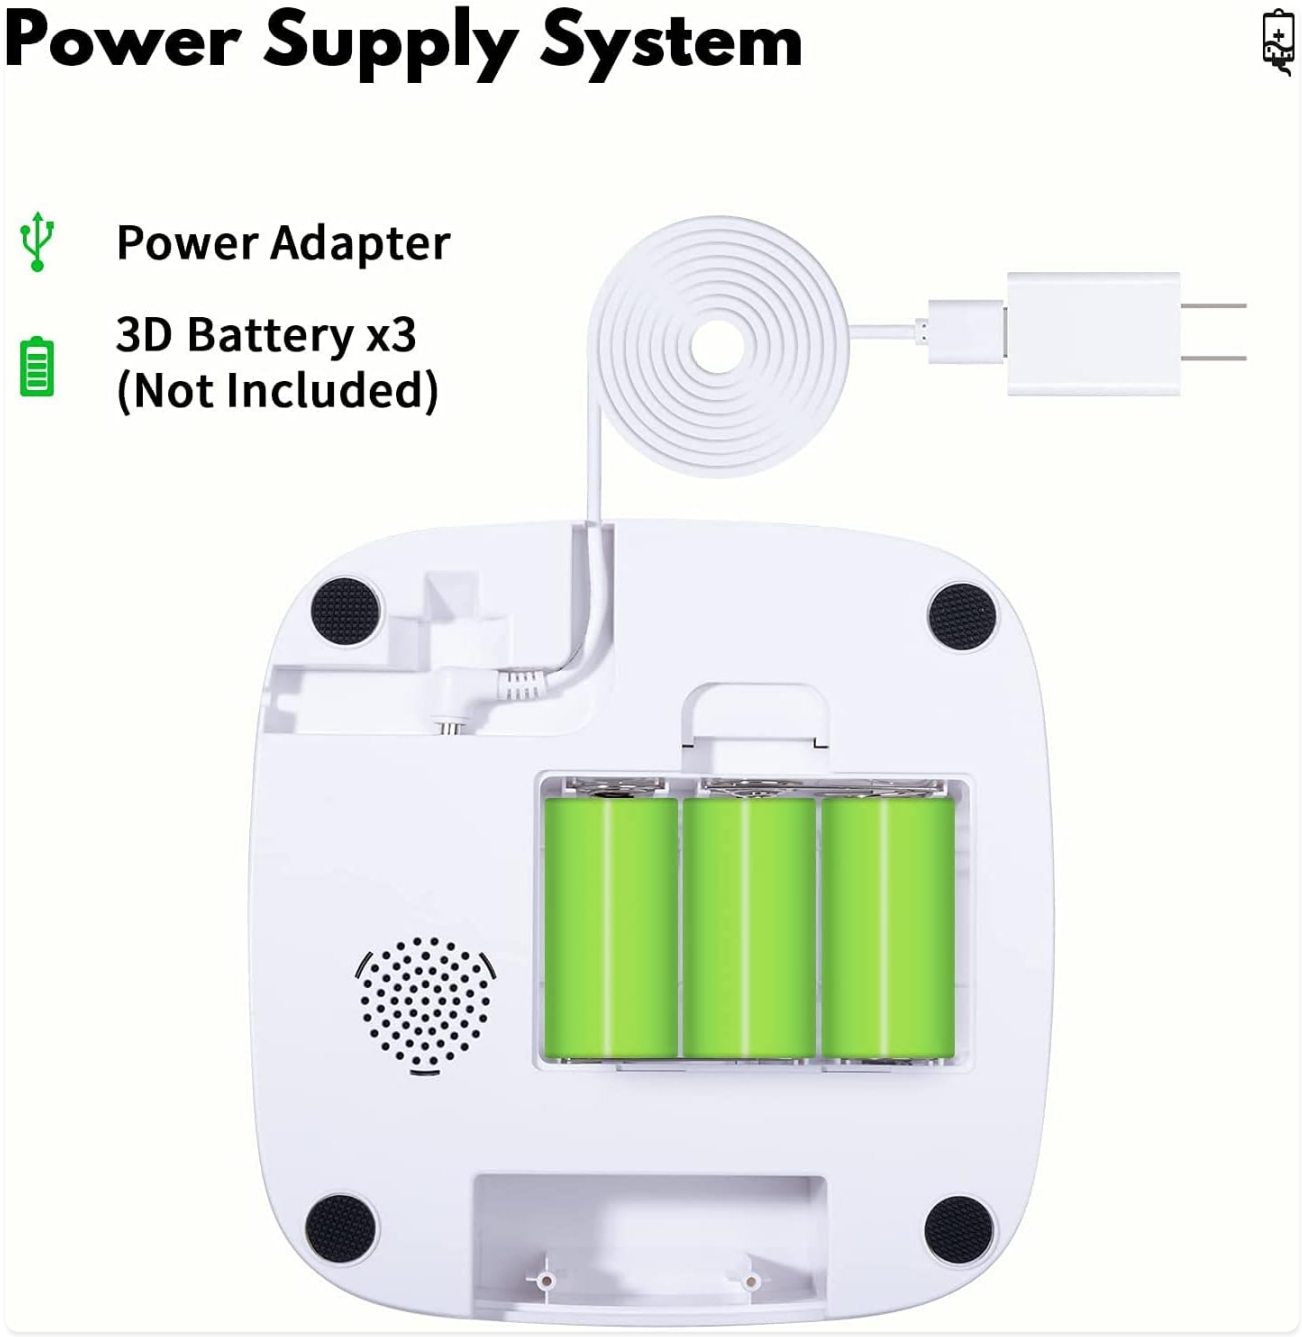


Image: Power Supply System showing AC adapter and battery compartment.

2. Fill the Food Hopper

1. Open the top lid of the feeder.
2. Pour dry pet food into the 7L capacity hopper. Ensure food pellet size is within 15mm to prevent jamming.
3. Close the top lid securely to maintain food freshness and prevent spills.



Image: WOPET Automatic Pet Feeder with food in the hopper and bowl.

3. Assemble the Food Tray

Attach the food tray to the main unit by sliding it into the designated slot at the bottom front of the feeder. Ensure it clicks into place for stability.

Operating Instructions

1. Set Current Time

1. Press and hold the "SET" button for 3 seconds until the clock icon flashes on the LCD screen.
2. Use the "+" and "-" buttons to adjust the current hour. Press "SET" to confirm.
3. Repeat the process to set the minutes, then press "SET" to confirm.

2. Program Meal Times and Portions

You can program up to 4 meals per day, with 1-9 portions per meal.

1. Press "SET" once to enter Meal 1 setting. The "MEAL 1" icon will flash.
2. Use "+" and "-" to set the desired feeding time for Meal 1. Press "SET" to confirm.
3. The "PORTION" icon will flash. Use "+" and "-" to set the number of portions (1-9) for Meal 1. Press "SET" to confirm.
4. Repeat steps 1-3 for Meal 2, Meal 3, and Meal 4 as needed.



Image: Schedule A Healthy Feeding Routine with the WOPET feeder.

3. Record Voice Message

Record a 10-second voice message to call your pet at mealtime.

1. Press and hold the "REC" button until the microphone icon appears on the LCD screen.
2. Speak your message clearly into the microphone.
3. Release the "REC" button to save the message. The message will play automatically during scheduled meal times.

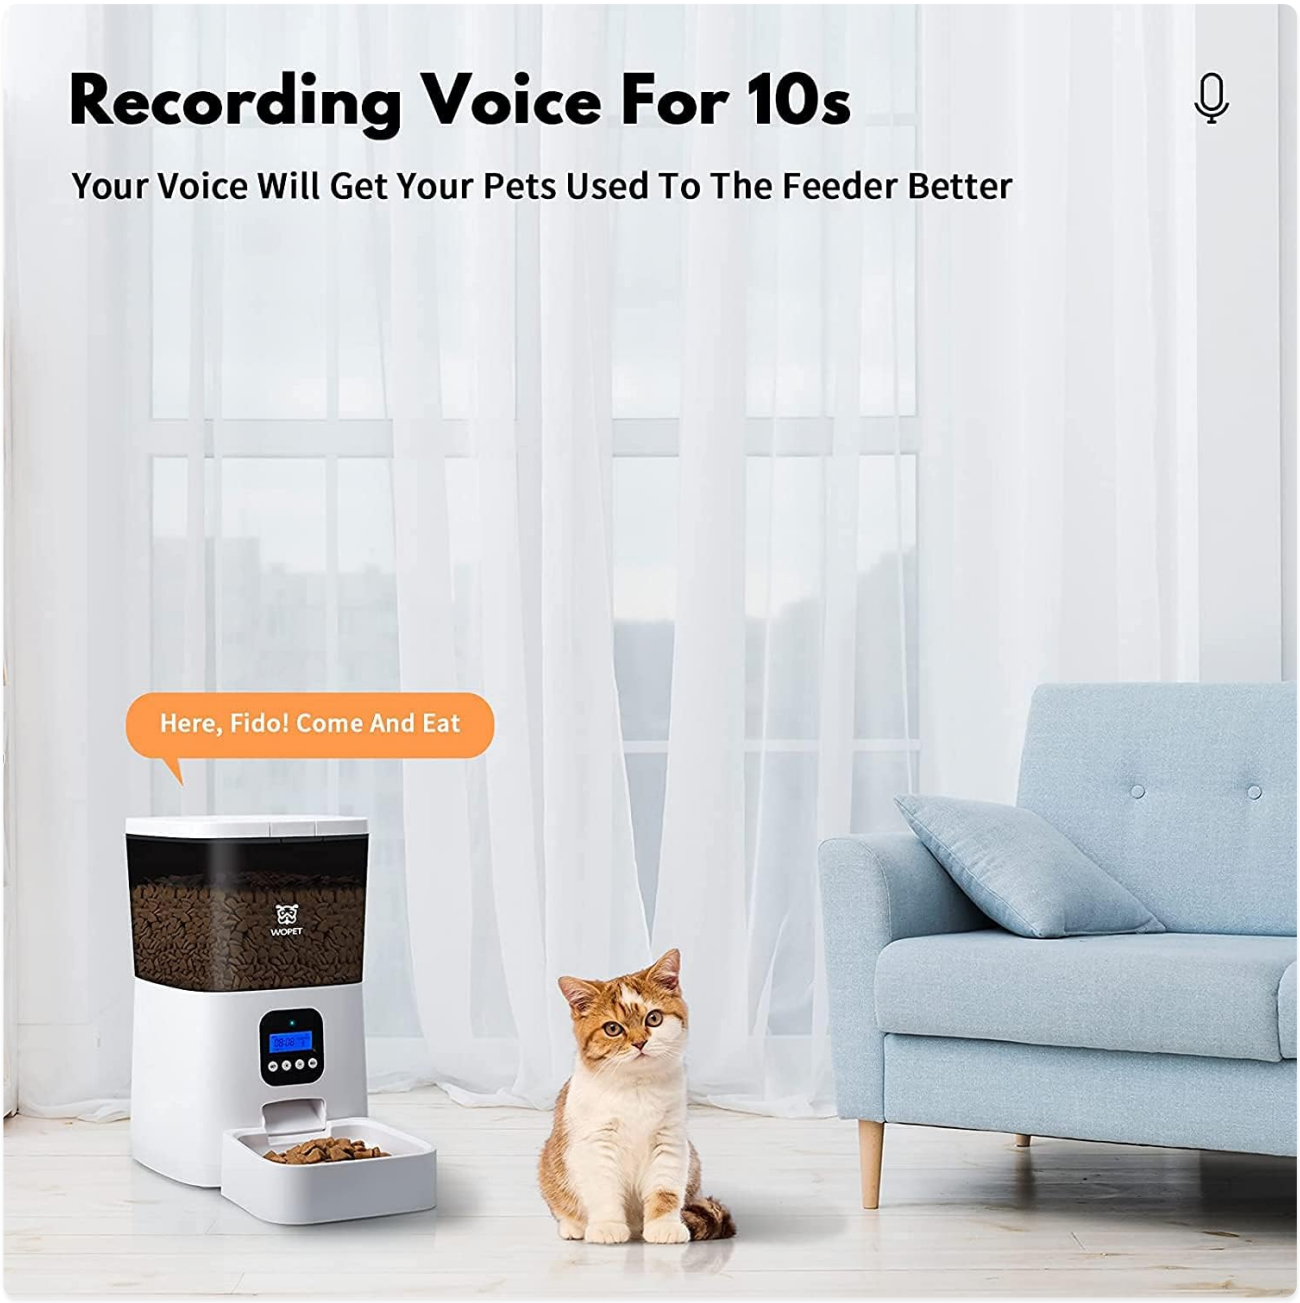


Image: Recording Voice For 10s, showing a cat and the feeder.

4. Manual Feeding

To dispense food manually, simply press the "REC" button once. Each press will dispense one portion of food.

Your browser does not support the video tag.

Video: Official WOPET Automatic Pet Feeder demonstration, showing setup, programming, and feeding in action.

Maintenance and Cleaning

Regular cleaning ensures hygiene and extends the life of your pet feeder.

- **Food Tank and Tray:** The food tank and tray are removable for easy cleaning. Hand wash these components with mild soap and water. Rinse thoroughly and dry completely before reassembling.
- **Main Unit:** Wipe the main unit with a soft, damp cloth. Do not immerse the main unit in water.
- **Desiccant Bag:** Replace the desiccant bag in the lid periodically (every 1-2 months) to keep food fresh, especially in humid environments.

Troubleshooting

Problem	Possible Cause	Solution
Feeder not powering on.	No power from adapter or dead batteries.	Check if the AC adapter is securely plugged in. If using batteries, ensure they are new and correctly installed.
Food not dispensing.	Hopper empty, food jammed, or incorrect settings.	Refill the hopper. Check for food jams and clear them. Verify meal times and portion settings are correctly programmed. Ensure food pellet size is within 15mm.
Voice message not playing.	Message not recorded or low volume.	Re-record the voice message following the instructions. Check if the speaker is obstructed.
Settings not saving.	Buttons not pressed correctly or unit locked.	Ensure you press "SET" to confirm each setting. The unit automatically locks after 20 seconds of inactivity; long press "SET" to wake it up before making changes.

Specifications

Feature	Detail
Brand	WOPET
Model	7L Pet Food Dispenser
Capacity	7 Liters
Food Type	Dry food only
Food Pellet Size	Within 15mm

Feature	Detail
Meal Scheduling	Up to 4 meals per day
Portion Control	1-9 portions per meal
Voice Recording	10-second customizable message
Power Supply	AC adapter (included) / 3 D-size batteries (not included)
Item Weight	4.34 pounds
Item Dimensions (L x W x H)	13.8 x 8.4 x 8 inches
Color	Blue (Product image shows white/black, but spec says blue. Sticking to spec.)
Care Instructions	Hand Wash Only (removable parts)
Target Species	Cat, Dog



Image: Dimensions of the WOPET Automatic Pet Feeder.

Safety Warnings

- Do not immerse the main unit in water or any other liquid.
- Ensure the feeder is placed on a stable, level surface to prevent tipping.
- Keep out of reach of small children and pets when not in use or during cleaning.
- Use only dry pet food. Wet food or treats may cause clogging or malfunction.
- Regularly inspect the power cord for any damage. Discontinue use if damaged.
- Do not attempt to disassemble or repair the feeder yourself. Contact customer support for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08T1TWHJJ

More documents and user manuals: **https://manuals.plus/**