Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic T31 (89-030101-20-DI)

Proscenic T31 15L Air Fryer Oven User Manual

Brand: Proscenic | **Model:** T31 (89-030101-20-DI)

1. Introduction

This manual provides essential information for the safe and efficient operation of your Proscenic T31 15L Air Fryer Oven. Please read it thoroughly before first use and keep it for future reference.

The Proscenic T31 Air Fryer Oven is designed to cook a variety of foods with significantly less oil compared to traditional frying methods. Utilizing TurboAir technology, it ensures even cooking and crispy results while reducing fat intake by up to 85%. Its large 15-liter capacity makes it suitable for family-sized meals, including roasting a whole chicken. The appliance features a user-friendly touch screen and can be controlled remotely via the Proscenic app, offering a wide range of preset programs and customizable cooking options.



Image: The Proscenic T31 Air Fryer Oven, showcasing its sleek design, digital control panel, and included accessories like the rotisserie basket and cooking trays. A smartphone screen displays the companion app interface.

2. Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply.
- Keep the appliance and its cord out of reach of children.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Always unplug the appliance when not in use and before cleaning.

- Allow the appliance to cool down completely before handling or cleaning.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm of free space on the back and sides and 10 cm of free space above the appliance.
- Do not place anything on top of the appliance.
- Use only accessories recommended by the manufacturer.
- The appliance is intended for household use only.
- Exercise extreme caution when removing the basket or tray, as hot steam may escape.

3. Product Components and Features

3.1. Key Features

- **15-Liter Large Capacity:** Accommodates up to 10 portions, ideal for family meals or roasting a whole chicken.
- **TurboAir Technology:** 360-degree air circulation for fast, even cooking, resulting in crispy exteriors and tender interiors with up to 85% less fat.
- **12 Preset Programs:** Simplifies cooking for common dishes like fries, chicken, vegetables, and more.
- **Combination Functions:** Allows combining Preheat, Preset Mode, and Keep Warm functions for customized cooking cycles.
- **App Control & Online Recipes:** Remote control via the Proscenic app and access to over 100 online recipes.
- **Touch Screen & Rotary Knob:** Intuitive LED touch screen for program selection and a rotary knob for precise time and temperature adjustments.
- **Safe Materials:** Non-stick Teflon coating, BPA-free, PFOA-free, and rust-proof components for safety and easy cleaning.

3.2. Included Accessories

Comes with 6 Accessories

Help you cook easily



Image: A visual representation of the six included accessories: Skewer set, Rotisserie basket, Rotisserie fork, Rotisserie tongs, Cooking tray, and Drip pan, each with an example of its use.

- **Skewer:** For preparing kebabs or small roasted items.
- **Rotisserie Basket:** Ideal for fries, nuts, or other small items that require tumbling for even cooking.
- **Rotisserie Fork:** Used for roasting whole chickens or larger cuts of meat.
- **Rotisserie Tongs:** For safe removal of the rotisserie fork or basket from the hot oven.
- **Cooking Tray:** For baking, roasting, or dehydrating.
- **Drip Pan:** Collects excess oil and food debris, placed at the bottom of the oven.

4. Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and accessories. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash all removable accessories (cooking tray, drip pan, rotisserie parts) with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer oven on a stable, level, heat-resistant surface. Ensure there is adequate ventilation around the appliance (at least 10 cm clearance on all sides and top).
4. **First Run (Burn-in):** For the first use, it is recommended to run the appliance empty for approximately 20 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. Operating Instructions

5.1. Control Panel Overview

The Proscenic T31 features an intuitive LED touch screen and a rotary knob for easy operation.



Image: The control panel of the Proscenic T31, highlighting the touch-sensitive icons for various food presets (e.g., French fries, chicken, beef, vegetables, fish, shrimp, pizza, bacon, cuttlefish, cakes) and the central rotary knob for time and temperature adjustments.

5.2. Basic Operation

1. **Power On:** Plug in the appliance. The display will light up.
2. **Select Program:** Choose one of the 12 preset programs by touching the corresponding icon on the control panel. The default time and temperature for that program will be displayed.
3. **Adjust Time/Temperature (Optional):** Use the rotary knob to adjust the cooking time or temperature if

needed. Press the "TIME/TEMP" button to switch between adjusting time and temperature.

4. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
5. **Pause/Resume:** Press the Start/Pause button during cooking to pause the process. Press again to resume.
6. **Power Off:** To turn off the appliance, press and hold the Power button, or unplug it from the wall outlet.

5.3. Using Combination Functions

The T31 allows combining functions like Preheat, Preset Mode, and Keep Warm.

- **Preheat:** Select the Preheat function before starting a cooking program to bring the oven to the desired temperature quickly.
- **Keep Warm:** After a cooking program finishes, select the Keep Warm function to maintain the food's temperature until serving.
- Refer to the specific recipe or your cooking needs to determine which combination of functions to use.

5.4. App Control and Online Recipes

App Control & Online Recipes

The "Proscenic" App is simple and easy to use and there are 30 recipes online to suit your various needs



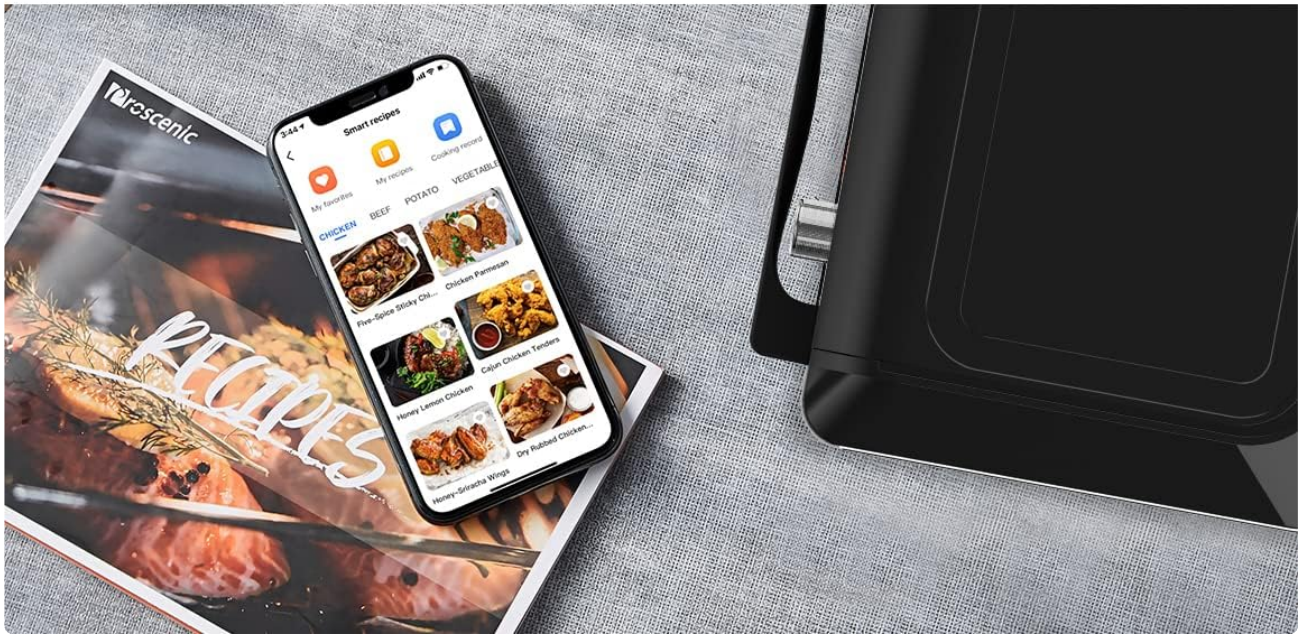


Image: A smartphone screen showing the Proscenic app interface with various recipe categories and options, positioned next to the Proscenic T31 Air Fryer Oven, illustrating remote control capabilities.

1. **Download App:** Download the "Proscenic" app from your smartphone's app store.
2. **Pair Device:** Follow the in-app instructions to pair your T31 Air Fryer Oven with your smartphone via Wi-Fi.
3. **Remote Control:** Once paired, you can remotely control cooking, preheating, and keep warm functions from your phone.
4. **Access Recipes:** The app provides access to over 100 free online recipes. You can also upload your own recipes or view recipes shared by other Proscenic users.

5.5. TurboAir Technology



Image: A diagram showing the 360-degree hot air circulation within the Proscenic T31 Air Fryer Oven, ensuring even cooking and crisping, contrasted with a traditional deep fryer.

The T31 utilizes advanced TurboAir technology, which circulates hot air rapidly and evenly throughout the cooking chamber. This ensures that food is cooked thoroughly and develops a crispy texture on the outside while remaining tender on the inside, all with minimal oil.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.



Image: Hands cleaning a cooking tray from the Proscenic T31 Air Fryer Oven under running water in a kitchen sink, demonstrating the ease of cleaning its non-stick components.

1. **Unplug and Cool Down:** Always unplug the air fryer oven from the power outlet and allow it to cool completely before cleaning.
2. **Clean Accessories:** All removable accessories (cooking tray, drip pan, rotisserie parts) are rust-proof and have a non-stick Teflon coating. They can be easily washed by hand with warm, soapy water or placed in a dishwasher.

3. **Clean Interior:** Wipe the interior of the oven with a damp cloth and mild detergent. For stubborn food residue, use a non-abrasive sponge. Do not use metal scouring pads or abrasive cleaners.
4. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

7. Troubleshooting

If you encounter issues with your Proscenic T31 Air Fryer Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Overcrowding; incorrect temperature/time; food not shaken/turned.	Do not overcrowd the basket/tray. Adjust temperature/time. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the drip pan and interior thoroughly. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); overcrowding.	Pat food dry before cooking. Lightly brush or spray with oil if needed. Cook in smaller batches.
App connection issues.	Incorrect Wi-Fi password; poor Wi-Fi signal; app not updated.	Ensure correct Wi-Fi credentials. Move appliance closer to router. Update app to the latest version. Restart appliance and phone.

If the problem persists after trying these solutions, please contact Proscenic customer support.

8. Specifications

Attribute	Value
Brand	Proscenic
Model Number	89-030101-20-DI
Color	Black
Product Dimensions (L x W x H)	38.8 cm (W) x 34.1 cm (D) x 40.8 cm (H)
Capacity	15 Liters
Power	1700 Watts
Voltage	220 Volts (AC)
Material	Stainless Steel

Attribute	Value
Special Features	12 preset settings, App control & online recipes, 15L large capacity, TurboAir technology, LED touch screen
Item Weight	11.4 Kilograms (25.1 lbs)
Recommended Uses	Frying, baking, grilling, roasting
Non-stick coating	Yes



Image: A diagram illustrating the external dimensions of the Proscenic T31 Air Fryer Oven, including width (38.8cm), depth (34.1cm), and height (40.8cm), along with internal cooking space measurements.

9. Warranty and Support

Proscenic products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or spare parts availability, please refer to the warranty card included with your product or visit the official Proscenic website.

For customer service inquiries, you may also contact Proscenic support through the official app or their website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08T761LF9

More documents and user manuals: **https://manuals.plus/**