Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AEG ATB48E1AW

User Manual for AEG ATB48E1AW Table Freezer

Model: 922 717 086

1. Introduction

Thank you for choosing the AEG ATB48E1AW Table Freezer. This appliance is designed to provide efficient and reliable freezing for your food items. With its compact design and advanced features like LowFrost technology, it offers convenience and energy savings.

This manual provides important information regarding the installation, operation, maintenance, and troubleshooting of your new freezer. Please read it thoroughly before using the appliance and keep it for future reference.


AEG

Figure 1.1: Front view of the AEG ATB48E1AW Table Freezer.

2. Safety Information

For your safety and to ensure correct operation, please read this manual carefully before installation and first use. Always keep these instructions with the appliance, even if it is moved or sold.

- Ensure the appliance is unplugged before cleaning or maintenance.
- Do not damage the refrigerant circuit.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is intended for household use only.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.


3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials. Dispose of packaging responsibly, keeping plastic bags and other materials away from children.

3.2 Placement

Place the freezer on a firm, level surface. Ensure there is adequate ventilation around the appliance. Avoid placing it near heat sources (e.g., ovens, radiators) or in direct sunlight. Allow sufficient space for the door to open fully (180 degrees maximum).

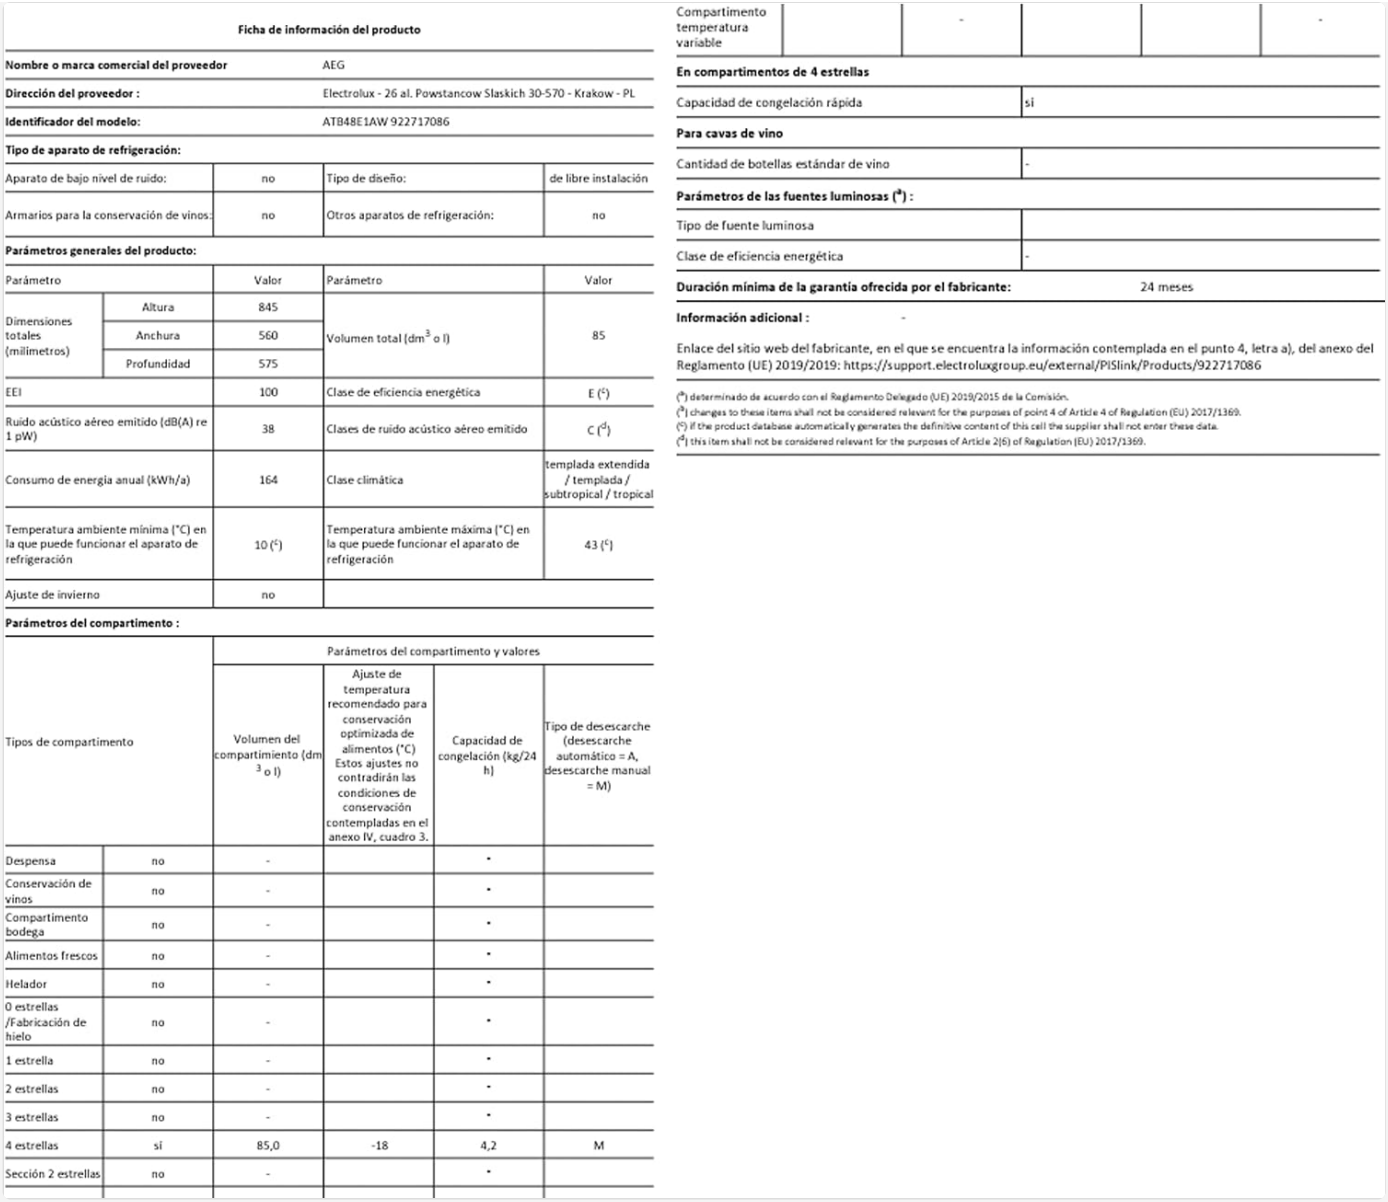

Ficha de información del producto

Nombre o marca comercial del proveedor		AEG	
Dirección del proveedor :		Electrolux - 26 al. Powstancow Slaskich 30-570 - Krakow - PL	
Identificador del modelo:		ATB48E1AW 922717086	
Tipo de aparato de refrigeración:			
Aparato de bajo nivel de ruido:	no	Tipo de diseño:	de libre instalación
Armarios para la conservación de vinos:	no	Otros aparatos de refrigeración:	no

Parámetros generales del producto:

Parámetro		Valor	Parámetro	Valor
Dimensiones totales (milímetros)	Altura	845	Volumen total (dm^3 o l)	85
	Anchura	560		
	Profundidad	575		
EEI		100	Clase de eficiencia energética	E ([c])
Ruido acústico aéreo emitido (dB(A) re 1 pW)		38	Clases de ruido acústico aéreo emitido	C ([d])
Consumo de energía anual (kWh/a)		164	Clase climática	templada extendida / templada / subtropical / tropical
Temperatura ambiente mínima (°C) en la que puede funcionar el aparato de refrigeración		10 ([c])	Temperatura ambiente máxima (°C) en la que puede funcionar el aparato de refrigeración	43 ([c])
Ajuste de invierno		no		

Parámetros del compartimento :

Tipos de compartimento		Parámetros del compartimento y valores			
		Volumen del compartimiento (dm^3 o l)	Ajuste de temperatura recomendado para conservación optimizada de alimentos (°C) Estos ajustes no contradirán las condiciones de conservación contempladas en el anexo IV, cuadro 3.	Capacidad de congelación (kg/24 h)	Tipo de desescarche (desescarche automático = A, desescarche manual = M)
Despensa	no	-		*	
Conservación de vinos	no	-		*	
Compartimento bodega	no	-		*	
Alimentos frescos	no	-		*	
Helador	no	-		*	
0 estrellas /Fabricación de hielo	no	-		*	
1 estrella	no	-		*	
2 estrellas	no	-		*	
3 estrellas	no	-		*	
4 estrellas	sí	85,0	-18	4,2	M
Sección 2 estrellas	no	-		*	
Compartimento temperatura variable		-			-

En compartimentos de 4 estrellas

Capacidad de congelación rápida	sí

Para cavas de vino

Cantidad de botellas estándar de vino	-

Parámetros de las fuentes luminosas ([a]) :

Tipo de fuente luminosa	
Clase de eficiencia energética	-

Duración mínima de la garantía ofrecida por el fabricante: 24 meses

Información adicional : -

Enlace del sitio web del fabricante, en el que se encuentra la información contemplada en el punto 4, letra a), del anexo del Reglamento (UE) 2019/2019: https://support.electroluxgroup.eu/external/PISlink/Products/922717086

([a]) determinado de acuerdo con el Reglamento Delegado (UE) 2019/2015 de la Comisión.
([b]) changes to these items shall not be considered relevant for the purposes of point 4 of Article 4 of Regulation (EU) 2017/1369.
([c]) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.
([d]) this item shall not be considered relevant for the purposes of Article 2(6) of Regulation (EU) 2017/1369.

Figure 3.1: Dimensions and clearance requirements for installation. Note the maximum 180-degree door opening.

3.3 Electrical Connection

Before plugging in the appliance, ensure the voltage and frequency indicated on the rating plate match your household power supply. The appliance must be properly grounded.



Figure 3.2: Rear view of the freezer, illustrating the compressor and electrical components. Ensure proper ventilation around this area.

3.4 Initial Start-up

After installation, wait at least 4 hours before plugging in the appliance to allow the refrigerant fluids to settle. Once plugged in, set the temperature control to the desired setting and allow the freezer to cool for several hours before loading food.

4. Operating Instructions

4.1 Temperature Control

The temperature inside the freezer is controlled by a thermostat dial located inside the appliance. Turn the dial to adjust the temperature. Settings typically range from 'Cold' to 'Colder' or 'Mid'.

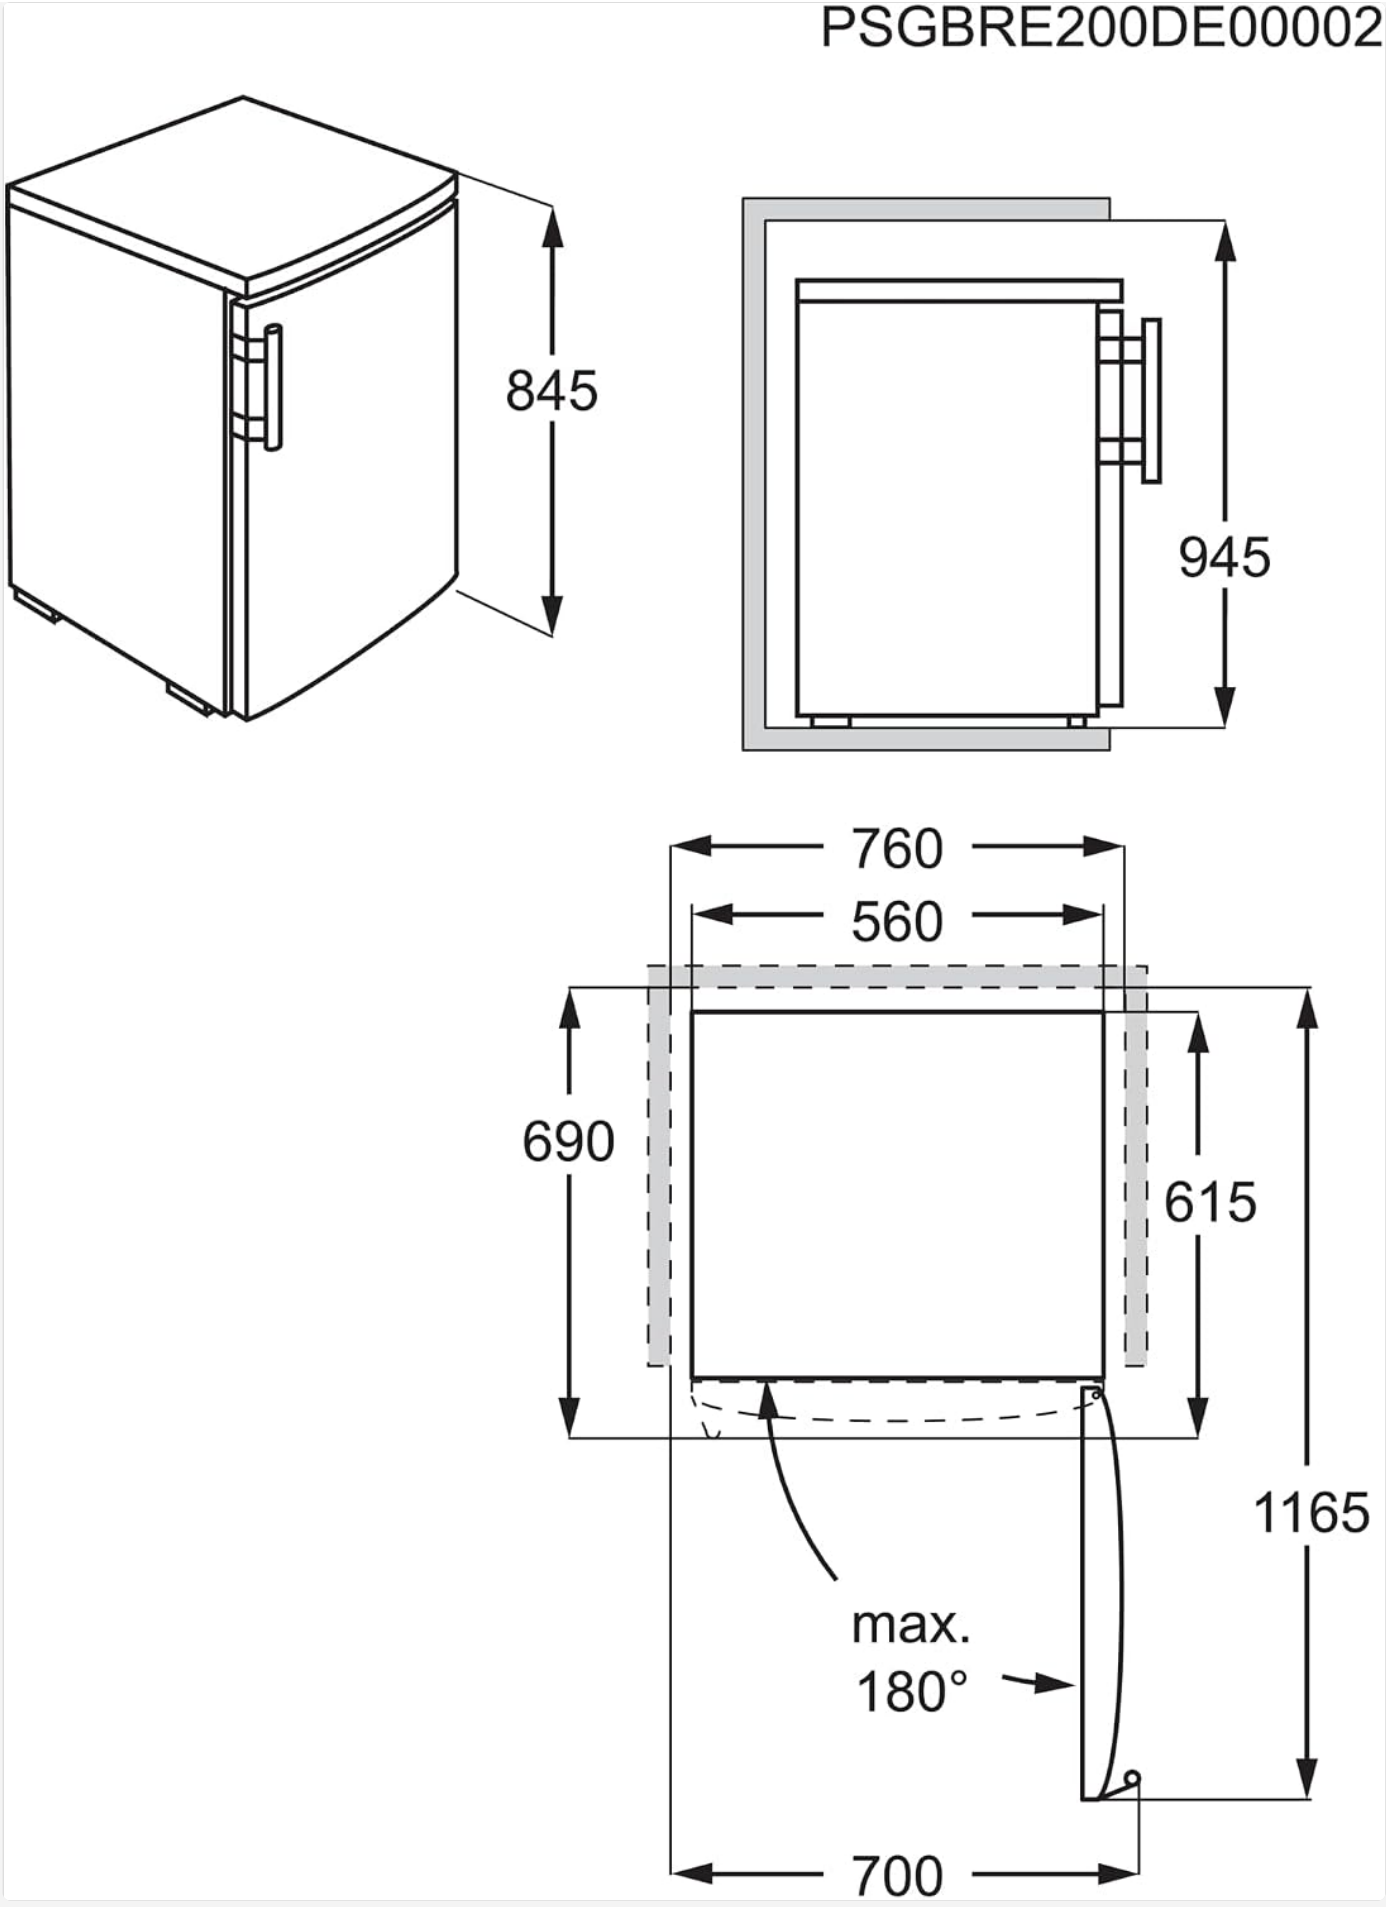


Figure 4.1: Temperature control dial with 'Cold', 'Mid', and 'Colder' settings.

4.2 Food Storage

The freezer is equipped with multiple compartments for organized storage of frozen foods. Utilize the drawers to separate different types of items and maintain optimal freezing conditions.

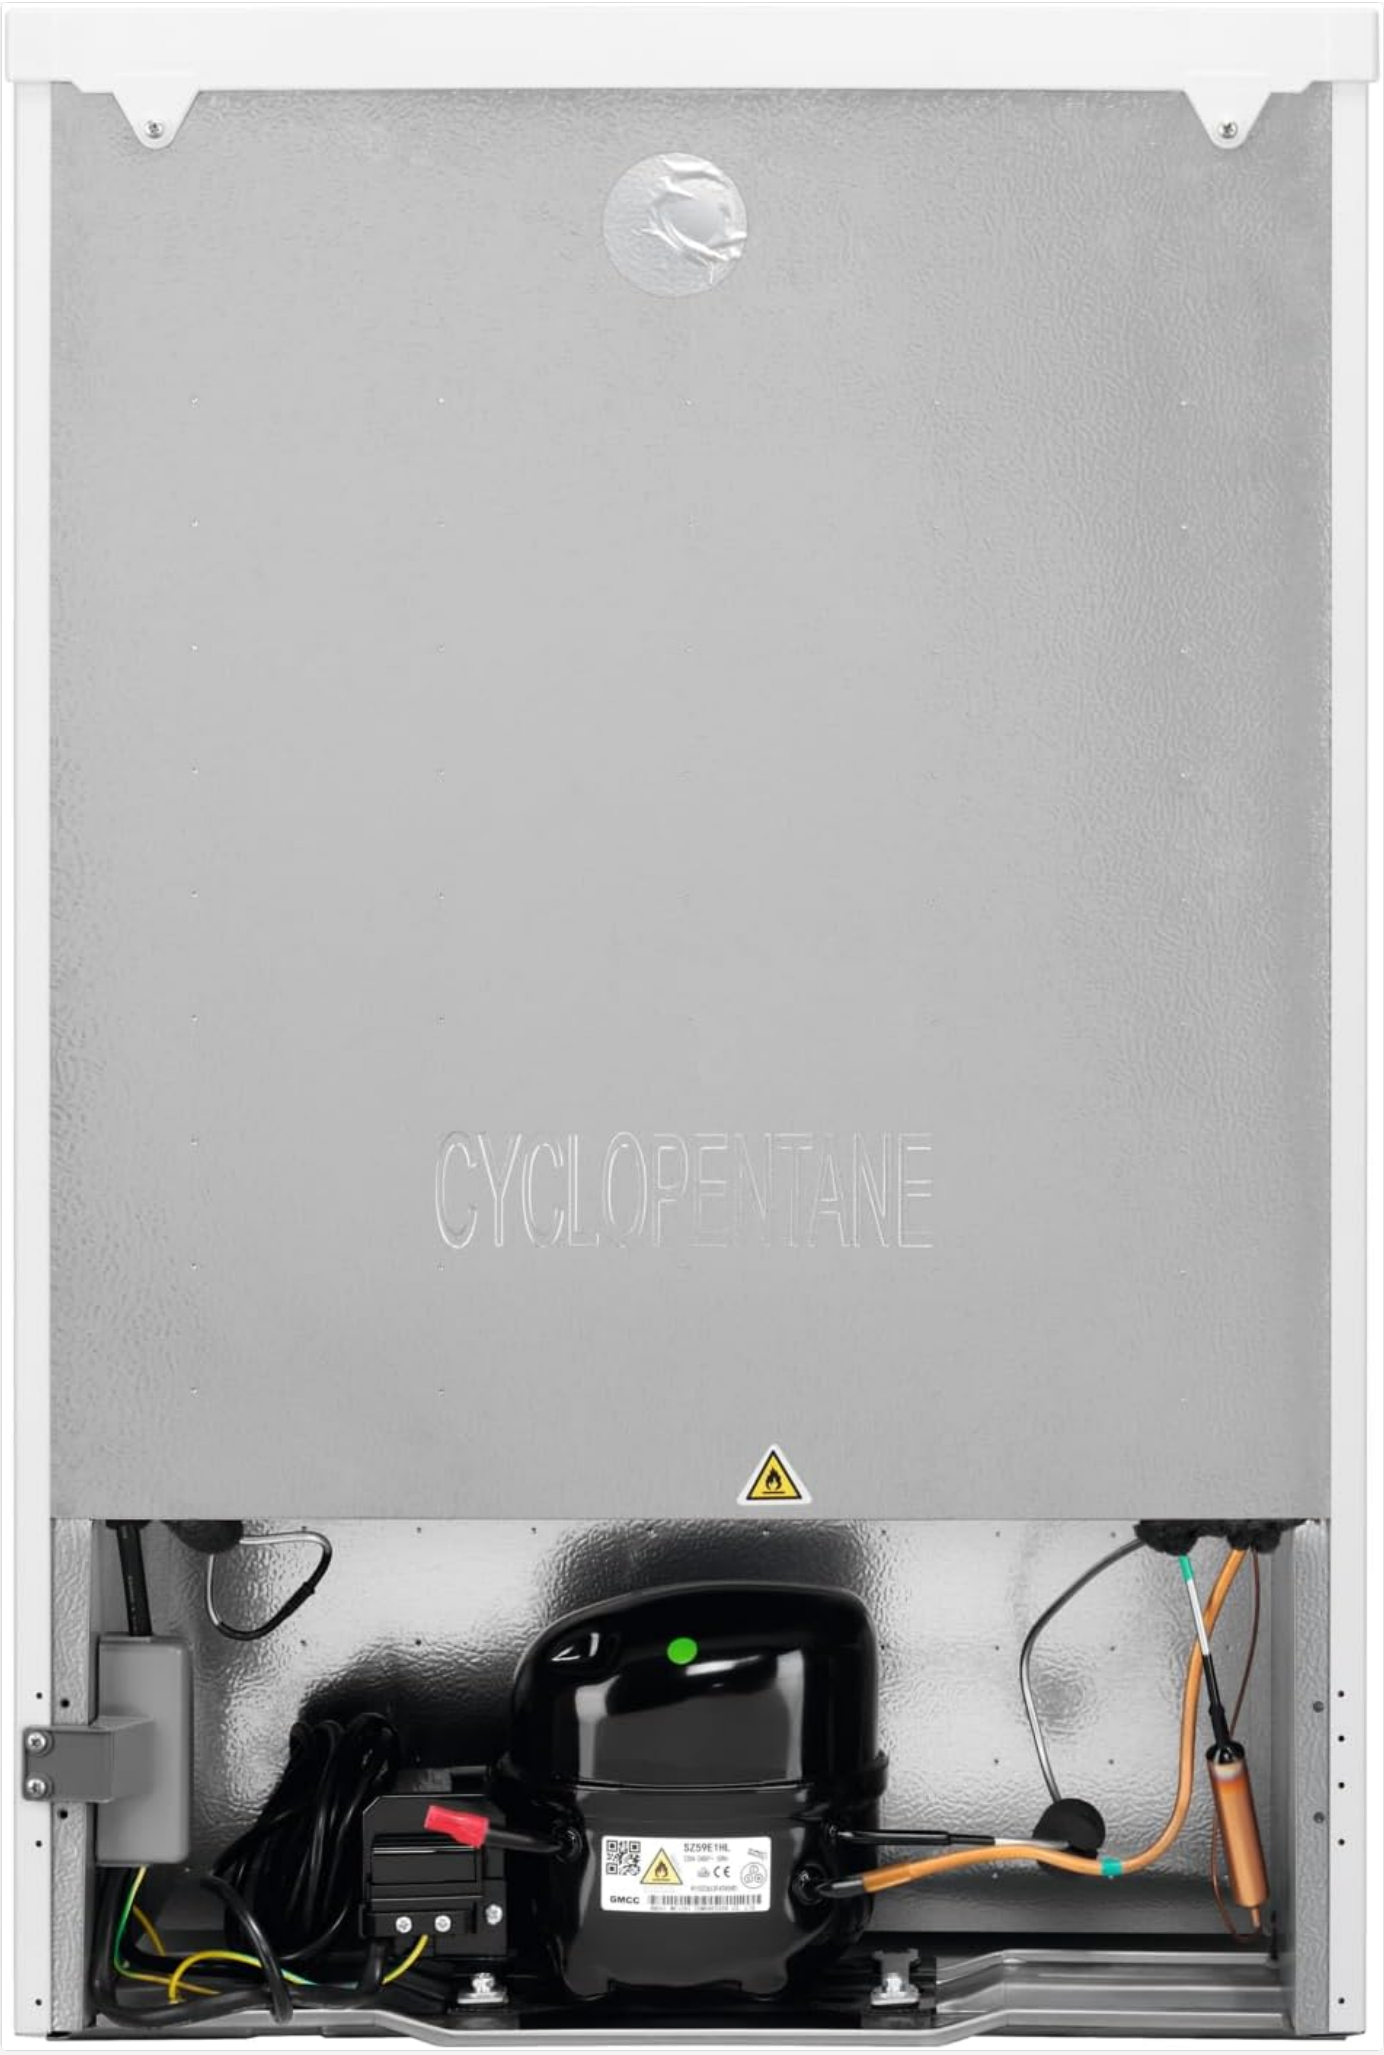

CYCLOPENTANE
SZ59E1HL
GMCC

Figure 4.2: Interior of the freezer showing clear storage drawers for organized food placement.

4.3 Frostmatic Function

The Frostmatic function allows for rapid freezing of fresh food. Activate this function when adding a large quantity of unfrozen food to quickly bring it down to freezing temperature, preserving its quality. Refer to the full manual for specific instructions on activating and deactivating this feature.

5. Maintenance

5.1 Defrosting (LowFrost Technology)

This appliance features LowFrost technology, which significantly reduces ice formation, meaning defrosting works faster and has to be done less often. When a layer of frost approximately 3-5 mm thick has formed, the freezer should be defrosted.

1. Unplug the appliance from the power supply.
2. Remove all food items and store them in a cool place.
3. Leave the freezer door open to allow the frost to melt naturally. Place towels or a shallow tray at the bottom to collect water.
4. Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in and returning food.

5.2 Cleaning

Regular cleaning of your freezer will help maintain its performance and hygiene.

- Clean the interior with a mild detergent and warm water. Avoid abrasive cleaners or solvents.
- Wipe down the exterior surfaces with a soft, damp cloth.
- Clean the door seals regularly to ensure a tight seal.
- Vacuum the condenser coils at the back of the appliance periodically to improve efficiency.

6. Troubleshooting

Before contacting service, please check the following common issues and their solutions:

Problem	Possible Cause	Solution
Freezer does not operate.	No power supply.	Check if the plug is properly inserted and the fuse/circuit breaker is not tripped.
Temperature is not cold enough.	Door not closed properly; excessive door opening; large amount of warm food added; temperature setting too high.	Ensure door is sealed; reduce frequency of door opening; allow new food to cool before adding; adjust thermostat to a colder setting.
Excessive frost build-up.	Door not sealed properly; high humidity.	Check door seals for damage; ensure door is closed completely; defrost as per instructions.

Problem	Possible Cause	Solution
Unusual noises.	Appliance not level; objects vibrating against the unit; normal operating sounds.	Level the appliance; ensure nothing is touching the back or sides; gurgling/hissing sounds are normal refrigerant flow.

7. Specifications

Specification	Value
Brand Name	AEG
Model Info	922 717 086
Item Weight	79.2 pounds (36 Kilograms)
Product Dimensions (LxWxH)	22.64 x 22.05 x 33.27 inches
Capacity	81 Liters
Noise Level	38 dB
Installation Type	Freestanding
Color	White
Voltage	2.3E+2 Volts (AC)
Annual Energy Consumption (Wattage)	164 kWh
Door Hinges	Left
Number of Shelves	3
Date First Available	October 7, 2024

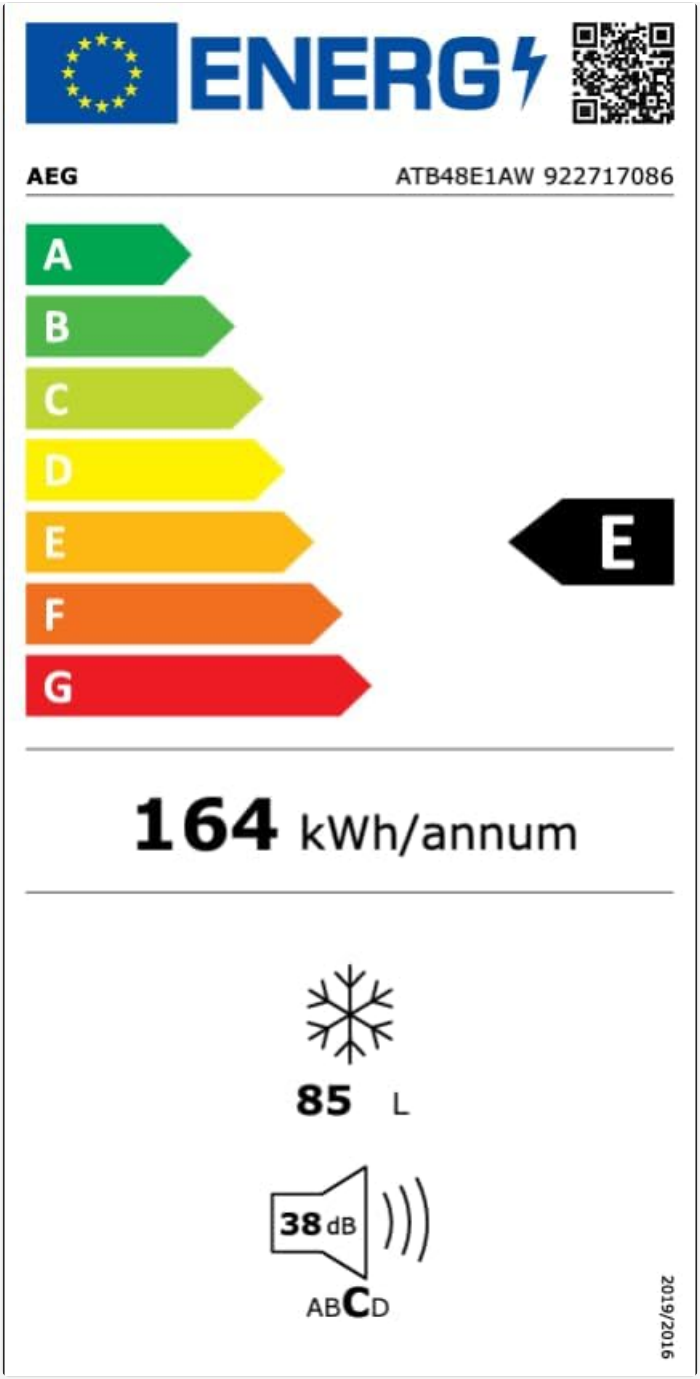


Figure 7.1: Energy Label for the AEG ATB48E1AW, indicating its energy efficiency and key performance metrics.

For more detailed product information, refer to the EPREL database: https://eprel.ec.europa.eu/qr/271510

8. Warranty and Support

8.1 Product Warranty

This AEG appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the duration of coverage and what is covered. Typically, major appliances have a warranty period covering manufacturing defects.
Extended protection plans may also be available for purchase, offering additional coverage beyond the standard manufacturer's warranty. For example, 2-Year and 3-Year Protection Plans are often offered.

8.2 Returns Policy

This product typically includes a 30-day easy returns policy for refund or replacement, subject to the retailer's terms and conditions.

8.3 Customer Support

For technical assistance, spare parts, or service requests, please contact AEG customer support. Have your model number (ATB48E1AW) and serial number ready when contacting support. You can also refer to the official AEG website for support resources and contact details.

For purchases made through third-party sellers, please refer to their specific customer service policies. The current seller for this product is "Express Shipping ".

© 2024 AEG. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08TCC96GC

More documents and user manuals: **https://manuals.plus/**