Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit RMT-AA401U

ZdalaMit RMT-AA401U Replacement Remote Control Instruction Manual

For Sony AV Receiver Models: STR-DH190, STR-DH590, STR-DH790

Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your ZdalaMit RMT-AA401U replacement remote control. This remote is designed to be compatible with specific Sony AV Receiver models without requiring any programming.

Setup

1. Battery Installation

The RMT-AA401U remote control requires two (2) 1.5V AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: ZdalaMit RMT-AA401U Remote Control, angled view. This image displays the layout of the buttons on the remote, including power, input selectors, navigation, and playback controls.


2. Initial Use

No programming or pairing is required for this remote control. Once the batteries are correctly installed, the remote is ready for immediate use with compatible Sony AV Receiver models.

Compatibility Note: This remote is specifically designed for Sony AV Receiver models STR-DH190, STR-DH590, and STR-DH790. Ensure your AV receiver model is listed for proper functionality.

Operating Instructions

The RMT-AA401U remote control provides comprehensive control over your compatible Sony AV Receiver. Below is a general overview of the main button functions:

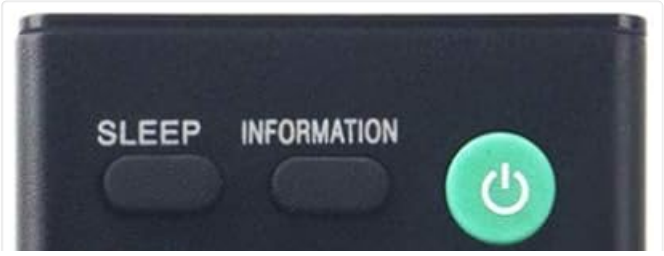


BLUETOOTH
MEDIA BOX
BD/DVD
SAT/ CATV
GAME
SA-CD/ CD
BLUETOOTH
TV
FM
PAIRING
2CH/ MULTI
MOVIE
MUSIC
PURE DIRECT
FRONT SURROUND
NIGHT MODE
DIMMER
DISPLAY
AMP MENU
BACK
OPTIONS
HOME
TUNING–
MEMORY
TUNING+
PRESET–
PRESET+
AV SYSTEM
RMT-AA401U




Image: ZdalaMit RMT-AA401U Remote Control, top-down view. This image provides a clear, direct view of all buttons and their labels on the remote control.

- **Power Button ( )**: Turns the AV receiver on or off.
- **Input Selectors (e.g., BD/DVD, MEDIA BOX, BLUETOOTH, GAME, SA-CD/CD, TV, FM)** Selects the desired input source for the AV receiver.
- **BLUETOOTH PAIRING**: Initiates Bluetooth pairing mode for connecting devices.
- **SLEEP**: Sets a sleep timer for the AV receiver.
- **INFORMATION**: Displays information about the current input or content.
- **DISPLAY**: Changes the display mode or information shown on the AV receiver's screen.
- **Sound Field Buttons (e.g., 2CH/MULTI, PURE DIRECT, SURROUND, NIGHT MODE)** Selects various sound modes and audio processing options.
- **DIMMER**: Adjusts the brightness of the AV receiver's display.
- **AMP MENU**: Accesses the amplifier's main menu for settings adjustments.
- **Navigation Buttons (Up, Down, Left, Right, Enter/Center)**: Used to navigate menus and confirm selections.
- **BACK**: Returns to the previous menu or screen.
- **HOME**: Accesses the main home menu of the AV receiver.
- **OPTIONS**: Displays contextual options for the current function.
- **Volume Control (+ / –)**: Adjusts the master volume level.
- **Mute ( )**: Mutes or unmutes the audio output.
- **Tuning Buttons (TUNING– / TUNING+)**: Used for manual tuning of radio stations.
- **Preset Buttons (PRESET– / PRESET+)**: Navigates through preset radio stations.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Previous Track, Stop, Next Track)**: Controls media playback for connected devices.
- **MEMORY**: Stores or recalls settings, often used for radio presets.

Maintenance

1. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new 1.5V AAA ALKALINE batteries. Do not mix old and new batteries, or different types of batteries.

2. Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **Remote not responding:**
  - Ensure the batteries are correctly installed with the correct polarity.
  - Replace old batteries with new 1.5V AAA ALKALINE batteries.
  - Check for any obstructions between the remote control and the AV receiver's infrared sensor.
  - Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the AV receiver.
- **Specific functions not working:**
  - Verify that your AV receiver model (STR-DH190, STR-DH590, or STR-DH790) is compatible with this remote. This remote is not compatible with sound bars or other Sony devices not listed.
  - Ensure the AV receiver is powered on and the correct input source is selected.

Specifications

Feature	Detail
Model Name	RMT-AA401U
Brand	ZdalaMit
Compatible Devices	Sony AV Receivers (STR-DH190, STR-DH590, STR-DH790)
Connectivity Technology	Infrared (IR)
Power Supply	2 x 1.5V AAA ALKALINE Batteries
Maximum Range	10 Meters
Color	Black
Item Weight	40 Grams
Item Dimensions (L x W x H)	6.3" x 1.7" x 0.55"

Warranty and Support

Warranty Information

This product comes with a**1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

Customer Support

For any queries or assistance regarding your ZdalaMit RMT-AA401U remote control, please refer to the seller's contact information provided at the point of purchase. Ensure you have your purchase details and product model number available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08VNDB9QK

More documents and user manuals: **https://manuals.plus/**