Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Outsunny 84C-210BG

Outsunny 10' x 12' Outdoor Gazebo Instruction Manual

Model: 84C-210BG

Brand: Outsunny

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your Outsunny 10' x 12' Outdoor Gazebo. Please read all instructions carefully before assembly and use to ensure safe and proper installation and function.

Safety Information

- Always secure the gazebo to a stable foundation using the provided ground stakes.
- Exercise caution when assembling and disassembling the double-tier roof and mesh sidewalls to avoid injury.
- Keep children and pets away from the gazebo during assembly, disassembly, and in windy conditions.

Warning: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Package Contents

Before beginning assembly, verify that all parts listed in the parts diagram (not included in this text) are present and undamaged. If any parts are missing or damaged, contact customer support.

Typical components include:

- Steel Frame Components (legs, beams, roof supports)
- Polyester Canopy Fabric (main roof, vented top)
- Mesh Sidewalls with Zippers
- Corner Curtains
- Ground Stakes
- Assembly Hardware (screws, bolts, washers, nuts, Allen wrench)

Assembly Instructions

Assembly typically requires two or more adults. An electric drill with appropriate bits may expedite the process, but exercise care to avoid overtightening.

Step 1: Unpack and Identify Parts

Carefully unpack all components and lay them out. Refer to the parts list (not provided here) to identify each piece.

Step 2: Assemble the Main Frame

Connect the main support legs and horizontal beams according to the diagram. Ensure all connections are secure but do not fully tighten bolts until the frame is complete.



Image: The fully assembled Outsunny Gazebo, showcasing its main structure, mesh sidewalls, and decorative corner curtains.

Step 3: Install the Roof Structure

Attach the roof support beams to the main frame. This step may require lifting and holding pieces in place.



Image: An underside view of the gazebo's roof frame, showing the central hook for hanging lights or fans.

Step 4: Attach the Canopy Fabric

Drape the main canopy fabric over the roof structure. Ensure the double-tier vent is correctly positioned at the top. Secure the canopy to the frame as instructed.



Image: A close-up view of the gazebo's double-tier arc roof, designed to facilitate air circulation and allow rainwater to slide off smoothly.

Step 5: Install Mesh Sidewalls and Curtains

Attach the mesh sidewalls and corner curtains to the frame using the integrated hanging loops or straps. The mesh sidewalls feature zippered openings for access.



Not curtains, just for decoration and protecting the column

Image: The gazebo with its netting sidewalls fully deployed, creating an enclosed and comfortable space.



Image: The gazebo with its sidewalls tied back, offering an open-air experience.



Image: A detailed view of a hook and loop strap used to easily tie back the curtains.



Image: A composite image detailing various features: a hook and loop strap for curtains, a double-sided zipper for mesh access, feet with pre-drilled holes for ground stakes, and a hanging loop design for easy curtain attachment.

Step 6: Secure the Gazebo

Once fully assembled, use the provided ground stakes to anchor the gazebo's feet to the ground. This is crucial for stability, especially in windy conditions.

Operating Instructions

Using the Mesh Sidewalls

The mesh sidewalls can be zipped closed to provide protection from insects or zipped open and tied back for an open-air environment. Use the double-sided zippers for convenient access.

Utilizing the Ceiling Hook

A hook is located in the center of the roof structure. This can be used to hang lightweight items such as a lamp or decorative lighting. Ensure any hung items do not exceed the weight capacity of the hook.

Maintenance

Cleaning

- **Canopy and Sidewalls:** Clean the polyester fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storage.
- **Frame:** Wipe the steel frame with a damp cloth. Inspect for any signs of rust and treat as necessary.

Seasonal Care and Storage

- In anticipation of strong winds, heavy rain, or snow, it is recommended to disassemble the canopy and sidewalls to prevent damage.
- Store the fabric components in a dry, protected area during off-seasons to prolong their lifespan.
- Regularly check all bolts and connections for tightness and re-tighten as needed.

Troubleshooting

- **Instability:** Ensure all frame connections are securely tightened and the gazebo is properly anchored with ground stakes. Consider additional anchoring methods for increased stability in high-wind areas.
- **Water Leaks:** Verify that the canopy fabric is correctly installed and taut. The double-tier roof is designed for water runoff, but persistent leaks may indicate improper installation or damage to the fabric.
- **Difficulty Assembling Roof Panels:** Some users report that roof panel holes may not align perfectly. Patience and slight adjustments during assembly are often required. It is recommended to have at least two people for roof assembly.

Specifications

Feature	Detail
Brand	Outsunny
Model Number	84C-210BG
Overall Dimensions	143.75"L x 118"W x 118"H (12'L x 9.8'W, Top Height: 9.8', Eaves Height: 6.6')
Material	Alloy Steel Frame, Polyester Canopy
Item Weight	77.2 Pounds
Water Resistance	Waterproof
UV Protection	Yes
Assembly Required	Yes
Color	Beige

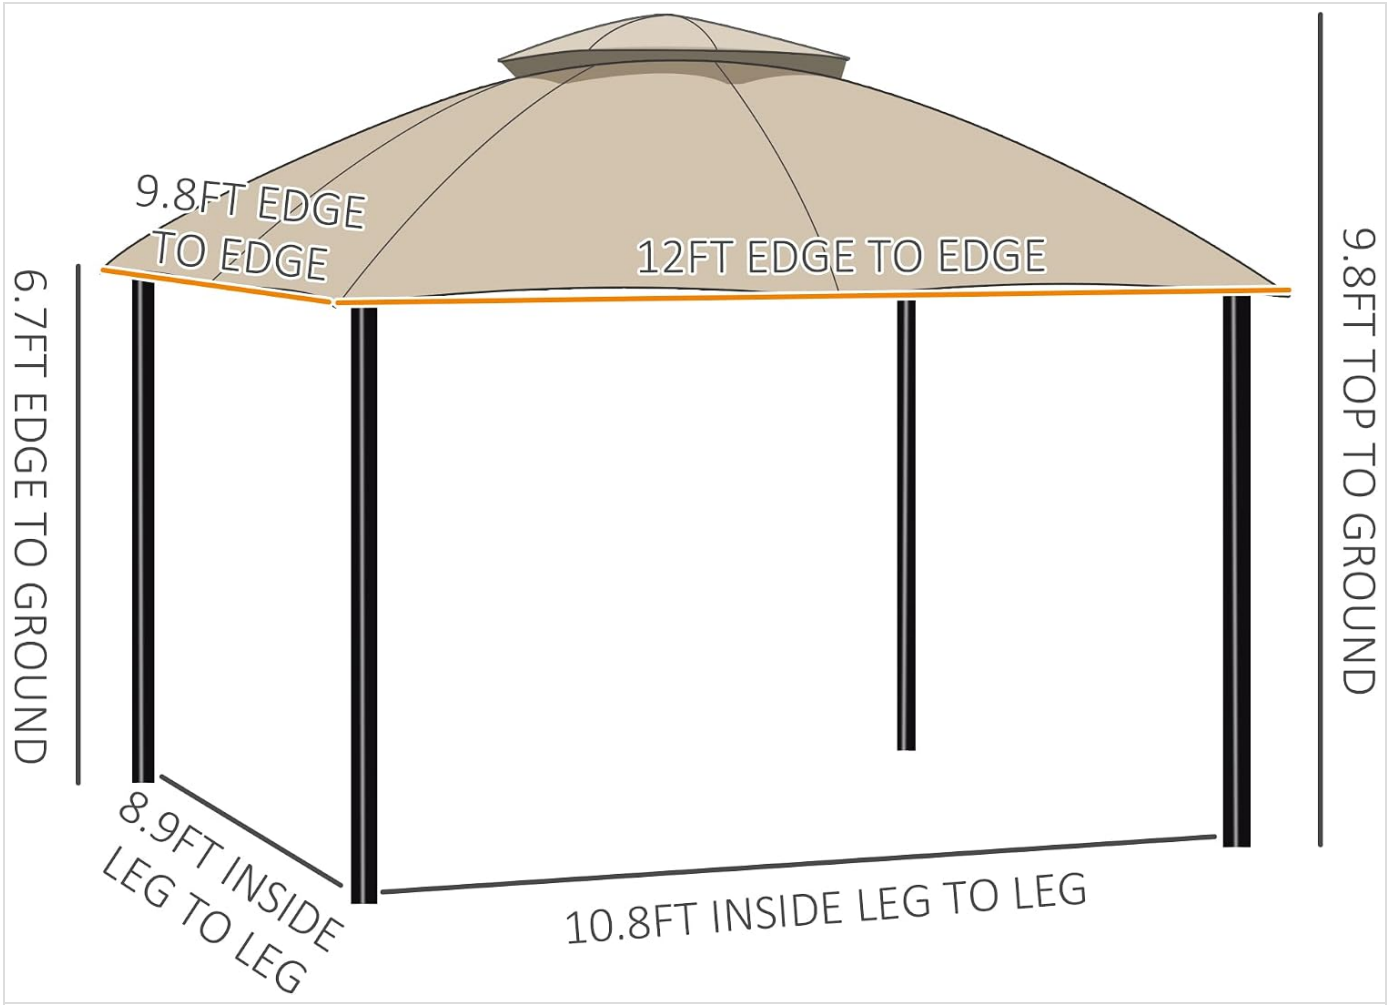


Image: A diagram illustrating the key dimensions of the gazebo, including edge-to-edge measurements and height from top to ground.

Warranty and Support

For warranty information, missing parts, or technical support, please contact Outsunny customer service directly. Refer to your purchase documentation for specific contact details.

Disposal

When the product reaches the end of its useful life, dispose of it responsibly according to local regulations. Consider recycling metal and fabric components where facilities exist.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08VYSB9QT

More documents and user manuals: **https://manuals.plus/**