Nippon RCN-SAM809

Nippon RCN-SAM809 Universal Remote Control for Samsung TVs

User Manual

Introduction

This manual provides instructions for the setup, operation, and maintenance of your Nippon RCN-SAM809 Universal Remote Control. This remote is designed to be compatible with a wide range of Samsung LCD, LED, HDTV, and Smart TV models, offering a direct replacement for your original remote without requiring complex programming.



Image: Front view of the Nippon RCN-SAM809 Universal Remote Control, showing all buttons and its ergonomic design.

Setup

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

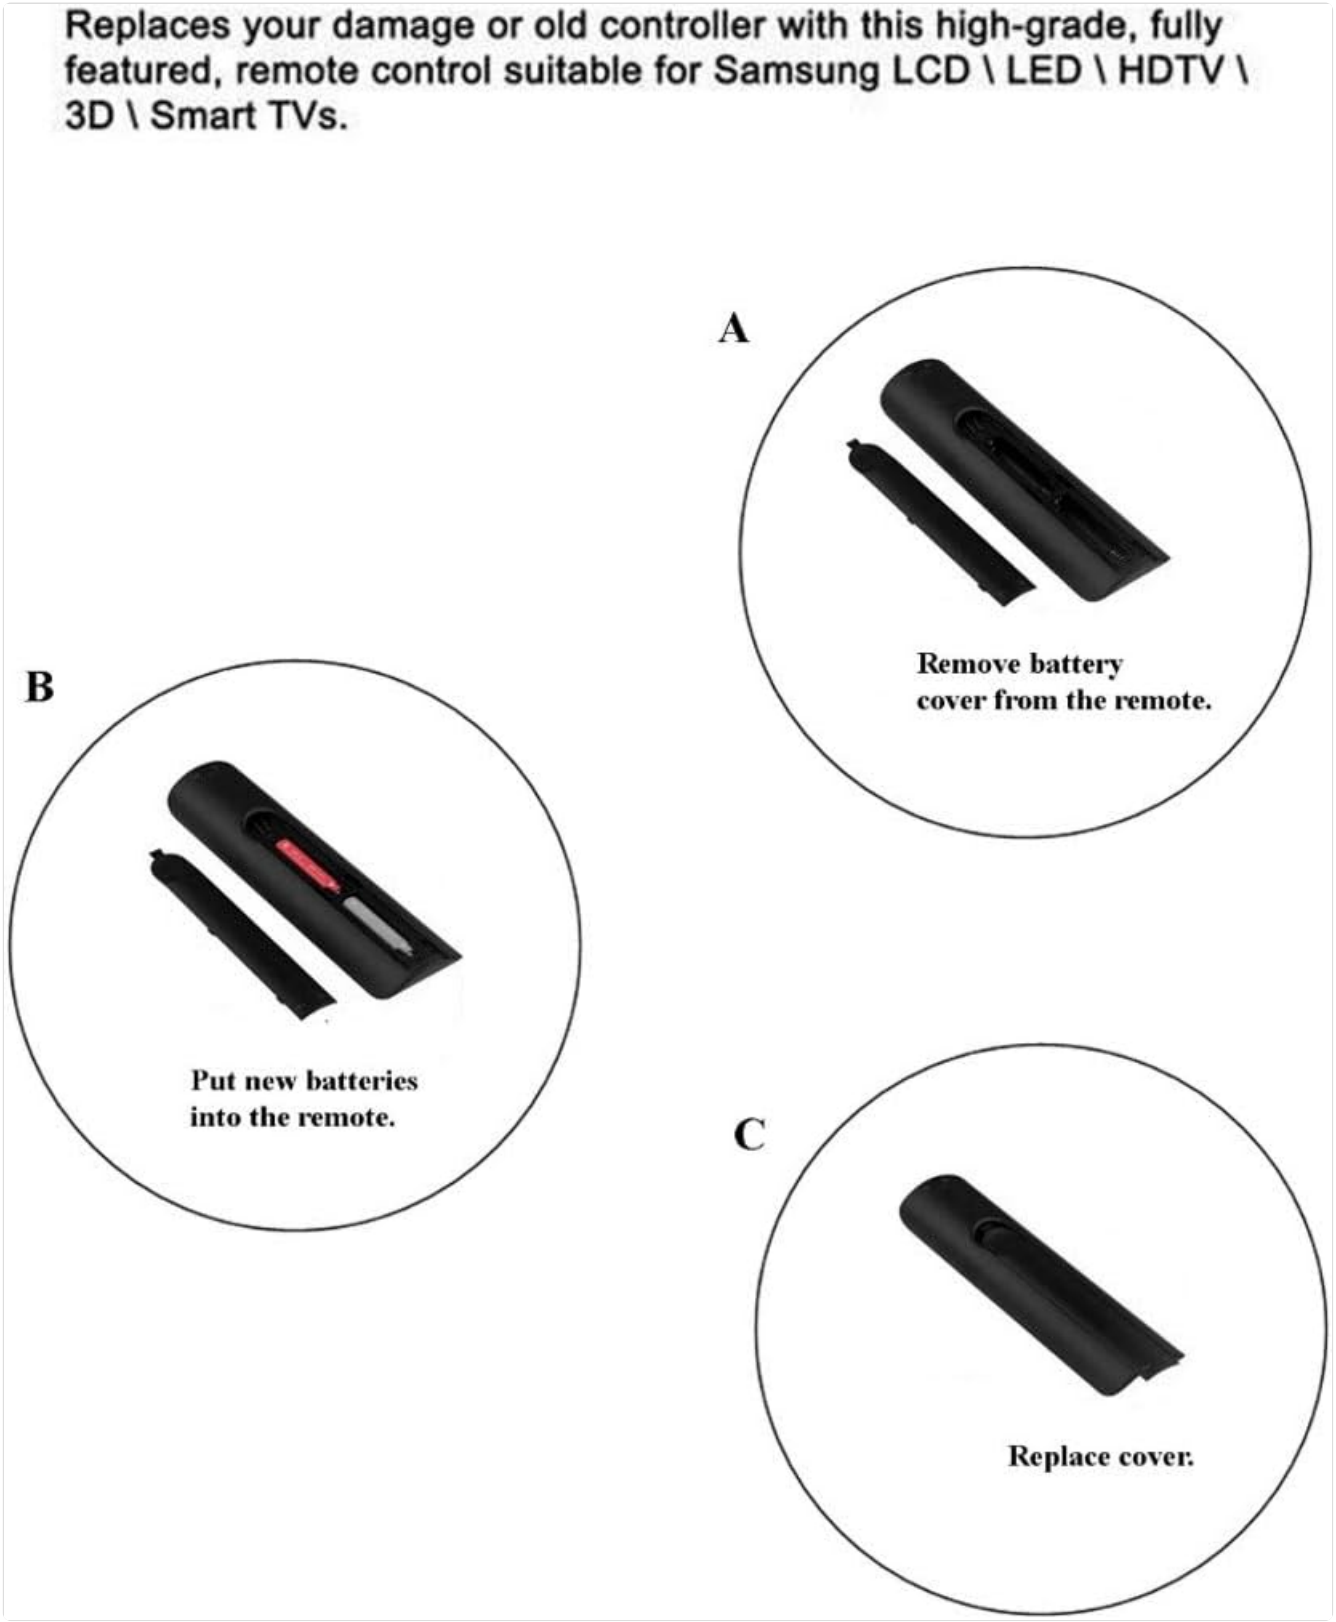


Image: A three-part diagram illustrating how to remove the battery cover, insert new AAA batteries, and replace the cover on the remote control.

2. Initial Use (No Programming Required)

This Nippon Universal Remote Control is pre-programmed for Samsung TVs. No additional programming or pairing is required. Once batteries are installed, the remote is ready for immediate use with compatible Samsung television models.

Operating Instructions

Familiarize yourself with the functions of the buttons on your remote control:



Image: A detailed diagram of the remote control, labeling each button and describing its primary function, such as Power, Source, Volume, Channel, Mute, Menu, Smart Hub, Tools, Info, Return, Exit, and colored shortcut buttons.

POWER (Red Button): Turns the TV on and off.

SOURCE: Displays and selects available video input sources (e.g., HDMI 1, AV).

VOL +/-: Adjusts the volume level.

CH +/-: Changes TV channels.

MUTE: Mutes or unmutes the TV sound.

CH LIST: Displays the list of available channels on the screen.

SMART HUB: Accesses Smart Hub applications (for Smart TV models).

MENU: Displays the main on-screen menu.

TOOLS: Provides quick access to frequently used functions or settings.

INFO: Displays information about the current program or input.

RETURN: Returns to the previous menu or screen.

EXIT: Exits the current menu or application.

Color Buttons (YELLOW/BLUE/RED/GREEN): Provide shortcut keys for interactive functions within certain applications or menus.

Maintenance

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

Troubleshooting

- **Remote is not responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Make sure you are within the effective operating range of the TV.
- **Certain buttons are not working:**
  - This remote is designed to replicate the functions of original Samsung remotes. Some advanced or specific functions of your particular TV model might not be directly supported if they were unique to the original remote's layout or software.
  - Ensure the TV is powered on and not in a menu or mode that restricts button functionality.

Specifications



Image: A graphic detailing the remote's specifications, including compatibility with various Samsung TV models and key features.

Model	RCN-SAM809
Brand	Nippon
Compatible Devices	Samsung LCD, LED, HDTV, 3D Smart TVs
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)

Dimensions (Approx.)	9 x 1.85 x 1.5 inches (22.86 x 4.7 x 3.81 cm)
Item Weight (Approx.)	3.2 ounces (90.7 grams)
Material	High-grade ABS plastic
Special Features	Ergonomic, Universal, No programming required

Compatible Samsung TV Models (Partial List):

This remote is compatible with a broad range of Samsung TV models, including but not limited to those listed below. For a comprehensive list, refer to the product packaging or manufacturer's website.

- BN59-01199F, AA59-00666A, AA59-00741A, AA59-00600A, AA59-00622A, BN59-01178W, AA59-00786A, AA59-00602A, AA59-00603A, AA59-01180A, AA59-01289A, BN59-01268D, BN59-01175N
- LE19D450, LE22D450, LE32D450, LE32D550, LE32D580, LE37D550, LE37D580, LE40D550, LE40D580, LE46D550, LE46D580
- PS43D450, PS51D450, PN43E440A2F, PN43E450A1F, PN51E440A2F, PN51E450A1F, PN51E530A3F, PN51E535A3F, PN60E530A3F, PN60E535A3F
- T22B350ND, T24B350ND, T27B350ND, T28D310NH
- UN19F4000AF, UN22F5000AF, UN26EH4000F, UN29F4000AF, UN32EH4000F, UN32EH4050F, UN32EH5000F, UN32F5000AF, UN32F5050AF, UN37EH5000F
- UE40F5000, UE39F5000, UE42F5000, UE46F5000, UE50F5000
- UN39FH5000F, UN40EH5000F, UN40EH5050F, UN40EH6000F, UN40EH6050F, UN40F5000AF, UN46EH5000F, UN46EH5050F, UN46EH6000F, UN46F5000AF
- UN50EH5000F, UN50EH5000V, UN50EH6000F, UN50EH6050F, UN50F5000AF, UN55EH6000F, UN55EH6050F, UN60EH6000F, UN60EH6050F, UN65EH6000F, UN65EH6050F

© 2023 Nippon. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question