Helohome HLT16W

Helohome Portable Washing Machine User Manual

Model: HLT16W

1. Introduction

Welcome to the Helohome Portable Washing Machine user manual. This document provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before using the washing machine and retain it for future reference.

2. Safety Instructions

- Always ensure the washing machine is connected to a properly grounded electrical outlet.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children away from the appliance during operation. Utilize the Child Lock function to prevent accidental operation or injury.
- Never reach into the washer while it is spinning.
- Avoid washing items contaminated with gasoline or other flammable substances.
- Do not overload the machine. Refer to the capacity guidelines for optimal performance.
- Ensure proper water supply and drainage connections to prevent leaks.

3. Product Overview

The Helohome Portable Washing Machine (Model HLT16W) is a full-automatic compact washer designed for convenience in smaller living spaces. It features a 1.6 cu. ft. capacity, capable of holding up to 11 lbs of laundry.

Key Features:

- **Space-saving Design:** Compact dimensions (20.28"W x 20.67"D x 36.61"H) for easy storage.
- **User-Friendly Controls:** 6 common wash programs (Normal, Heavy, Delicate, Quick, Bulky, Spin Only), 3 water temperatures (Hot, Warm, Cold), and 3 water levels (Large, Medium, Small).
- **Time Management:** Delay function allows scheduling washes, and Procedure function for quick adjustments.
- **Safety:** Child Lock function and automatic stop when the lid is opened.
- **Portability:** Equipped with wheels for easy movement.
- **Energy Efficient:** Estimated annual energy consumption of $8, certified by the US Department of Energy.

Product Visuals:





Figure 3.1: Front view of the Helohome Portable Washing Machine.



Figure 3.2: Side and front dimensions of the washing machine.



Figure 3.3: Detailed view of the control panel with program and setting options.

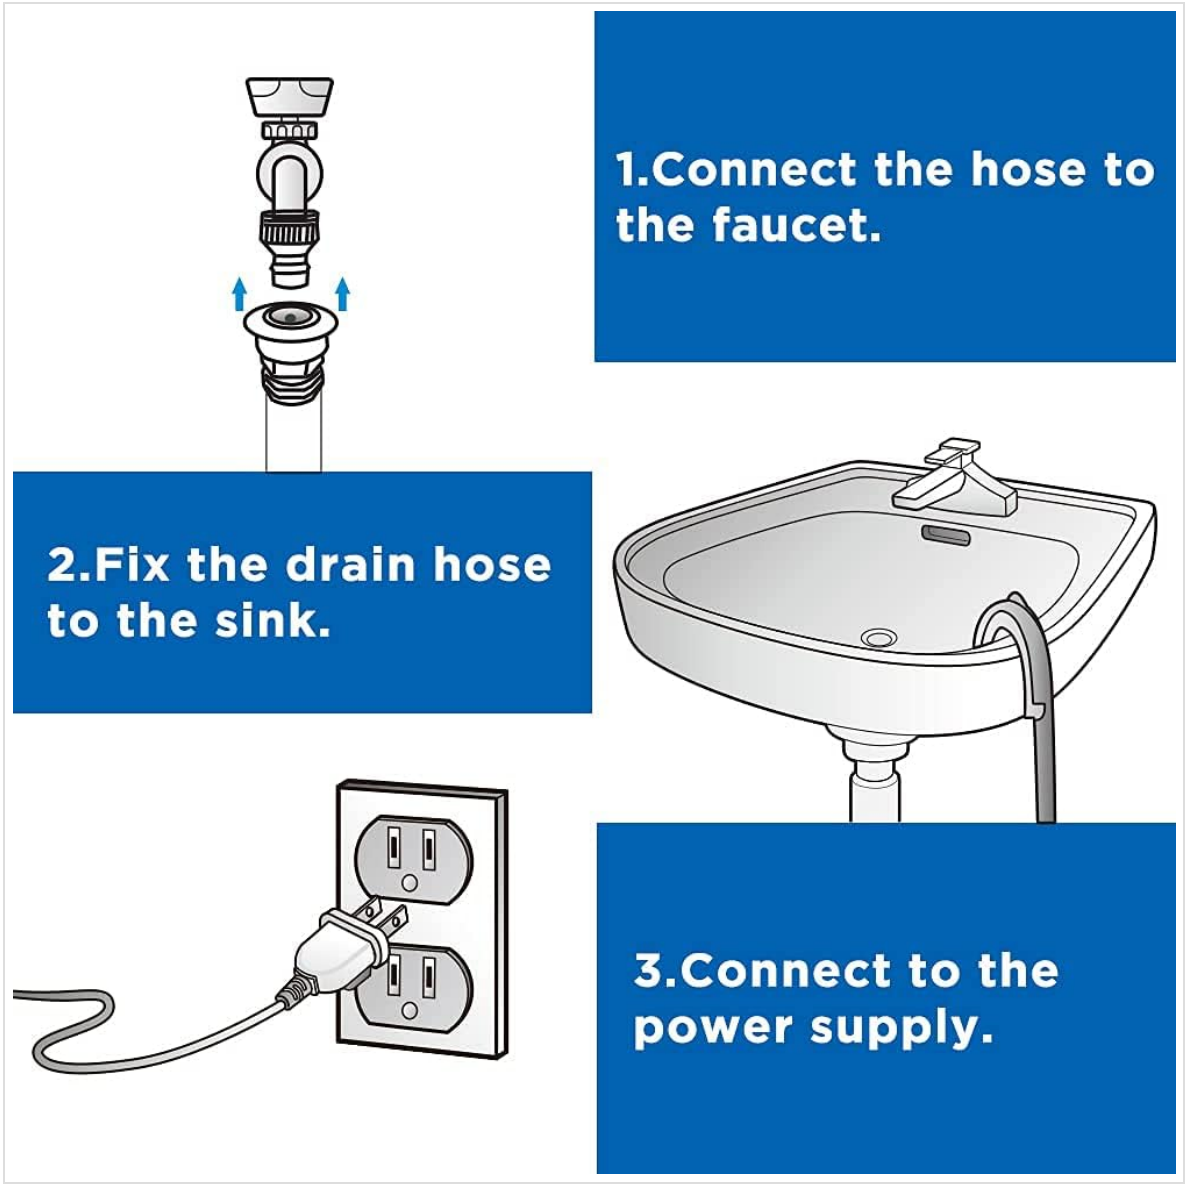


Figure 3.4: Interior of the stainless steel wash tub with pulsator.

4. Setup

The Helohome Portable Washing Machine is designed for easy installation. Follow these steps to set up your appliance.

4.1 Unpacking and Initial Preparation

- Carefully remove the washing machine from its packaging.
- Install the bottom cover using a Philips screwdriver and the provided screws.
- Ensure the machine is placed on a stable, level surface.

4.2 Water Connections

The machine includes inlet hoses and a quick connection adapter for faucet attachment.



Figure 4.1: Included inlet hoses and quick connection adapter.

1. Connect the inlet hoses to the hot and cold water inlets on the back of the machine.
2. Attach the quick connection adapter to your faucet.
3. Connect the other end of the inlet hoses to the quick connection adapter.

4.3 Drain Hose Connection

The drain hose should be securely placed into a sink or a suitable drainage system.

4.4 Power Supply

Plug the washing machine into a standard 120V (AC) electrical outlet.





Figure 4.2: Visual guide for connecting the hose to the faucet, fixing the drain hose to the sink, and connecting to the power supply.

4.5 Installation Video Guide

Video 4.1: Official installation guide for the Nictemaw portable washing machine, demonstrating hose connections and setup.

5. Operating Instructions

Your Helohome washing machine offers various settings to suit different laundry needs.

5.1 Control Panel Overview

The intuitive control panel allows for easy selection of wash programs, water levels, and temperatures. The LED display shows the remaining time, and the see-through lid allows monitoring of the wash cycle.

5.2 Selecting a Wash Program

Choose from 6 pre-set programs:

- **Normal:** For everyday laundry.
- **Heavy:** For heavily soiled items.
- **Delicate:** For fragile garments.
- **Quick:** For lightly soiled items needing a fast wash.
- **Bulky:** For larger items like blankets or towels.
- **Spin Only:** To extract excess water from clothes.

5.3 Water Temperature and Level

Adjust water temperature (Hot, Warm, Cold) and water level (Large, Medium, Small) according to your laundry requirements.

5.4 Delay and Procedure Functions

- **Delay Function:** Set a delayed start time for your wash cycle.
- **Procedure Function:** Allows for quick adjustments to the wash cycle duration.

5.5 Child Lock

To activate the Child Lock, press and hold the "Temp" and "Program" buttons simultaneously for 3 seconds. This locks all control panel buttons and pauses operation if the lid is opened, enhancing safety.

5.6 Operation Demonstration Video

Video 5.1: A merchant video demonstrating the operation and features of the Helohome 1.6 cu. ft. Portable Washer.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Lint Filter

The machine is equipped with a built-in filter to capture lint and debris. Regularly remove and clean this filter to maintain washing efficiency and prevent blockages.

1. Locate the lint filter inside the wash tub.
2. Gently pull out the filter.
3. Remove any accumulated lint or debris.
4. Rinse the filter under running water.
5. Reinsert the clean filter securely into its slot.

6.2 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

6.3 Interior Cleaning

Periodically run a tub clean cycle (if available) or a normal wash cycle with hot water and a washing machine cleaner to prevent odor and residue buildup.

7. Troubleshooting

If you encounter issues with your washing machine, consult this section before contacting customer service.

- **Machine Not Starting:** Ensure the power cord is securely plugged in and the lid is properly closed. Check if the Child Lock is activated.
- **Water Not Filling:** Verify that the water supply is turned on and the inlet hoses are correctly connected and not kinked.
- **Water Not Draining:** Check the drain hose for kinks or blockages. Ensure the drain hose is positioned correctly in the sink or drain.
- **Excessive Vibration/Noise:** Ensure the machine is on a level surface. Redistribute the laundry inside the tub to balance the load.
- **Clothes Still Wet After Spin:** The load might be unbalanced or too heavy. Remove some items and try the spin cycle again.
- **Program Skipping:** Ensure stable power supply and proper water pressure. If the issue persists, contact customer support.

8. Specifications

Detailed technical specifications for the Helohome Portable Washing Machine HLT16W.

Specification	Value
Brand Name	Helohome
Model Info	HLT16W
Item Weight	70.4 pounds
Product Dimensions	20.28 x 20.67 x 36.61 inches
Efficiency	Energy Efficiency
Capacity	1.6 Cubic Feet
Annual Energy Consumption	63 Kilowatt Hours Per Year
Max Spin Speed	700 rpw
Noise	62 Decibels

Specification	Value
Installation Type	Freestanding
Part Number	MAS50-1106PS/01M-US
Special Features	Portable, LED Display, Compact
Color	Pearl White
Control Console	Push Button
Standard Cycles	6
Access Location	Top Load
Voltage	120 Volts (AC)
Certification	Energy Star
Material Type	Plastic, Stainless Steel
Included Components	Bottom coverX1, ScrewX1, inlet hosesX2, plastic hole plugX1, washing machineX1

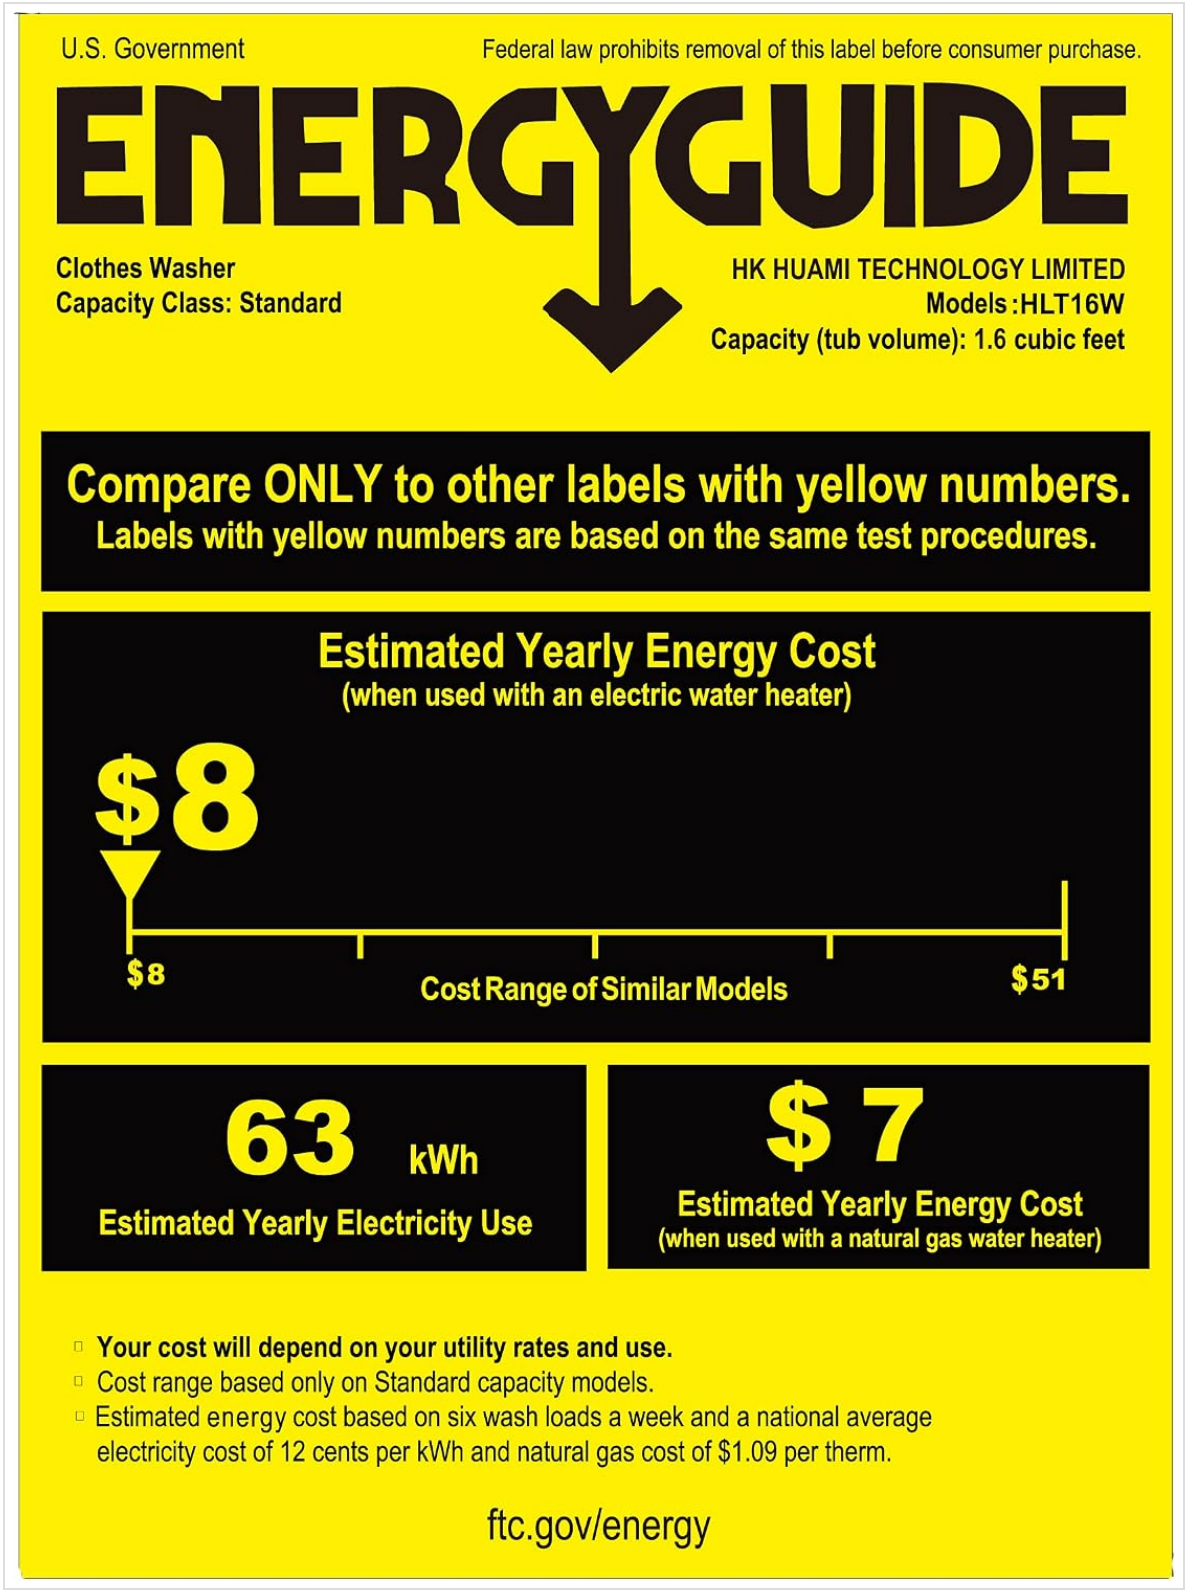


Figure 8.1: Energy Guide for the Helohome HLT16W, indicating low annual energy consumption.

9. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your product or contact Helohome customer service. Keep your purchase receipt for warranty claims.