**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**Outsunny 862-030**

# Outsunny Wicker Chaise Lounge Chair Instruction Manual

Model: 862-030 | Brand: Outsunny

## 1. Introduction

Thank you for purchasing the Outsunny Wicker Chaise Lounge Chair. This manual provides important information regarding the safe assembly, operation, maintenance, and care of your new lounge chair. Please read these instructions thoroughly before assembly and use, and retain them for future reference.

### Safety Warnings

- This chair is designed to recline, which may cause you to fall asleep. Always use caution when adjusting the backrest.
- Assembly is required. Follow the instructions carefully to ensure safe setup.
- This chair has a maximum weight capacity of 352 pounds (160 kg). Exceeding this limit may cause instability or damage to the chair.
- Ensure all bolts and connections are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not stand on the chair.
- Keep children and pets away from the assembly area.

## 2. Product Features

The Outsunny Wicker Chaise Lounge Chair offers several features designed for comfort and convenience:

- **Body-Contouring Design:** Features an "S" shape for ergonomic comfort.
- **Plush Cushioning:** Fully cushioned surface for enhanced relaxation.
- **5-Level Adjustable Backrest:** Allows for multiple reclining positions.
- **Integrated Wheels:** Two large wheels for easy movement and portability.
- **Durable Construction:** Hand-woven PE rattan over a heavy-duty steel frame.

- **Weather-Ready Materials:** Designed for outdoor use.



*Image: The Outsunny Wicker Chaise Lounge Chair with its gray cushion, set on a patio next to a small table and potted plants.*

## 3. Package Contents

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Chaise Lounge Frame (PE Rattan and Steel)
- Seat and Back Cushions (Polyester with Cotton Fill)
- Wheels (2x)
- Hardware Pack (Bolts, Washers, Wrench)

- User Manual (This document)

## 4. Assembly Instructions

Assembly of the Outsunny Wicker Chaise Lounge Chair is required. Please follow the detailed step-by-step instructions provided in the separate assembly guide included in your package. Ensure you have sufficient space and all tools listed in the guide before starting.

### General Assembly Tips:

- Lay out all components on a soft, clean surface to prevent scratches.
- Do not fully tighten bolts until all components are loosely assembled.
- Seek assistance if needed, especially when handling larger parts.



*Image: The Outsunny Wicker Chaise Lounge Chair, fully assembled, ready for use on a patio.*

## 5. Operating Instructions

### Adjusting the Backrest

The chaise lounge features a 5-level adjustable backrest. To adjust the backrest:

1. Slightly lift the backrest to disengage it from its current position.
2. Move the backrest to your desired angle.

3. Ensure the support bar securely locks into one of the five notches.




*Image: A diagram illustrating the five adjustable positions of the chaise lounge backrest, with height measurements in centimeters and inches.*

## Moving the Chaise Lounge

The chaise lounge is equipped with two large wheels for easy portability.

1. Slightly lift the front end of the chaise lounge.
2. Roll the chair to your desired location using the wheels.
3. Gently lower the front end once positioned.




*Image: A close-up view of the two large, flexible wheels attached to the back of the chaise lounge, designed for easy relocation.*

### Product Overview Video

Your browser does not support the video tag.

*Video: An official product video from Aosom Direct showcasing the Outsunny Patio Wicker Cushioned Chaise Lounge Chair, highlighting its features and design.*

## 6. Maintenance and Care

Proper maintenance will extend the life and appearance of your chaise lounge chair.

## Cushion Care

- The cushion covers are removable and can be dry cleaned. Refer to the care label on the cushion for specific instructions.
- Store cushions indoors during inclement weather or when not in use for extended periods to prevent fading and mildew.



*Image: A close-up view of the zipper on the chaise lounge cushion, indicating removable covers for cleaning.*

## Frame Care (PE Rattan and Steel)

- Wipe the PE rattan and steel frame with a soft, damp cloth and mild soap. Rinse thoroughly and dry completely to prevent water spots and rust.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Periodically check all bolts and connections and re-tighten them to ensure stability.
- For long-term storage, cover the chair or store it in a dry, protected area to prolong its lifespan.

## 7. Troubleshooting

If you encounter any issues with your chaise lounge, please refer to the following common solutions:

- **Instability/Wobbling:** Check all assembly bolts and ensure they are securely tightened. Make sure the chair is on a flat, even surface.
- **Difficulty Adjusting Backrest:** Ensure the support bar is clear of obstructions and properly aligned with the notches. Apply gentle pressure while lifting to adjust.
- **Damaged Rattan:** For minor damage, contact customer support for advice on repair kits or solutions.

If the problem persists or you have other concerns, please contact Outsunny customer support for further assistance.

## 8. Specifications

Detailed specifications for the Outsunny Wicker Chaise Lounge Chair (Model 862-030):

| Specification | Detail |
|---|---|
| Brand | Outsunny |
| Model Number | 862-030 |
| Color | Mixed Gray |
| Material | Steel, PE Rattan, Polyester |
| Product Dimensions (L x W x H) | 81.5"D x 27.5"W x 27.5"H (207 cm x 70 cm x 70 cm) |
| Seat Height | 11.75 Inches (30 cm) |
| Seat Depth | 52.25 inches (132.7 cm) |
| Item Weight | 33.22 Pounds (15.07 kg) |
| Maximum Weight Capacity | 352 Pounds (160 kg) |
| Backrest Positions | 5 |
| Indoor/Outdoor Usage | Outdoor |
| Assembly Required | Yes |
| UPC | 842525169592 |

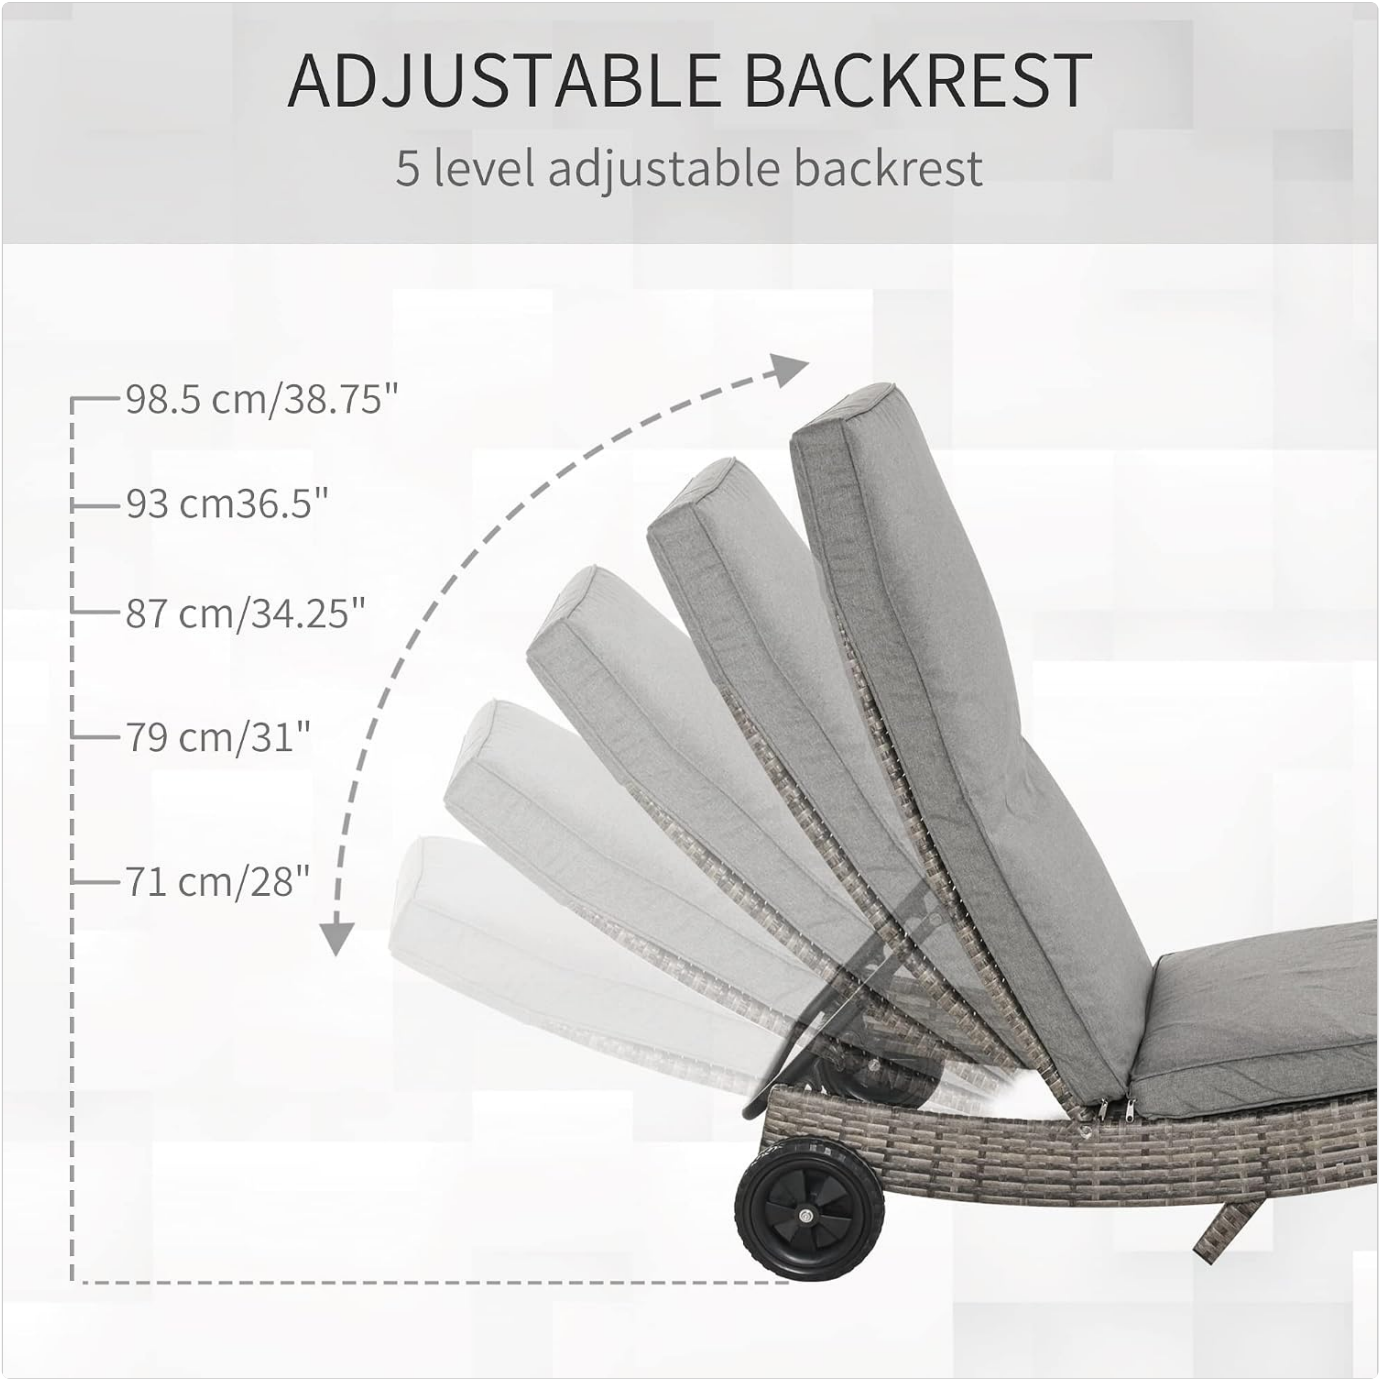



*Image: A diagram illustrating the key dimensions of the chaise lounge chair, including length, width, height, and seat height.*

## 9. Warranty and Support

For information regarding product warranty, returns, or to purchase replacement parts, please refer to the warranty card included with your purchase or visit the official Outsunny website. You may also contact Outsunny customer support directly for assistance.

**Outsunny Customer Support:** Please refer to your purchase documentation for contact details or visitthe Outsunny Store on Amazon.

© 2026 Outsunny. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B08W4YZWSM**

More documents and user manuals: **https://manuals.plus/**