NEXT 2020.0

NEXT 4K Ultra HD Smart Android Satellite Receiver

Model: 2020.0 - User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your NEXT 4K Ultra HD Smart Android Satellite Receiver Model 2020.0. Please read it thoroughly before using the device and retain it for future reference.

2. SAFETY INFORMATION

- **Electrical Safety:** Ensure the power supply matches the device's requirements. Do not expose the device to rain or moisture.
- **Ventilation:** Place the receiver in a well-ventilated area to prevent overheating. Do not block ventilation openings.
- **Handling:** Avoid dropping or subjecting the device to strong impacts.
- **Servicing:** Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel. The "CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN" label indicates internal components carry a risk of electric shock.
- **Disposal:** This product should not be disposed of with other household waste. It contains electronic components that require special disposal. Follow local regulations for proper disposal.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- NEXT 4K Ultra HD Smart Android Satellite Receiver (Model 2020.0)
- Power Adapter
- Remote Control(s)
- User Manual
- HDMI Cable (if included)

Your browser does not support the video tag.

Video: Unboxing and overview of the NEXT 4K Ultra HD Smart Android Satellite Receiver and its included accessories. The video displays the main unit, power adapter, two remote controls, and a user manual.

4. PRODUCT OVERVIEW

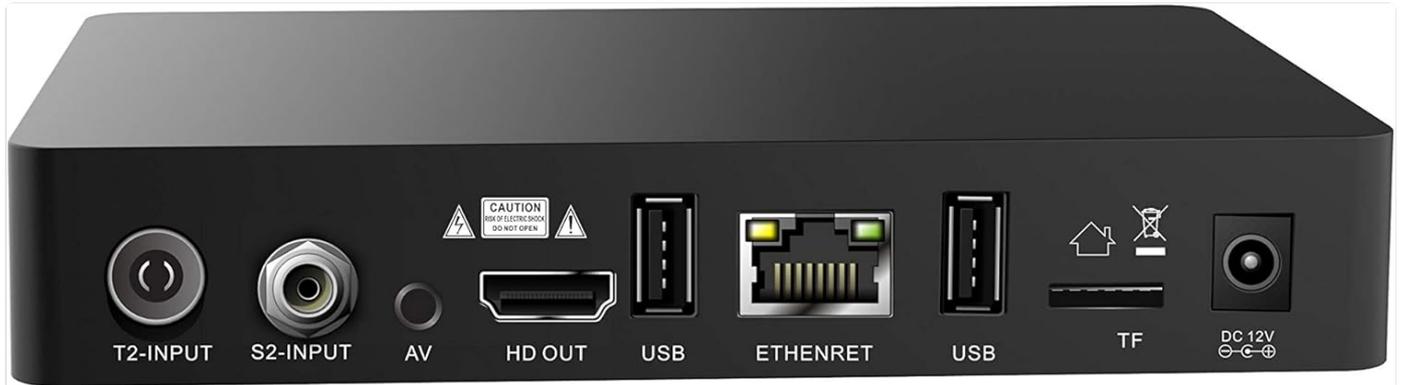Familiarize yourself with the ports and features of your receiver.

Image: Rear panel of the receiver, displaying various input and output ports.

Rear Panel Ports:

- **T2-INPUT:** Terrestrial antenna input for DVB-T2 signals.
- **S2-INPUT:** Satellite dish input for DVB-S2 signals.
- **AV:** Analog audio/video output for older televisions.
- **HD OUT:** HDMI output for connecting to an HD or 4K television.
- **USB (x2):** USB ports for connecting external storage devices or peripherals.
- **ETHERNET:** RJ45 port for wired network connection.
- **TF:** MicroSD card slot for expandable storage.
- **DC 12V:** Power input for the 12V DC power adapter.

Side Panel Ports:

- **RS232:** Serial port for service or firmware updates.
- **USB 3.0:** High-speed USB 3.0 port for faster data transfer.

5. SETUP

1. **Connect to TV:** Connect the receiver to your television using an HDMI cable (recommended for 4K Ultra HD) or an AV cable.
2. **Connect Antenna/Dish:** Connect your terrestrial antenna to the T2-INPUT port and/or your satellite dish to the S2-INPUT port.
3. **Network Connection:** For internet access, connect an Ethernet cable to the ETHERNET port or configure Wi-Fi settings after initial boot-up.
4. **Power On:** Connect the power adapter to the DC 12V port and then plug it into a power outlet. The device should power on automatically or can be turned on using the remote control.
5. **Initial Setup Wizard:** Follow the on-screen instructions for language selection, network configuration, and channel scanning.

6. OPERATING INSTRUCTIONS

Basic Navigation:

- Use the arrow keys on the remote control to navigate menus.
- Press **OK** to select an item.
- Press **BACK** or **EXIT** to return to the previous screen or exit a menu.
- Use the **HOME** button to go to the main Android home screen.

Channel Management:

- Access the "Channel Scan" menu to search for available terrestrial and satellite channels.
- Channels can be organized, moved, or deleted through the "Channel Editor" menu.

Android Features:

- **Google Play Store:** Download and install various applications, games, and streaming services.
- **Media Playback:** Use the built-in media player or download third-party apps to play content from USB drives or network storage.
- **Bluetooth:** Connect Bluetooth devices such as keyboards, mice, or headphones.
- **Settings:** Adjust display, sound, network, and system preferences.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Software Updates:** Periodically check for system updates in the settings menu to ensure optimal performance and access to new features.
- **Storage Management:** Regularly clear cache and unnecessary files to maintain system speed. Consider using the TF card slot for additional storage if needed.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power adapter not connected or faulty.	Check power connections. Ensure the power outlet is working.
No Picture/Sound	Incorrect input selected on TV; faulty HDMI/AV cable.	Select the correct HDMI/AV input on your TV. Try a different cable.
No Channels Found	Antenna/dish not connected or misaligned; incorrect scan settings.	Check antenna/dish connection and alignment. Perform a new channel scan with correct settings.
Wi-Fi Disconnection	Weak signal; router issue; incorrect password.	Move the receiver closer to the router. Restart your router. Re-enter Wi-Fi password. Consider a wired Ethernet connection for stability.
Slow Performance	Too many apps running; low storage; outdated software.	Close unused apps. Clear app caches. Check for system updates.

9. SPECIFICATIONS

Feature	Detail
Brand	NEXT
Model Number	2020.0
Product Dimensions	3 x 20 x 14 cm; 380 grams
Connectivity Technology	USB, Bluetooth
Total USB Ports	3
Audio Output Mode	Stereo
Memory Storage Capacity	8 GB
Total HDMI Ports	1
Compatible Devices	Television
Video Resolution	4K Ultra HD
RAM	1 GB
Processor	ARM Cortex A5
Tuner Type	Dual Android Radio Tuner (Digital - Satellite) DVB-T2 / S2 / MPEG-4 / H.264 / H.265

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official NEXT website. Keep your purchase receipt as proof of purchase.