Nokia 6000FTA

Nokia 6000 Terrestrial Receiver User Manual

Model: 6000FTA | Brand: Nokia

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Nokia 6000 Terrestrial Receiver. This device allows you to easily connect to your television via HDMI or AV cable to receive Free-TV channels in High Definition or Standard Definition. Reception is facilitated through your terrestrial indoor or outdoor antenna. You can create personalized channel lists, saving and sorting your favorite channels by genre, family member, or other preferences. Additionally, the receiver supports media playback from a USB device, allowing you to view personal movies or photos on your TV.

Safety Information

Please read all safety instructions carefully before using the device. Keep this manual for future reference.

- Ensure the power supply voltage matches the requirements specified on the device.
- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Ensure adequate space around the device for proper airflow.
- Avoid placing the device near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

What's in the Box

Verify that all items are present in the package:

- Nokia DVB-T/DVB-T2 Receiver
- Remote Control (including batteries)

- Power Adapter
- User Manual



Image: The Nokia 6000 Terrestrial Receiver shown alongside its retail packaging, highlighting the compact design of the receiver.

Product Overview

Front Panel



Image: Front view of the Nokia 6000 Terrestrial Receiver, showing its minimalist design with a single indicator light.

The front panel features a discreet LED indicator that shows the power status of the receiver.

Rear Panel Connections



Image: Rear view of the Nokia 6000 Terrestrial Receiver, displaying its various connection ports including USB, Antenna In, AV Out, HDMI, and Power In.

The rear panel provides all necessary ports for connecting the receiver to your television and other devices:

- **USB Port:** For connecting external USB storage devices for media playback.
- **ANT IN:** For connecting your terrestrial antenna.
- **AV Out:** For connecting to older televisions using an AV cable.
- **HDMI Out:** For connecting to modern televisions for high-definition video and audio.
- **Power In:** For connecting the power adapter.
- **AUDIO OUT (Coaxial):** For connecting to an external audio system.

Remote Control



Image: The remote control for the Nokia 6000 Terrestrial Receiver, showing its button layout for channel navigation, volume, menu access, and media playback.

The included remote control provides full functionality for navigating menus, changing channels, adjusting volume, and accessing various features of the receiver. It comes with 2 AAA batteries.

Setup

1. Connecting the Receiver

1. **Connect Antenna:** Connect your terrestrial indoor or outdoor antenna cable to the "ANT IN" port on the rear of the receiver.
2. **Connect to TV:**
    - For HD TVs: Use an HDMI cable (not included) to connect the "HDMI Out" port on the receiver to an available HDMI input on your TV.
    - For older TVs: Use an AV cable (not included) to connect the "AV Out" port on the receiver to the corresponding AV inputs on your TV.
3. **Connect Power:** Plug the power adapter into the "Power In" port on the receiver, then plug the adapter into a wall outlet.



Image: The Nokia 6000 Terrestrial Receiver placed neatly below a television in a modern living room setup, demonstrating a typical installation.

2. Initial Setup Wizard

Once connected and powered on, the receiver will guide you through an initial setup wizard on your TV screen. Follow these steps:

1. **Language Selection:** Choose your preferred language for the on-screen display.
2. **Country Selection:** Select your country to ensure correct channel frequencies and settings.
3. **Channel Scan:** The receiver will automatically scan for available DVB-T/T2 channels. This process may take several minutes. Do not interrupt the scan.
4. **Save Settings:** Once the scan is complete, save the found channels.

Your receiver is now ready to use.

Operating Instructions

Channel Navigation

- Use the **CH+**/**CH-** buttons on the remote to change channels sequentially.
- Enter channel numbers directly using the numeric keypad.
- Press the **OK** button to display the channel list, then use the arrow keys to select a channel.

Electronic Program Guide (EPG)

Press the **GUIDE** button on the remote to access the Electronic Program Guide. This displays program schedules for up to 7 days, allowing you to plan your viewing.

Creating Favorite Lists

You can create personalized favorite channel lists:

1. Press the **MENU** button.
2. Navigate to "Channel Manager" or "Edit Channel".
3. Select "Favorite List" and follow the on-screen instructions to add or remove channels from your preferred lists (e.g., by genre, family member).

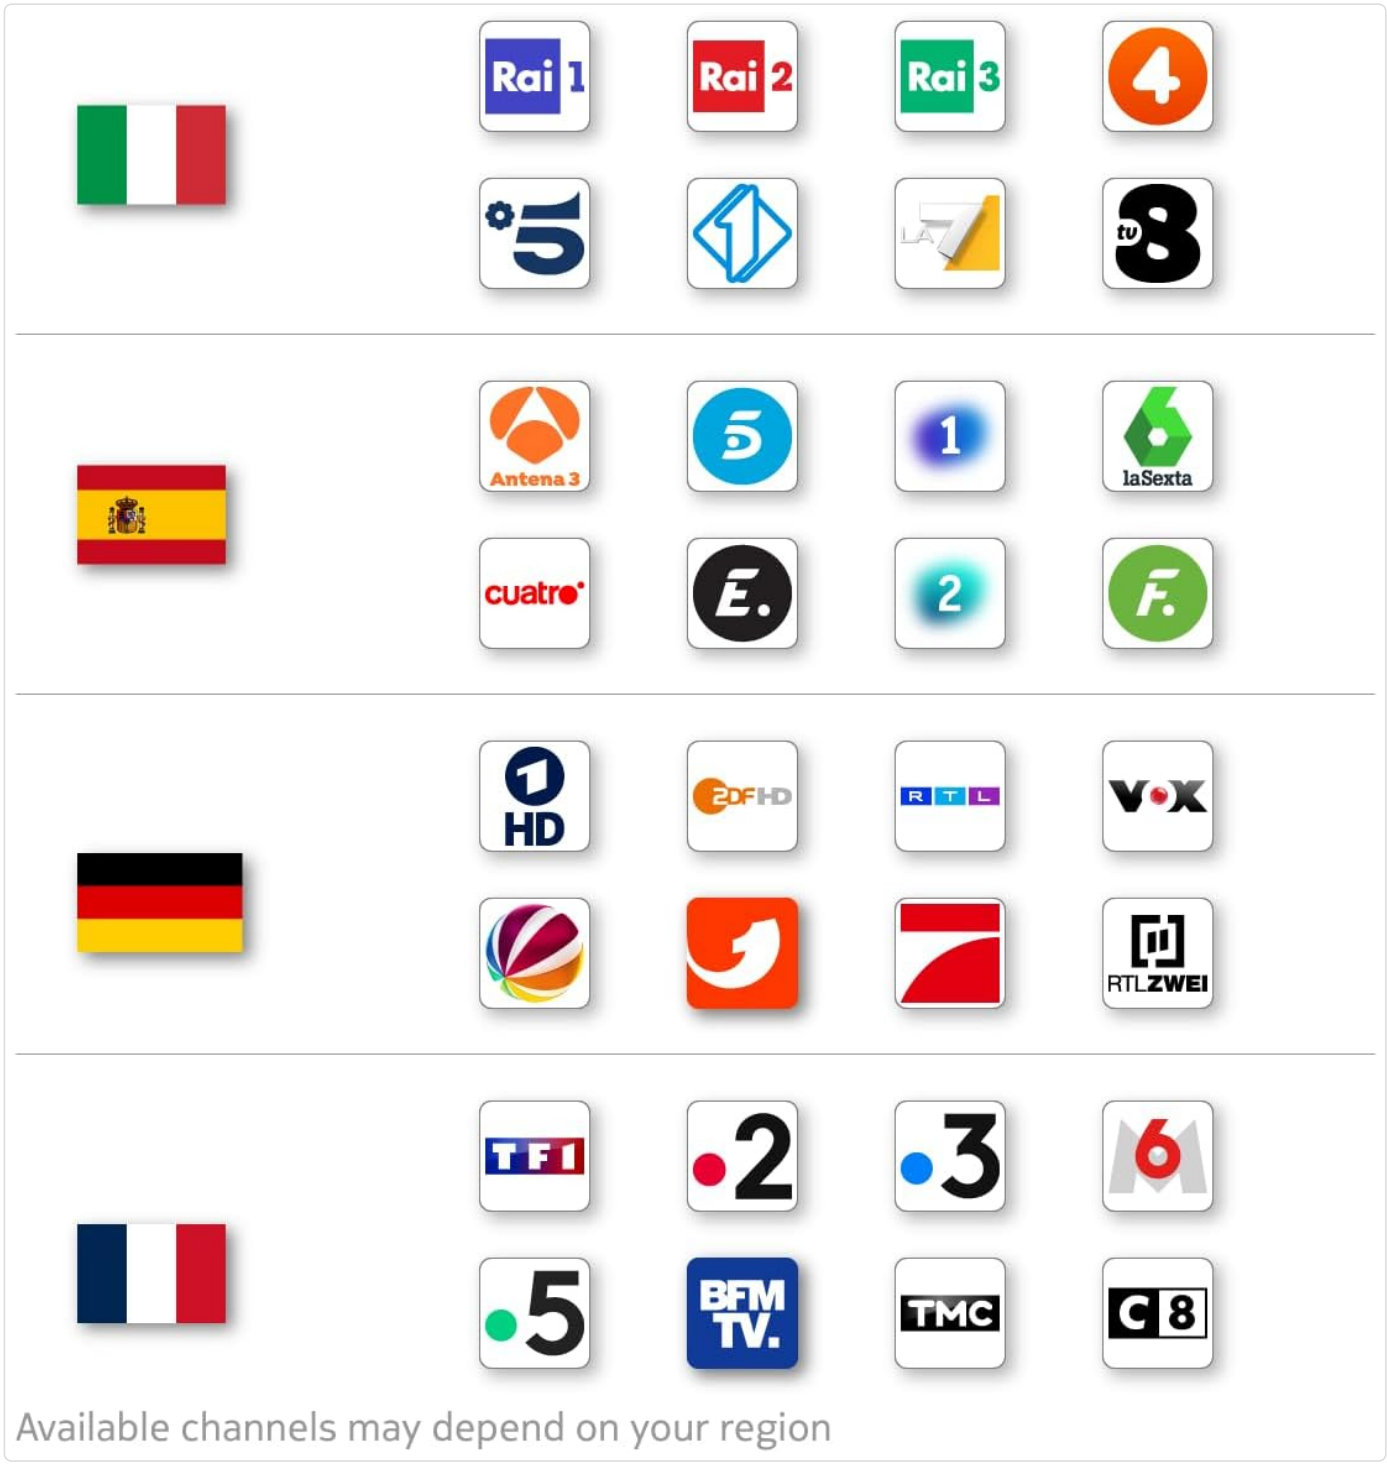


Image: A visual representation of various free-to-air channels available in different European countries (Italy, Spain, Germany, France), demonstrating the receiver's multi-regional compatibility.

Media Playback via USB

The receiver supports media playback from a USB storage device:

1. Insert a USB flash drive or external hard drive into the USB port on the receiver's rear panel.
2. Press the **MEDIA** or **USB** button on the remote (if available), or navigate to the "Multimedia" section in the main menu.
3. Select the type of media you wish to play (e.g., Video, Music, Photo).

4. Browse your files and select the desired content to play.



Image: A couple comfortably seated on a sofa, enjoying content on a large screen television, with the Nokia 6000 Terrestrial Receiver subtly integrated into their entertainment setup.

Maintenance

To ensure the longevity and optimal performance of your Nokia 6000 Terrestrial Receiver, follow these maintenance guidelines:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the receiver. Do not use liquid cleaners or aerosol sprays.
- **Ventilation:** Ensure that the ventilation openings on the device are not blocked. Proper airflow prevents overheating.
- **Storage:** If storing the device for an extended period, disconnect it from power and store it in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty.	Check power cable connection; Try a different power outlet.
No signal / No picture	Antenna not connected or faulty; Incorrect input selected on TV; Channel scan not performed.	Check antenna connection; Select correct HDMI/AV input on your TV; Perform a channel scan.
Poor picture quality	Weak antenna signal; Antenna not positioned correctly.	Adjust antenna position; Consider a stronger antenna or signal amplifier.

Problem	Possible Cause	Solution
Remote control not working	Batteries are dead or inserted incorrectly; Obstruction between remote and receiver.	Replace batteries; Ensure correct polarity; Remove any obstructions.
No audio	TV or receiver volume too low; Audio cables not connected properly.	Increase volume on TV and receiver; Check HDMI or AV audio connections.

Specifications

- **Model Number:** 6000FTA
- **Product Dimensions:** 11.2 x 12.3 x 2.4 cm; 228 Grams
- **Connectivity Technology:** USB, HDMI
- **Controller Type:** Remote Control
- **Special Feature:** Compact Design
- **Compatible Devices:** Most modern televisions with HD or HDMI inputs
- **Total HDMI Ports:** 1
- **Connector Type:** Coaxial, HDMI, USB Type A
- **Audio Encoding:** Dolby Digital 5.1
- **Audio Output Mode:** Surround
- **Surround Sound Channel Configuration:** 5.1
- **Batteries:** 2 AAA batteries required (included for remote)
- **Manufacturer:** StreamView GmbH

Warranty and Support

For warranty information and technical support, please refer to the contact details provided by your retailer or visit the official Nokia support website for terrestrial receivers. Keep your proof of purchase for warranty claims.
For further assistance, you may contact the manufacturer, StreamView GmbH.

© 2024 Nokia. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question