KOMOK 25mm

KOMOK 16.8V Cordless Electric Pruning Shears User Manual

Model: 25mm

1. Safety Instructions

WARNING: Read all safety warnings and instructions before using this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear.
- Keep hands and body parts away from the cutting blades. The blades are extremely sharp and can cause severe injury.
- Ensure the power switch is off and the battery is removed before performing any maintenance, cleaning, or when the tool is not in use.
- Do not operate the pruning shears in wet conditions or near flammable liquids or gases.
- Keep children and bystanders away while operating the tool.
- Use only the specified battery and charger for this tool. Using other batteries or chargers may create a risk of injury and fire.
- Store the tool in a dry, secure place, out of reach of children.
- Always check the blades for damage or wear before each use. Replace damaged blades immediately.



Image: Blade-locking feature to prevent accidental injuries.

2. Product Overview & Features

The KOMOK 16.8V Cordless Electric Pruning Shears are designed for efficient and effortless trimming of branches up to 25mm (1 inch) in diameter. Featuring a powerful brushless motor and durable SK5 high carbon steel blades, this tool is ideal for various gardening tasks.



Image: Overview of the KOMOK Electric Pruning Shears with labeled parts.

Key Features:

- **Sharp & Powerful Blades:** Forged from SK5 high carbon steel and powered by a brushless motor, capable of cutting 1-inch (25mm) hard branches.
- **Lightweight & Ergonomic Design:** Weighing approximately 700g (body) + 200g (battery), with a shockproof and anti-slip ergonomic handle for comfortable long-term use.
- **Long-lasting Battery:** Includes two 2Ah rechargeable lithium batteries, providing 6-8 hours of working time.
- **Efficient Trimming:** Provides fast, neat, and flat cuts without damaging branches, suitable for potted plants, fruit trees, flowers, and vines.
- **Lanyard Hole:** Newly added for convenience and to prevent accidental drops.



Image: SK5 Heavy-duty Blade for superior cutting performance.

3. What's Included

Your KOMOK Electric Pruning Shears package includes the following items:

- 1 x Electric Pruning Shears
- 2 x 16.8V 2Ah Lithium Batteries
- 1 x Two-port Charger Adapter
- 1 x Tool Case
- 1 x User Manual
- 3 x Hex Wrenches
- 1 x Lubricating Oil Bottle
- 1 x Working Gloves



Image: Complete contents of the KOMOK Electric Pruning Shears kit.

Your browser does not support the video tag.

Video: A demonstration of the packaging contents for the electric pruning shears.

4. Setup

4.1 Battery Charging

1. Connect the two-port charger adapter to a power outlet.
2. Insert both 16.8V 2Ah lithium batteries into the charger.
3. Allow the batteries to fully charge before first use. Charging typically takes 1-2 hours per battery. The indicator lights on the battery or charger will show charging status.



Image: Two-port charger adapter for efficient battery charging.

4.2 Battery Installation

1. Ensure the pruning shears' power switch is in the OFF position.
2. Align a fully charged battery with the battery slot at the bottom of the shears.
3. Slide the battery into the slot until it clicks securely into place.
4. To remove the battery, press the battery removal button and slide the battery out.



Image: Battery attached to the electric pruning shears.

5. Operating Instructions

5.1 Activating the Shears

1. With a charged battery installed, turn the power switch ON.
2. To activate the blades, press the trigger twice quickly. The blades will open to their maximum capacity.

5.2 Trimming Branches

1. Position the branch to be cut between the open blades. Ensure the branch diameter does not exceed 25mm (1 inch).
2. Press the trigger to close the blades and make a cut. Release the trigger to open the blades for the next cut.
3. For optimal performance and blade longevity, avoid forcing the shears through branches that are too thick or hard.

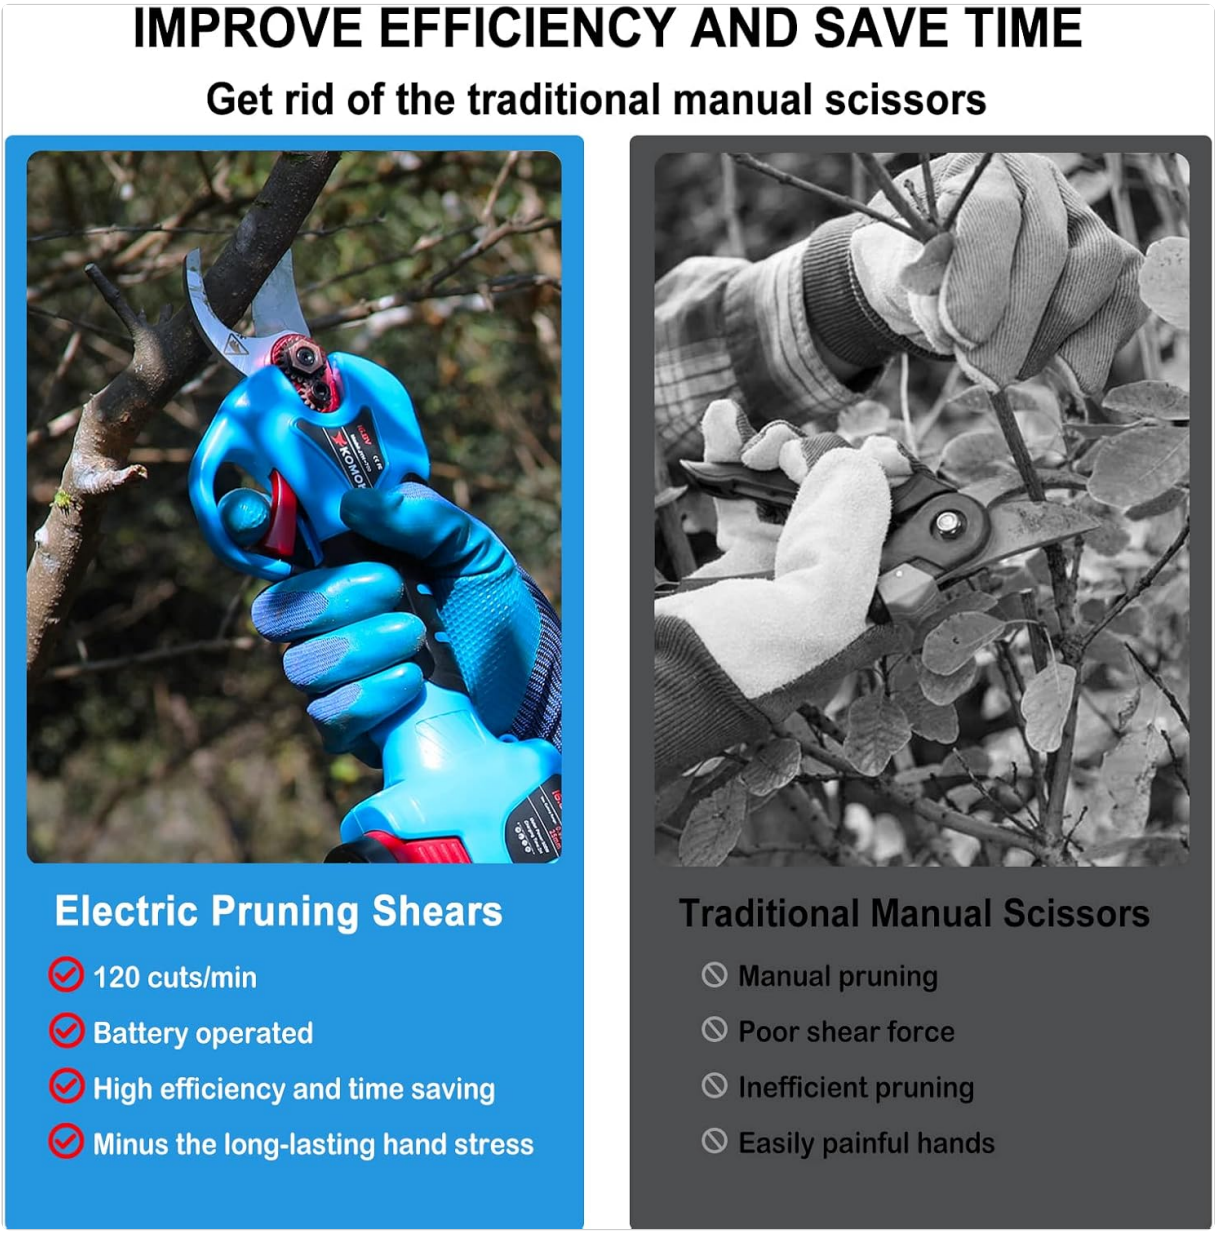


Image: Demonstrating the maximum cutting capacity and trigger operation.

5.3 Deactivating and Storing

1. After use, turn the power switch OFF.
2. To close the blades for storage, hold the trigger down until the blades fully retract and a beep is heard (if applicable).
3. Remove the battery from the shears.
4. Clean the blades and store the shears and batteries in the provided tool case in a dry, safe place.

6. Maintenance

6.1 Blade Care

- After each use, clean the blades with a damp cloth to remove sap and debris.
- Apply a few drops of lubricating oil (provided) to the blades regularly to ensure smooth operation and prevent rust.
- If blades become dull, use the sharpening stone (provided) to restore their sharpness. Refer to the user manual for detailed sharpening instructions.

6.2 Battery Care

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store batteries in a fully discharged state for extended periods. Recharge them periodically if not in use.
- Avoid dropping or physically damaging the batteries.

7. Troubleshooting

Shears Not Activating:

- Ensure the battery is fully charged and properly installed.
- Check if the power switch is in the ON position.
- Confirm that the trigger is pressed twice quickly to activate the blades.

Reduced Cutting Performance:

- Clean the blades to remove any accumulated sap or debris.
- Lubricate the blades.
- Sharpen the blades if they appear dull.
- Ensure the battery has sufficient charge.

Battery Not Charging:

- Verify the charger is properly plugged into a working power outlet.
- Ensure the battery is correctly inserted into the charger.
- Check for any visible damage to the charger or battery.

8. Specifications

Feature	Specification
Brand	KOMOK
Model	25mm
Battery Voltage	16.8V
Battery Capacity	2 x 2Ah Lithium Ion
Max Cutting Capacity	1 inch (25mm)
Blade Material	SK5 High Carbon Steel
Motor Type	Brushless Motor
Item Weight	700 g (shears only)
Color	Blue

9. Warranty & Support

For warranty information, technical support, or replacement parts, please refer to the contact information provided in the original product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.

© 2026 KOMOK. All rights reserved.