HABA 306124

HABA LogiCase Extension Set - Pirates Instruction Manual

Model: 306124

Introduction

The HABA LogiCase Extension Set - Pirates (Model 306124) provides 77 new picture puzzles to expand your existing LogiCase Starter Set. This extension set is designed to enhance logical thinking and concentration for children aged 5 years and up. It offers engaging pirate-themed challenges that integrate seamlessly with the LogiCase self-correction system.

Important Note: This product is an extension set and requires a HABA LogiCase Starter Set (not included) to be used.

Setup

To begin playing with your LogiCase Extension Set, follow these steps:

1. Ensure you have a HABA LogiCase Starter Set. This extension set does not include the wooden pen or the base unit required for play.
2. Unpack the 77 pirate-themed puzzle cards from the extension set.
3. Insert the desired puzzle cards into the LogiCase base unit from your Starter Set. The cards are designed to fit securely into the designated slot.

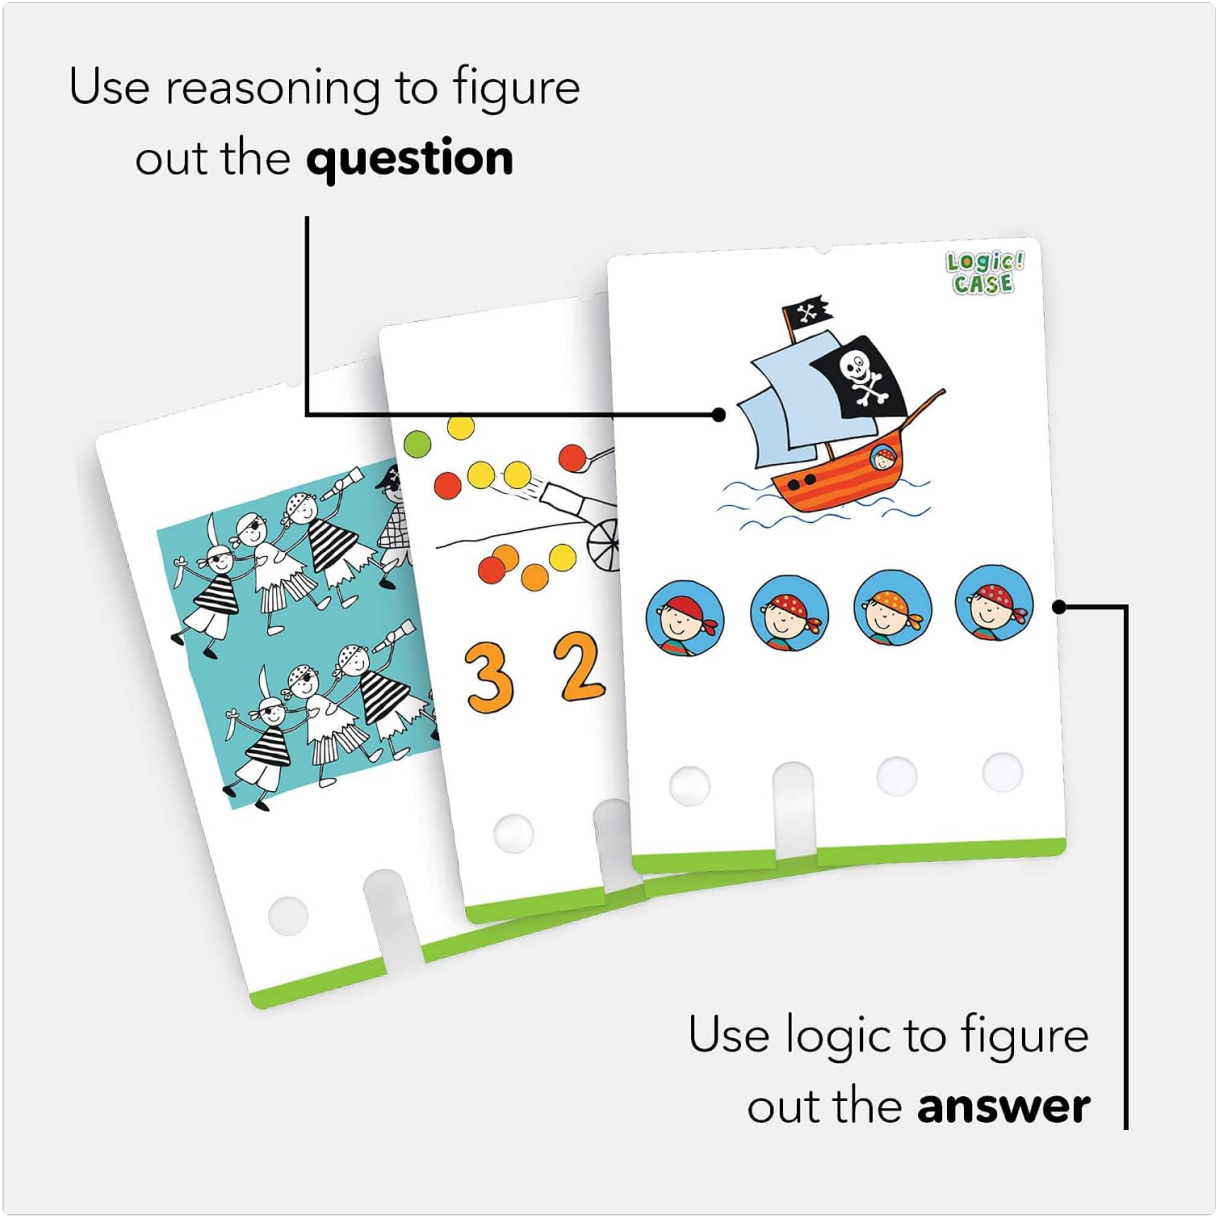


Image: Proper insertion of a puzzle card into the LogiCase base unit.



Image: This extension set contains 77 pirate-themed puzzles. The LogiCase Starter Set is required and sold separately.

Operating

The LogiCase game system encourages independent problem-solving and self-correction. Here's how to play:

1. Select a puzzle card and place it into the LogiCase base unit.
2. Examine the puzzle on the card. Each puzzle presents a question or a task that requires logical reasoning to solve.
3. Identify the correct answer from the multiple-choice options provided on the card.
4. Use the wooden pen from your LogiCase Starter Set to mark your chosen answer by inserting it into the corresponding hole on the card.
5. Attempt to pull the puzzle card out of the base unit. If the card slides out easily, your answer is correct. If the card remains stuck, your answer is incorrect, and you should try again.



Image: The LogiCase system encourages players to use reasoning for questions and logic for answers.



Image: A selection of the colourful pirate-themed puzzle cards included in the set.



Image: The HABA LogiCase Extension Set - Pirates packaging.

Maintenance

To ensure the longevity of your LogiCase Extension Set, please observe the following maintenance guidelines:

- **Cleaning:** The puzzle cards are made of paper. Clean them gently with a dry, soft cloth if necessary. Avoid using water or cleaning solutions, as this may damage the material.
- **Storage:** Store the puzzle cards in their original box or a similar protective container to prevent bending, tearing, or damage. Keep them in a dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the cards with care to avoid creases or tears, which could affect their functionality within the LogiCase system.

Troubleshooting

If you encounter any issues while using the LogiCase Extension Set, consider the following:

- **Card not pulling out when correct:** Ensure the wooden pen is fully inserted into the correct hole. Sometimes, a slight misalignment can prevent the card from releasing. Check that the card is properly seated in the base unit.
- **Card pulling out when incorrect:** Double-check that the wooden pen is inserted into the hole corresponding to your chosen answer. Verify that the card itself is not damaged or bent, which could interfere with the locking mechanism.
- **Difficulty with puzzles:** The LogiCase puzzles are designed to challenge logical thinking. If a child is struggling, encourage them to take a break, re-read the puzzle, or try a different approach. It is normal for some puzzles to be more challenging than others. Remember, the self-correction system is part of the learning process.
- **Missing or damaged cards:** If any puzzle cards are missing or significantly damaged upon opening, please contact HABA customer support for assistance.

Specifications

Brand	HABA
Model Number	306124
Product Dimensions	15 x 11.2 x 2.8 cm
Item Weight	240 g
Material Type(s)	Paper
Number of Pieces	40 (referring to the number of cards, which contain 77 puzzles)
Manufacturer Recommended Age	5 years and up
Number of Game Players	1
Release Date	1 March 2021
GTIN (Global Trade Identification Number)	04010168256313

Support

For further assistance, questions, or to report any issues with your HABA LogiCase Extension Set - Pirates, please visit the official HABA website or contact their customer support. You may find additional resources and contact information via the following link:
HABA Official Support Page
Please have your product model number (306124) and purchase information ready when contacting support.