Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Arebos B08YNYSTQX

Arebos XXL Scooter User Manual

Model: B08YNYSTQX

1. Introduction

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Arebos XXL Scooter. Please read this manual thoroughly before using the scooter to ensure proper function and user safety. Keep this manual for future reference.

The Arebos XXL Scooter is designed for personal transportation, featuring large 200mm wheels for smooth riding on various surfaces, a height-adjustable handlebar, and a convenient folding mechanism for portability and storage. It supports a maximum load of 100 kg.





Image 1.1: Front view of the Arebos XXL Scooter, showcasing its black frame, blue wheels, and blue handlebar grips.

2. Safety Instructions

WARNING: Failure to follow these safety instructions may result in serious injury or death.

- Always wear a helmet and appropriate protective gear (knee pads, elbow pads, wrist guards) when riding the scooter.
- Ensure all clamps, bolts, and quick releases are securely fastened before each use.
- Do not exceed the maximum weight capacity of 100 kg.
- Children should only use the scooter under direct adult supervision. Recommended for ages 7 and up.
- Ride on smooth, dry, paved surfaces away from motor vehicles. Avoid uneven terrain, sand, gravel, or wet surfaces.
- Do not ride at night or in low visibility conditions.
- Maintain a safe distance from other riders, pedestrians, and obstacles.
- Familiarize yourself with local traffic laws and regulations regarding scooter use.
- Check the brake function before each ride.
- Avoid sudden or sharp turns at high speeds.
- Do not modify the scooter in any way.

3. Package Contents

Verify that all components are present and undamaged upon unpacking:

- 1 x Arebos XXL Scooter (partially assembled)
- 1 x Carry Strap
- 1 x User Manual

4. Setup and Assembly

The Arebos XXL Scooter comes partially assembled. Follow these steps to prepare it for use:

4.1 Unfolding the Scooter

1. Place the scooter on a flat, stable surface.
2. Locate the folding mechanism near the base of the handlebar stem.
3. Release the quick-release lever or pin according to the mechanism design.
4. Carefully lift the handlebar stem until it locks into the upright position. Ensure the locking mechanism is fully engaged.



Image 4.1: Illustration showing the folding mechanism and the three adjustable height settings for the handlebar.

4.2 Attaching the Handlebar Grips (if not pre-attached)

If the handlebar grips are separate, slide them onto the handlebar ends until they are fully seated.

4.3 Adjusting Handlebar Height

The handlebar can be adjusted to three different heights (82 cm, 89 cm, 95 cm) to suit the rider's preference and height.

1. Loosen the quick-release clamp on the handlebar stem.
2. Press the spring-loaded pin and slide the handlebar to the desired height.
3. Ensure the pin snaps securely into one of the adjustment holes.
4. Tighten the quick-release clamp firmly to secure the handlebar in place.

Important: Always ensure the handlebar is securely locked at the desired height before riding.

5. Operating Instructions

5.1 Riding the Scooter

1. Place one foot firmly on the non-slip deck.
2. Use your other foot to push off the ground, gaining momentum.
3. Once moving, place both feet on the deck, one behind the other, or side-by-side if comfortable.
4. Steer by gently leaning and turning the handlebar.



Image 5.1: A person demonstrating the riding posture on the Arebos XXL Scooter in an urban environment.

5.2 Braking

The scooter is equipped with a rear friction brake.

- To slow down or stop, gently press your foot down on the rear fender brake.
- Apply pressure gradually to avoid sudden stops, which can cause loss of balance.

5.3 Using the Kickstand

The integrated kickstand allows you to park the scooter upright.

- To deploy, gently push the kickstand down with your foot until it locks into position.
- To retract, push the kickstand back towards the scooter frame until it is flush.

5.4 Folding for Transport and Storage

To fold the scooter for easy transport or compact storage:

1. Ensure the handlebar is at its lowest setting and the quick-release clamp is tightened.
2. Locate the folding mechanism at the base of the handlebar stem.
3. Release the quick-release lever or pin.
4. Carefully fold the handlebar stem down towards the deck until it locks into the folded position.
5. You can use the included carry strap for convenient transportation.



Image 5.2: The Arebos XXL Scooter shown in its compact, folded state, ready for transport or storage.

6. Maintenance

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Avoid direct water spray.
- **Wheel Check:** Periodically inspect wheels for wear and tear. Replace worn wheels as necessary.
- **Bearings:** The wheel bearings are sealed and generally maintenance-free. If they become noisy or stiff, they may need replacement.
- **Fasteners:** Regularly check all bolts, nuts, and quick-release mechanisms to ensure they are tight and secure.
- **Brake:** Ensure the rear brake is functioning correctly and not excessively worn.
- **Storage:** Store the scooter in a dry, cool place away from direct sunlight and moisture.

7. Troubleshooting

Problem	Possible Cause	Solution
Handlebar is wobbly	Quick-release clamp is loose or not fully engaged.	Tighten the quick-release clamp. Ensure the height adjustment pin is fully seated.

Problem	Possible Cause	Solution
Scooter does not fold/unfold easily	Folding mechanism is stiff or obstructed.	Apply a small amount of lubricant to the pivot points. Check for any obstructions.
Brake is not effective	Brake pad (fender) is worn or dirty.	Clean the brake area. If worn, the fender brake may need replacement.
Wheels are noisy or stiff	Wheel bearings are worn or dirty.	Inspect bearings. If necessary, replace the wheels or bearings.

8. Specifications

Feature	Detail
Model	B08YNYSTQX
Brand	Arebos
Dimensions (Unfolded)	88 x 38 x 98 cm (Length x Width x Max Height)
Dimensions (Folded)	Approx. 80 x 31 cm (Length x Height)
Weight	3.8 kg
Maximum Load Capacity	100 kg
Wheel Diameter	200 mm
Handlebar Height Adjustment	82 cm, 89 cm, 95 cm (3 levels)
Frame Material	Aluminum
Brake Type	Rear Friction Brake

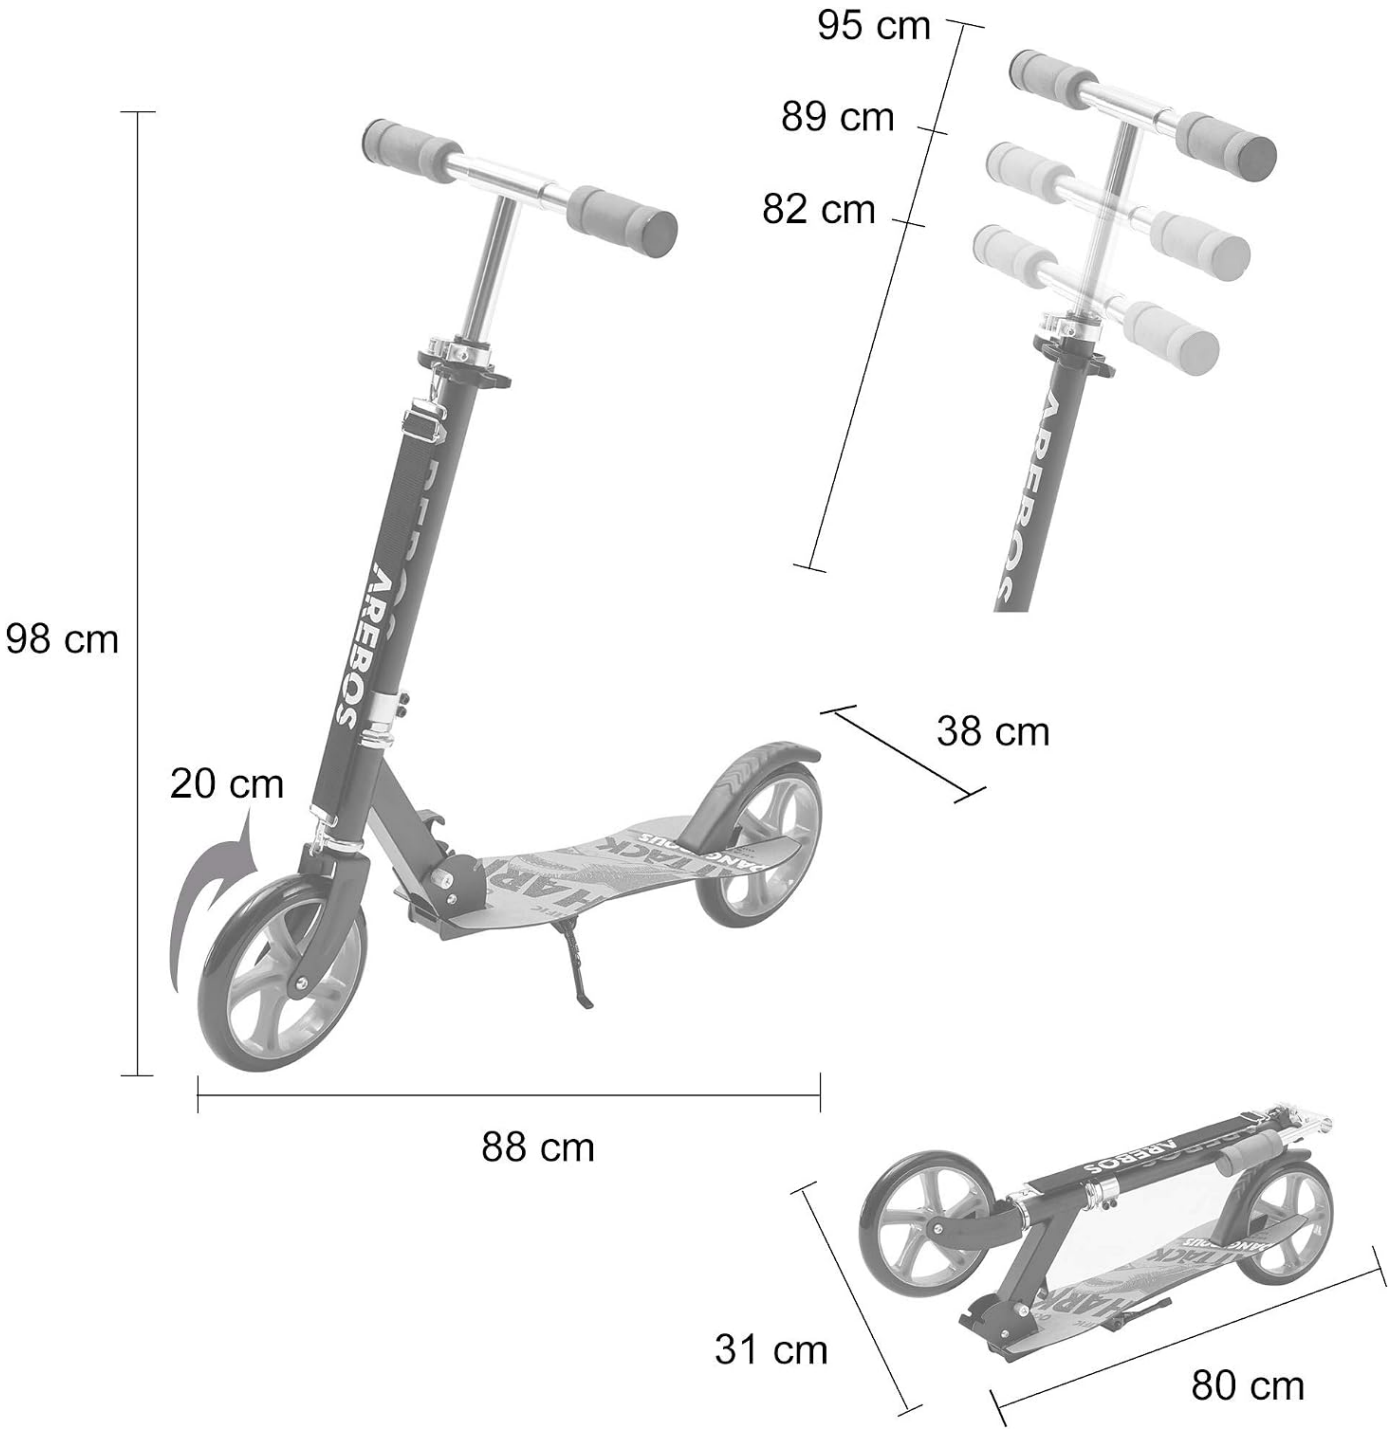


Image 8.1: Diagram illustrating the key dimensions of the Arebos XXL Scooter, including unfolded and folded states, and handlebar height adjustments.

9. Warranty and Support

For warranty information, technical support, or to purchase replacement parts, please contact Arebos customer service or visit their official website. Retain your proof of purchase for warranty claims.
Manufacturer: Canbolat Vertriebs GmbH

© 2023 Arebos. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08YNYSTQX

More documents and user manuals: **https://manuals.plus/**