JISULIFE Clip Fan Life1 Plus

JISULIFE Clip Fan Life1 Plus User Manual

Model: Clip Fan Life1 Plus

1. Introduction

Thank you for choosing the JISULIFE Clip Fan Life1 Plus. This portable, battery-operated fan is designed to provide personal cooling in various settings, including strollers, cribs, desks, and car seats. It features a 4000mAh battery, offering extended operation, and multiple speed settings for customized airflow. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image 1.1: The JISULIFE Clip Fan Life1 Plus attached to a baby stroller, providing cooling for a child.

2. Safety Instructions

- Do not insert fingers or any objects into the fan grille. The fan features a narrow slot design (0.2 inches) for child safety, but caution is always advised.
- Keep the fan away from water or other liquids to prevent electric shock.
- Do not disassemble, repair, or modify the fan. Contact customer support for assistance.
- Ensure the fan is placed on a stable surface or securely clipped to prevent it from falling.
- Keep the fan out of reach of small children when not in use or when unsupervised.
- Use only the provided Type-C cable for charging.
- Do not expose the fan to extreme temperatures or direct sunlight for prolonged periods.



Image 2.1: A close-up view highlighting the narrow fan grille slots, designed to prevent small fingers from reaching the blades.

3. Package Contents

Verify that all items are present in the package:

- 1 x JISULIFE Versatile Clip Fan (Life1 Plus)
- 1 x Type-C Charging Cable
- 1 x User Manual



Image 3.1: The complete package contents, showing the fan, Type-C charging cable, and user manual.

4. Product Overview

The JISULIFE Clip Fan Life1 Plus features a compact design with a robust clip for versatile placement. It includes a power button, a Type-C charging port, and a fan head that offers 360-degree rotation.



Image 4.1: A side view of the dark green JISULIFE Clip Fan Life1 Plus, showcasing its design and clip.

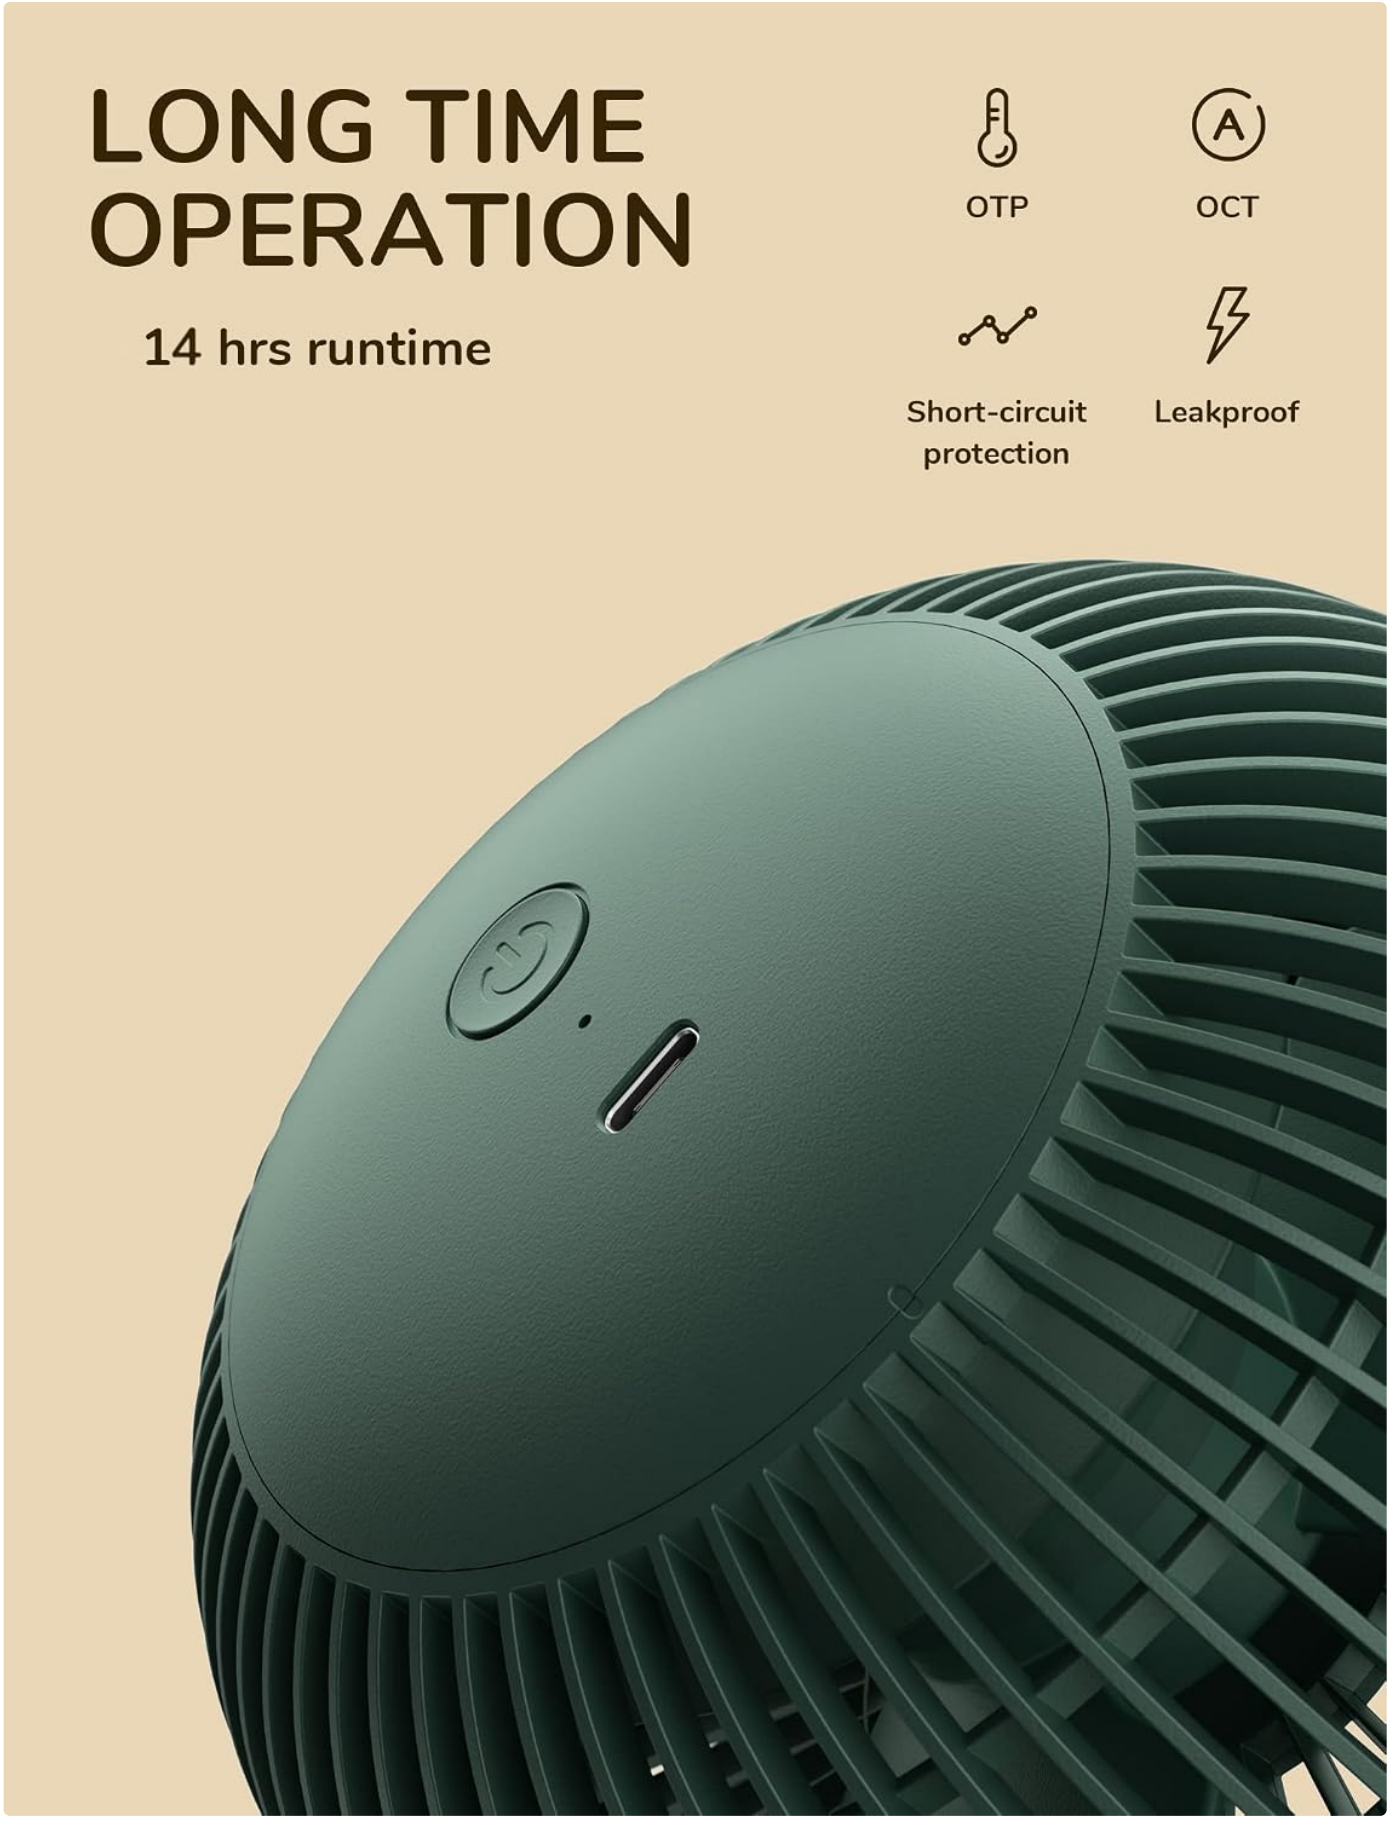


Image 4.2: A detailed view of the fan's rear, showing the power button and the Type-C charging port.

5. Setup

The fan can be used as a clip-on fan or a desktop fan.

5.1 Clipping the Fan

Open the clip at the base of the fan and attach it securely to a stable surface such as a stroller handle, crib rail, or desk edge. Ensure the clip has a firm grip to prevent the fan from dislodging.



Image 5.1: The fan securely clipped to a crib rail, demonstrating its use in a nursery setting.

5.2 Adjusting Fan Direction

The fan head can be rotated 360 degrees both vertically and horizontally. Gently adjust the fan head to direct airflow as desired.



Image 5.2: An illustration demonstrating the fan's ability to rotate 360 degrees both vertically and horizontally for optimal airflow.

6. Operating Instructions

The fan features four adjustable speed settings, including a natural wind mode.

6.1 Power On/Off and Speed Adjustment

1. **To Power On:** Press the power button once. The fan will start at Speed 1.
2. **To Adjust Speed:** Press the power button repeatedly to cycle through speeds: Speed 1 (2000 rpm), Speed 2 (2500 rpm), Speed 3 (3000 rpm), and Speed 4 (Natural Wind Mode, 2000-2500 rpm).
3. **To Power Off:** Hold down the power button for approximately 2 seconds.



Image 6.1: Visual representation of the four fan speed settings, including the unique natural wind mode.

6.2 Natural Wind Mode

In Natural Wind Mode (Speed 4), the fan's wind force periodically changes, simulating a natural breeze for enhanced comfort.

7. Charging

The JISULIFE Clip Fan Life1 Plus is equipped with a 4000mAh rechargeable battery, providing 4-14 hours of operation depending on the speed setting.

7.1 Charging Procedure

- Connect the provided Type-C charging cable to the fan's charging port.
- Connect the other end of the cable to a USB power source (e.g., USB charger, power bank, computer, car charger).
- The charging indicator light will illuminate during charging and turn off when fully charged.
- The fan can be used while charging.

8. Maintenance

Regular cleaning ensures optimal performance and longevity of your fan.

8.1 Cleaning the Fan

- Ensure the fan is powered off and unplugged before cleaning.
- The front cover of the fan is detachable for easy cleaning. Gently twist or unclip the front cover to remove it.
- Use a soft, dry cloth to wipe dust from the fan blades and grille. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth.
- Do not use abrasive cleaners or solvents.
- Once clean and dry, reattach the front cover securely.

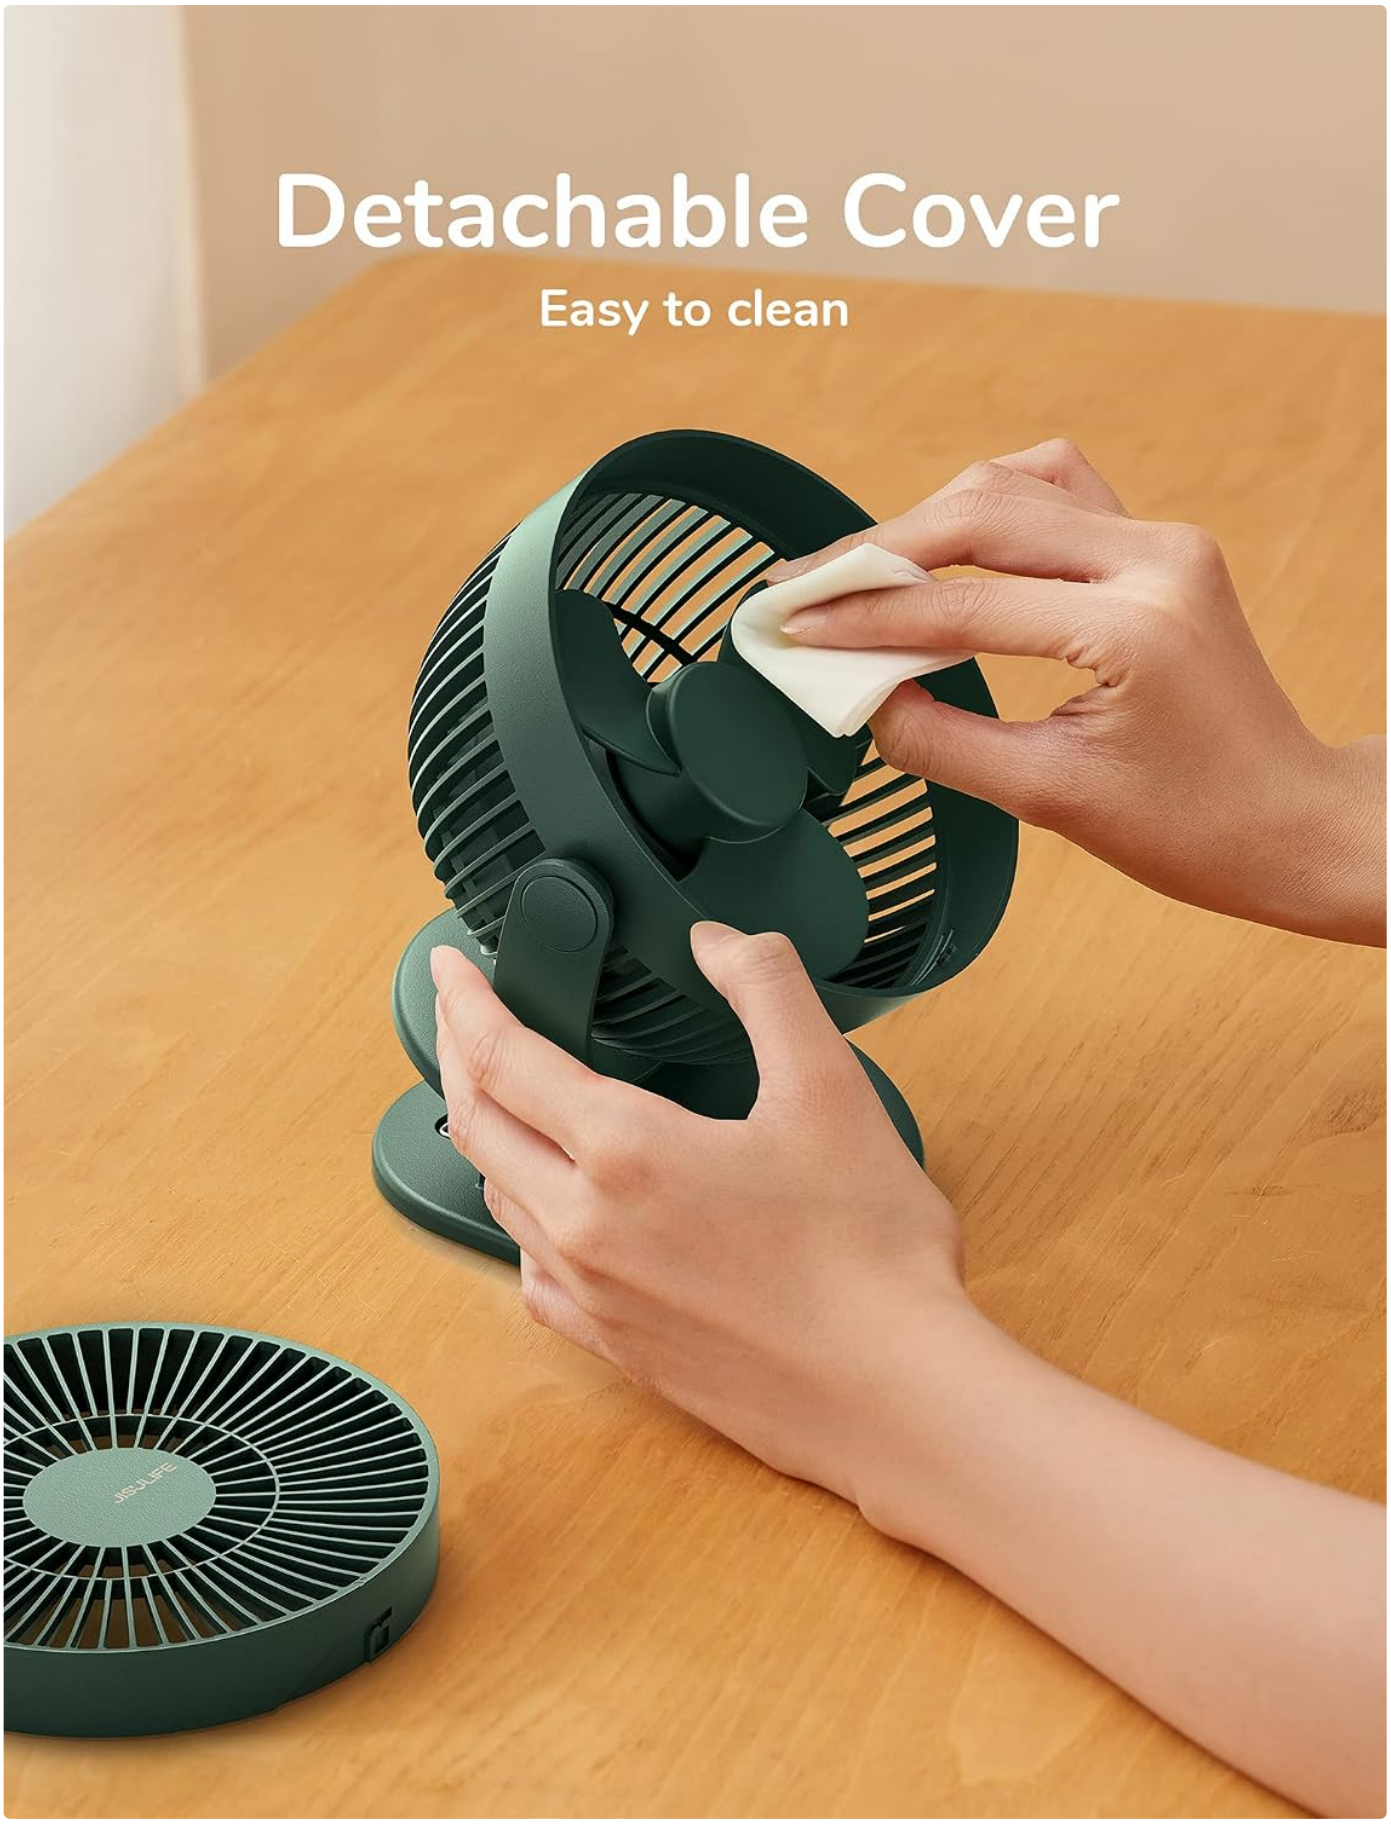


Image 8.1: A demonstration of cleaning the fan blades after detaching the front cover.

9. Troubleshooting

If you encounter issues with your JISULIFE Clip Fan Life1 Plus, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	Battery is depleted	Charge the fan using the provided Type-C cable.
Fan does not charge	Charging cable or adapter issue	Ensure the Type-C cable is properly connected. Try a different USB adapter or power source.
Weak airflow	Fan speed is too low or battery is low	Increase the fan speed. If the battery is low, charge the fan.
Unusual noise during operation	Obstruction in fan blades or loose parts	Power off and unplug the fan. Carefully check for any obstructions and remove them. If the issue persists, contact customer support.

10. Specifications

Brand	JISULIFE
Model Name	Clip Fan Life1 Plus
Color	Green
Product Dimensions	5.47"D x 6.1"W x 8.03"H
Item Weight	405 Grams (14.3 ounces)
Power Source	DC (Battery Operated)
Battery Type	2 Lithium Ion batteries (included)
Battery Capacity	4000mAh
Working Hours	4-14 hours (depending on speed)
Number of Power Levels	4
Noise Level	<40 dB
Control Method	Push Button
Main Power Connector Type	USB Type-C
Special Feature	14h Long-lasting, 4 Speed Natural Wind, 40dB Ultra-quiet
Recommended Uses	Clip on Stroller, Crib, Desk, Table

11. Warranty and Support

JISULIFE values customer experience and provides worry-free customer service. If you have any questions or require assistance with your Clip Fan Life1 Plus, please do not hesitate to contact JISULIFE customer service.

- **Customer Service Response:** We aim to reply within 24 hours.
- **Contact Information:** Please refer to the contact details provided on the product packaging or the official JISULIFE website for the most up-to-date support channels.

© 2023 JISULIFE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I open the front cover of the JISULIFE Clip Fan Life1 Plus for cleaning? It seems to be stuck or glued.

According to the JISULIFE Clip Fan Life1 Plus manual, the front cover is indeed detachable for cleaning. It is not glued, but it may be tightly secured to prevent accidental opening.To remove the front...

Read full answer