iTOMA CKS207

iTOMA CKS207 Alarm Clock Radio User Manual

Model: CKS207
Brand: iTOMA

1. Introduction

Thank you for purchasing the iTOMA CKS207 Alarm Clock Radio. This device combines a digital alarm clock with a 15W ultra-fast wireless phone charger, Bluetooth speaker, USB charging port, FM radio, and a dimmable LED display. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your product.



Figure 1.1: iTOMA CKS207 Alarm Clock Radio with wireless and wired charging capabilities.

2. Important Safety Information

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- Do not expose the unit to dripping or splashing water.
- Do not place objects filled with liquids, such as vases, on the unit.
- Ensure proper ventilation; do not block any ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified service personnel.
- Keep the unit away from direct sunlight, heat sources, and strong magnetic fields.

3. Product Overview

3.1 Package Contents

Verify that all items are present in the package:

- iTOMA CKS207 Alarm Clock Radio Unit
- Power Adapter (Corded Electric)
- User Manual

3.2 Device Layout

Familiarize yourself with the buttons and ports on your iTOMA CKS207 unit.

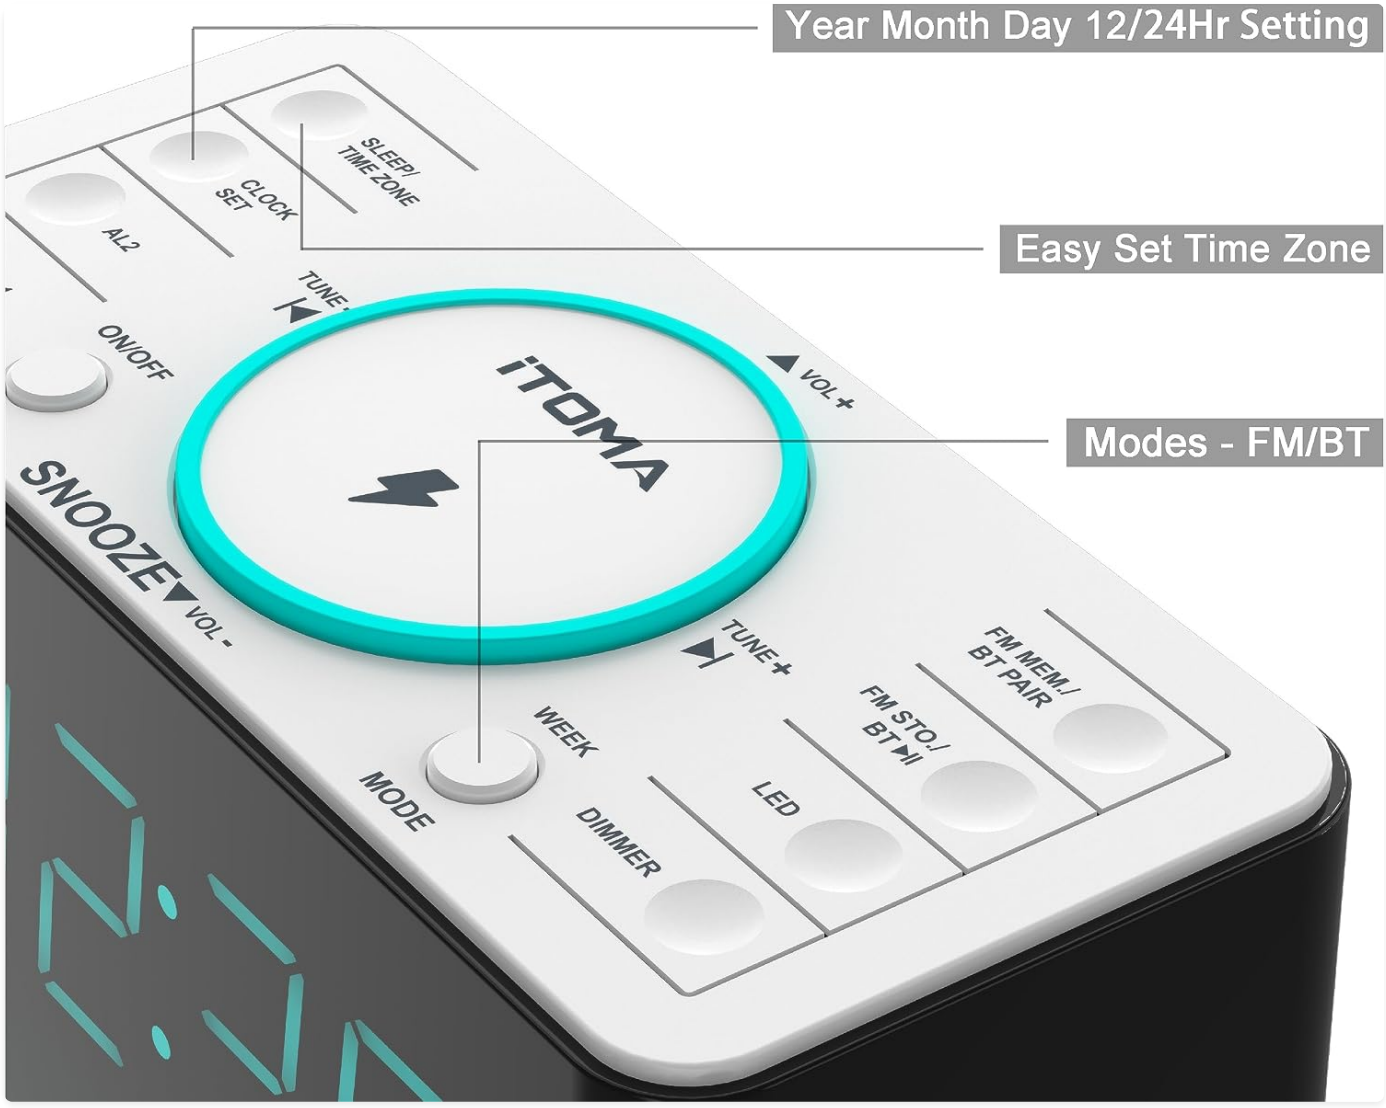


Figure 3.1: Top panel controls and display of the iTOMA CKS207.

- **SNOOZE/VOL- Button:** Press to snooze alarm; long press to decrease volume.
- **VOL+ Button:** Long press to increase volume.
- **TUNE-/TUNE+ Buttons:** Adjust FM frequency; navigate menus.
- **CLOCK SET Button:** Enter time setting mode.
- **AL1/AL2 Buttons:** Set Alarm 1 and Alarm 2.
- **ON/OFF Button:** Power on/off the unit.
- **SLEEP/TIME ZONE Button:** Set sleep timer; adjust time zone.

- **FM MEM/BT PAIR Button:** Save FM presets; initiate Bluetooth pairing.
- **FM STO/BT MII Button:** Auto-scan and store FM stations; play/pause Bluetooth.
- **WEEK Button:** Select alarm days.
- **DIMMER Button:** Adjust display brightness.
- **LED Button:** Control night light.
- **MODE Button:** Switch between FM Radio and Bluetooth modes.
- **Wireless Charging Pad:** Top surface for wireless charging compatible devices.
- **USB Charging Port (Type-A):** Rear port for wired device charging.



Figure 3.2: Multiple charging options including wireless and USB ports.

4. Setup

4.1 Power Connection

Connect the provided power adapter to the DC IN jack on the back of the unit and then plug it into a standard wall outlet. The unit will power on and the display will illuminate.

4.2 Initial Time Setting

Upon initial power-up, the clock may automatically set the time. If not, or if you need to adjust it:

1. Press and hold the **CLOCK SET** button. The hour digits will flash.
2. Use the **TUNE-** or **TUNE+** buttons to adjust the hour.
3. Press **CLOCK SET** again to confirm the hour. The minute digits will flash.
4. Use the **TUNE-** or **TUNE+** buttons to adjust the minutes.
5. Press **CLOCK SET** to confirm the minutes. The year digits will flash.
6. Repeat the process to set the year, month, and day.
7. Press **CLOCK SET** one last time to exit time setting mode.

4.3 Battery Backup

The unit includes a memory battery backup to retain time and alarm settings during a power outage. This battery is for backup purposes only and does not power the display or functions of the clock.

5. Operating Instructions

5.1 Setting the Time and Date

Refer to section 4.2 for detailed instructions on setting the time and date.

5.2 Alarm Settings

The iTOMA CKS207 features dual alarms with four alarm modes.



Figure 5.1: Dual alarm functionality.

1. Press and hold the **AL1** or **AL2** button. The alarm hour digits will flash.
2. Use **TUNE-** or **TUNE+** to adjust the alarm hour. Press **AL1**/**AL2** to confirm.
3. Adjust the alarm minutes using **TUNE-** or **TUNE+**. Press **AL1**/**AL2** to confirm.
4. Select the alarm source (FM Radio or Buzzer) using **TUNE-** or **TUNE+**. Press **AL1**/**AL2** to confirm.
5. Choose the alarm mode (Single Day, Every Day, Weekdays Only, Weekends Only) using **WEEK** button. Press **AL1**/**AL2** to confirm.
6. To activate/deactivate an alarm, short press **AL1** or **AL2**. The alarm icon will appear/disappear on the display.

5.3 FM Radio Operation

1. Press the **MODE** button to switch to FM Radio mode.
2. Use **TUNE-** or **TUNE+** to manually tune to a desired frequency.
3. To auto-scan and store stations, press and hold the **FM STO**/**BT MII** button. The radio will scan and save available stations to presets.
4. To recall saved presets, short press the **FM MEM**/**BT PAIR** button, then use **TUNE-** or **TUNE+** to cycle through presets.

5.4 Bluetooth Pairing and Playback

Connect your smartphone or other Bluetooth-enabled device to the alarm clock.



Figure 5.2: Bluetooth connectivity for audio streaming.

1. Press the **MODE** button to switch to Bluetooth mode. The Bluetooth icon will flash on the display.
2. On your device, enable Bluetooth and search for

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question