Makita Macpack Type 3 (A-60523), Inner Tray (835W78-0)

Makita Macpack Type 3 System Case and Inner Tray Instruction Manual

Models: Macpack Type 3 (A-60523), Inner Tray (835W78-0)


1. Introduction

This instruction manual provides essential information for the proper use, setup, and maintenance of your Makita Macpack Type 3 System Case (A-60523) and its dedicated genuine inner tray (835W78-0). This system is designed to provide organized and secure storage for various Makita power tools, specifically compatible with the HS005G, HS006G, HS007G, and HS008G series cordless circular saws, along with their accessories.

Please read this manual thoroughly before using the product to ensure safe and efficient operation and to maximize the lifespan of your storage system.

2. Product Overview

The Makita Macpack Type 3 System Case is a robust, stackable, and interlocking storage solution. It features durable construction and a secure latching mechanism, making it ideal for transporting and organizing tools on job sites or in workshops. The included genuine inner tray is custom-molded to fit specific Makita tools, ensuring they are held securely in place and protected from movement during transport.

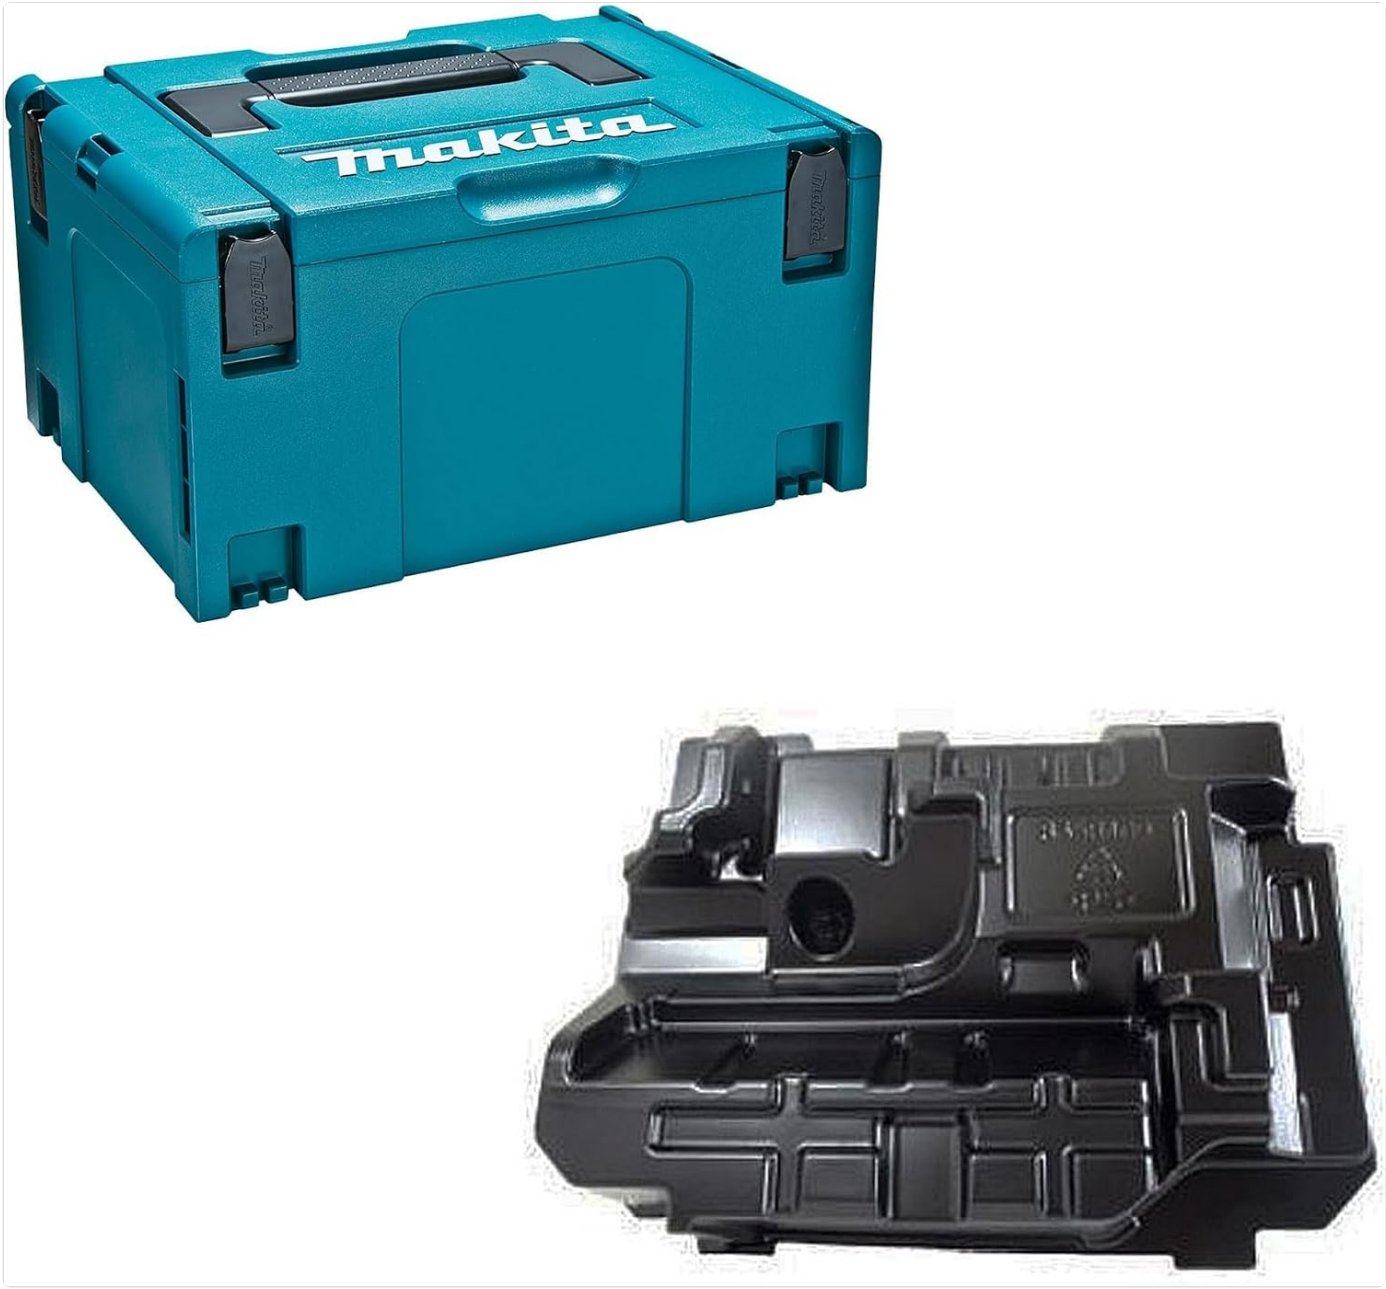

An image showing the Makita Macpack Type 3 System Case in teal with the Makita logo on top, alongside its dedicated black inner tray. The case is designed for organized storage of power tools and accessories.

3. Components

- **Makita Macpack Type 3 System Case (A-60523):** The main outer shell, typically teal in color, with a top handle and side latches for stacking.
- **Genuine Inner Tray (835W78-0):** A custom-molded black plastic insert designed to securely hold Makita HS005G, HS006G, HS007G, or HS008G series cordless circular saws and their associated accessories (e.g., battery, charger, saw blade).

4. Setup

1. **Unpacking:** Carefully remove the Macpack case and inner tray from their packaging. Inspect for any signs of damage.
2. **Inner Tray Placement:** Open the Macpack Type 3 case by releasing the front latches. Place the genuine inner tray (835W78-0) into the bottom of the case. The tray is designed to fit snugly in one orientation.
3. **Tool Storage:** Place your compatible Makita HS005G, HS006G, HS007G, or HS008G series cordless circular saw into the designated molded cavity within the inner tray. Ensure the tool sits flush and securely.

4. **Accessory Storage:** Utilize the remaining molded compartments in the inner tray for storing batteries, chargers, saw blades, or other small accessories.
5. **Closing the Case:** Once all items are securely placed, close the lid of the Macpack case and engage the front latches until they click into place.

5. Operating

- **Opening:** To open the case, release the two front latches by pulling them outwards and upwards. Lift the lid.
- **Closing:** To close, lower the lid and press down firmly on the front latches until they click securely into place. Ensure both latches are fully engaged before lifting or transporting.
- **Stacking:** Macpack cases are designed to interlock. Align the feet of an upper case with the grooves on the lid of a lower case. Press down firmly until the cases click together. Use the side latches to secure multiple stacked cases together for stable transport.
- **Carrying:** Use the integrated top handle for carrying a single case. When multiple cases are stacked and latched, they can be carried as a single unit.

6. Maintenance

- **Cleaning:** Clean the case and inner tray regularly with a damp cloth and mild detergent. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic.
- **Inspection:** Periodically inspect the latches, hinges, and handle for any signs of wear, damage, or loose components. Ensure they operate smoothly and securely.
- **Storage:** Store the case in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

7. Troubleshooting

- **Case won't close properly:** Ensure no items are obstructing the lid or the inner tray. Check if the inner tray is correctly seated. Verify that the latches are aligned with their respective slots.
- **Latches are stiff or difficult to engage:** Clean any dirt or debris from the latch mechanism. A small amount of silicone spray can be applied to the moving parts if necessary, but avoid over-lubrication.
- **Cases won't stack securely:** Ensure the feet of the upper case are correctly aligned with the grooves on the lid of the lower case. Apply firm, even pressure until they click. Check for any foreign objects on the stacking surfaces.
- **Inner tray doesn't fit:** Confirm you have the correct inner tray model (835W78-0) for the Macpack Type 3 case (A-60523). Ensure it is oriented correctly within the case.

8. Specifications

Feature	Specification
Product Name	Makita Macpack Type 3 System Case
Case Model Number	A-60523
Inner Tray Model Number	835W78-0
Compatibility	Makita HS005G, HS006G, HS007G, HS008G series cordless circular saws

Material	Durable Plastic
Color	Case: Teal, Inner Tray: Black
Stackable	Yes, with other Macpack cases

9. Warranty & Support

This Makita product is covered by the manufacturer's standard warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Makita website for your region. For technical support, spare parts, or service inquiries, please contact Makita customer service or an authorized Makita service center.
You can find contact information and further resources on the official Makita website: www.makita.com

© 2023 Makita Corporation. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question