Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VASAGLE ULTV096B01V1

VASAGLE ULTV096B01V1 TV Stand Instruction Manual

Model: ULTV096B01V1

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your VASAGLE ULTV096B01V1 TV Stand. This console is designed to accommodate TVs up to 75 inches, featuring a 70.1-inch width, multiple storage shelves, and a robust steel frame with rustic brown engineered wood panels. Please read all instructions carefully before assembly and use to ensure safe and proper installation.



Image: The VASAGLE TV Stand, showcasing its design and storage capabilities in a modern living room.

Safety Information

- Children are not allowed to climb or play on the product for safety reasons.
- Ensure all screws and fasteners are securely tightened before use.
- Do not exceed the maximum weight capacity of the top surface or shelves.

- Place the TV stand on a level surface to prevent tipping.
- Keep small parts away from children during assembly.

Package Contents

Verify that all components listed below are present before beginning assembly:

- 1 x TV Stand (Disassembled components)
- 1 x Accessory Kit (Includes all necessary hardware and tools)
- 1 x Instructions Manual (This document)

Product Specifications

Feature	Detail
Model Number	ULTV096B01V1
Color	Rustic Brown + Black
Dimensions (L x W x H)	70.1 x 15.4 x 20.5 inches (178 x 39 x 52 cm)
Item Weight	46.3 Pounds (21 kg)
Material Type	Alloy Steel, Engineered Wood
Max TV Size Supported	Up to 75 inches
Assembly Required	Yes

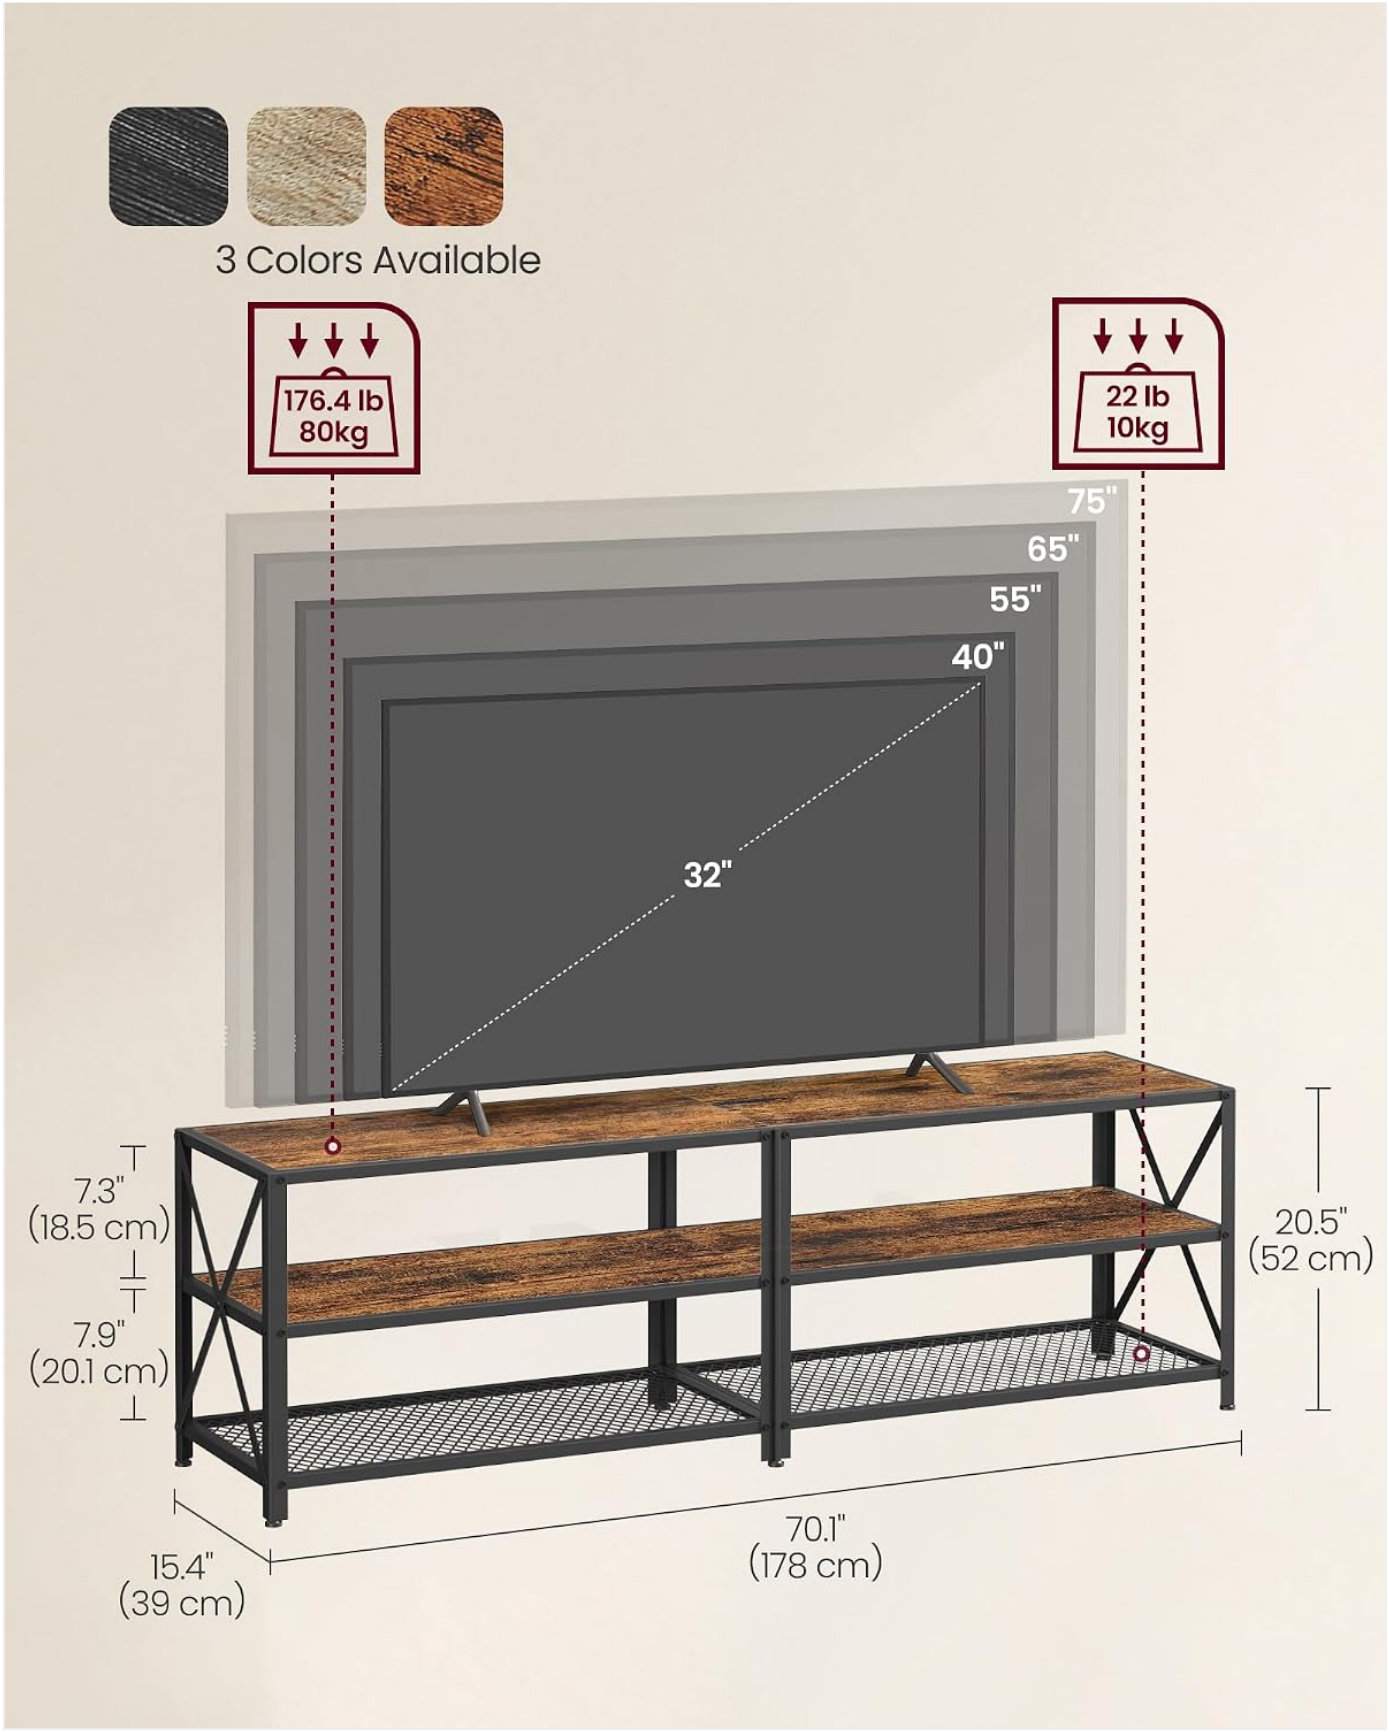


Image: Detailed dimensions of the TV stand and compatible TV sizes.

Setup and Assembly

The VASAGLE TV Stand is designed for straightforward assembly. Follow the numbered steps and diagrams provided in the included accessory kit's instructions. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Identify Parts:** Familiarize yourself with the numbered parts and hardware.
3. **Assemble Frame:** Begin by connecting the steel frame components using the provided screws and tools. Ensure X-shaped bars are correctly positioned for stability.
4. **Install Shelves:** Securely attach the engineered wood shelves and the mesh bottom shelf to the frame.
5. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the stand. These can be adjusted to stabilize the unit on uneven floors.
6. **Final Tightening:** Once all parts are assembled, gently tighten all screws to ensure a robust and stable structure.



Image: Detail of the sturdy X-shaped side frames and firm connections, ensuring durability.

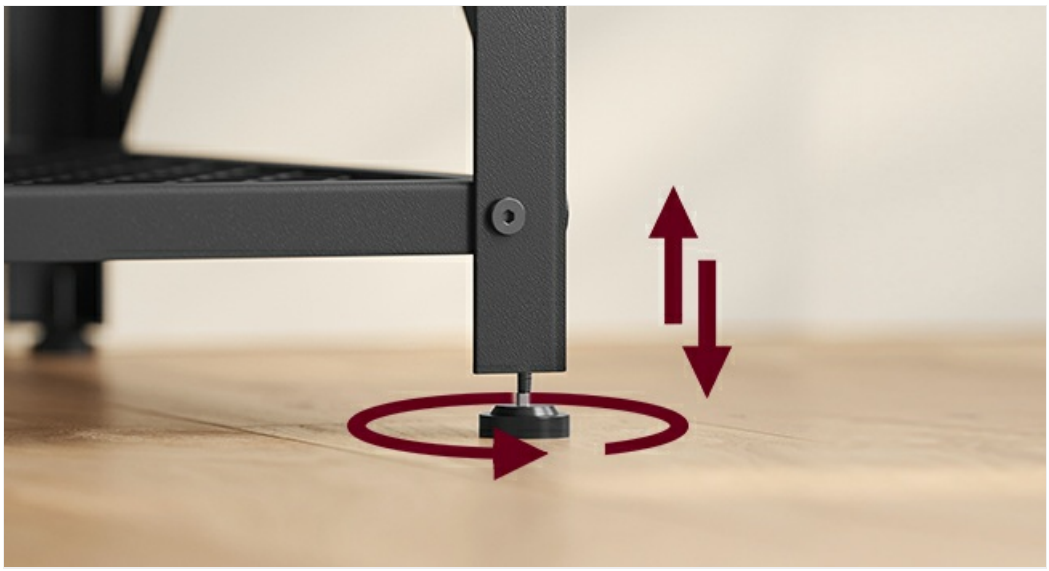


Image: Adjustable feet for stability on various floor types.

Operating Instructions

Once assembled, your VASAGLE TV Stand is ready for use. Its open design provides ample space for various media devices and decorative items.

- **TV Placement:** Carefully place your television on the top surface. Ensure the TV's base fits securely within the stand's dimensions and does not overhang excessively.
- **Organize Media:** Utilize the three open shelves to store your DVD player, game console, soundbar, books, and other entertainment accessories.
- **Cable Management:** The open back design allows for easy routing and management of cables to keep your entertainment area tidy.
- **Adjust Leveling:** If the stand appears wobbly, adjust the leveling feet at the bottom until the unit is stable.



Image: The TV stand with a television and organized items on its open shelves.

Your browser does not support the video tag.

Video: A demonstration of the VASAGLE TV Stand's open storage and adjustable feet features.

Maintenance

To maintain the appearance and longevity of your TV stand, follow these simple care instructions:

- **Cleaning:** Wipe with a dry cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage to the engineered wood surfaces.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

Troubleshooting

If you encounter any issues with your TV stand, refer to the following common solutions:

- **Wobbling:** If the stand is unstable, adjust the leveling feet on the bottom of the legs until it sits firmly on the floor. Ensure the floor surface is even.
- **Loose Connections:** If any parts feel loose, re-tighten all screws using the appropriate tool from the accessory kit. Do not overtighten.
- **Missing Parts:** If you find any parts missing during assembly, please contact customer support with your product model number and a description of the missing part.
- **Surface Damage:** For minor scratches or blemishes on the engineered wood, touch-up pens or furniture markers matching the rustic brown finish may be used.

Warranty and Support

For warranty information, replacement parts, or further assistance, please contact VASAGLE customer support through the retailer where the product was purchased. Have your model number (ULTV096B01V1) ready for quicker service.

© 2024 VASAGLE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08ZCWVZW8

More documents and user manuals: **https://manuals.plus/**