Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic M8

Proscenic M8 Robot Vacuum and Mop User Manual

Model: M8 | Brand: Proscenic

1. Important Safety Information

Please read this manual carefully before using the Proscenic M8 Robot Vacuum and Mop. Keep it in a safe place for future reference.

- Ensure the robot is fully charged before first use.
- Do not use the robot in wet environments or near water.
- Remove loose cables, small objects, and fragile items from the cleaning area to prevent entanglement or damage.
- Supervise children and pets when the robot is operating.
- Only use the original charging dock and power adapter provided by Proscenic.
- Do not attempt to repair or modify the robot yourself. Contact customer support for assistance.
- Clean the robot regularly as instructed in the maintenance section to ensure optimal performance.

2. Package Contents

Verify that all items are present in your package:

- Proscenic M8 Robot Vacuum and Mop
- Charging Dock
- Power Adapter
- Side Brushes (2 pairs)
- Main Brush
- Dustbin
- Water Tank
- Mopping Cloths (2)
- Cleaning Tool
- User Manual



Image: All components included in the Proscenic M8 package, including the robot, charging dock, brushes, and cleaning tools.

3. Product Overview

3.1 Components



Image: The Proscenic M8 robot vacuum cleaner shown with its charging dock, remote control, mobile app interface, and water tank with mopping pad.

- **Lidar Sensor:** Located on top, enables precise navigation and mapping.
- **Power Button/Indicator:** Controls power and shows status.
- **Dustbin:** Collects dry debris during vacuuming.
- **Water Tank:** Holds water for mopping function.
- **Main Brush:** Central brush for deep cleaning carpets and hard floors.
- **Side Brushes:** Sweeps debris from edges and corners towards the main brush.
- **Wheels:** Allows movement across various floor types and over obstacles.
- **Sensors:** Anti-drop, anti-collision, and wall-following sensors for safe operation.

3.2 Key Features

- **IPNAS 4.0 Laser Scanning System:** Advanced Lidar navigation for accurate mapping and efficient cleaning paths.



Image: The robot vacuum actively scanning its environment to create a detailed map of the home.

- **3-in-1 Functionality:** Capable of sweeping, vacuuming, and mopping simultaneously.



Image: An illustration highlighting the separate dust box (280ml) and water tank (300ml) for combined vacuuming and mopping.

- **3000Pa Strong Suction:** Provides powerful cleaning for various debris.
- **Multi-Floor Mapping:** Stores multiple floor plans for multi-level homes.



Image: The mobile application displaying a detailed floor map, allowing users to track cleaning routes, set virtual boundaries, and select specific cleaning areas.

- **WiFi/Alexa/APP Connected:** Control the robot remotely via the ProscenicHome App, Amazon Alexa, or Google Assistant.



Image: The robot vacuum on a wooden floor, with icons indicating compatibility with Amazon Alexa, Google Assistant, and 2.4Ghz Wi-Fi networks.

- **Carpet Detection & Auto Boost Suction:** Automatically increases suction power when a carpet is detected for deeper cleaning.



Image: The robot vacuum transitioning from a hard floor to a carpet, illustrating its ability to detect carpets and automatically increase suction power from 900 Pa to 3000 Pa.

- **Obstacle Crossing:** Can easily cross obstacles up to 20mm, such as door sills and low carpets.
- **Y-Shaped Wet Mopping:** Mimics manual mopping for thorough floor cleaning with four levels of water volume adjustment.



Image: The robot vacuum mopping a hard floor, with water drops symbolizing the four adjustable water volume levels for mopping.

- **Super Long Running Time:** Up to 250 minutes of cleaning on a single charge (Note: Specifications state 130 minutes, actual runtime may vary based on mode and floor type).
- **Breakpoint Resume:** Automatically returns to the charging dock when battery is low and resumes cleaning from where it left off after recharging.



Image: The robot vacuum intelligently returning to its charging dock when its battery is low, indicating its breakpoint resume feature.

- **Virtual Walls & No-Go Zones:** Set boundaries via the app to restrict cleaning areas.

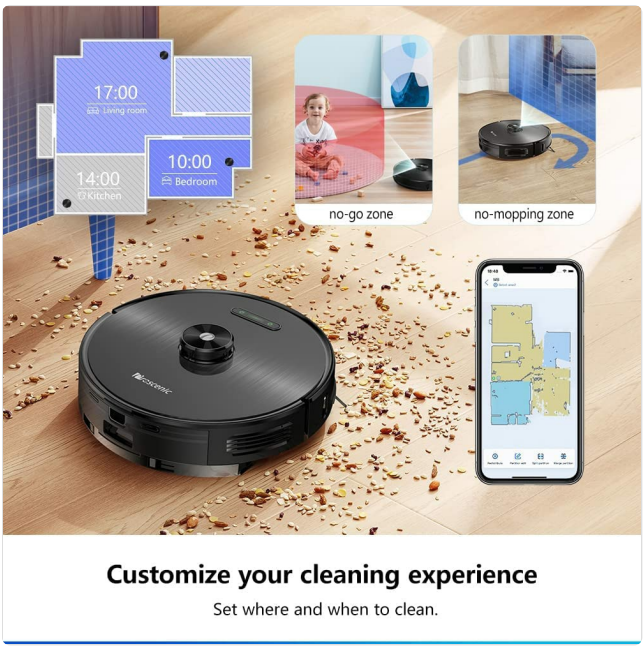


Image: The robot vacuum operating in a room with scattered debris, demonstrating the ability to customize cleaning areas, including setting no-go and no-mopping zones via the app.

4. Setup

1. **Unpack the Robot:** Carefully remove the robot and all accessories from the packaging. Remove any protective films or packing materials.
2. **Install Side Brushes:** Press the left and right side brushes into their respective slots on the bottom of the robot until they click into place.
3. **Place Charging Dock:** Position the charging dock against a wall in an open area with at least 0.5 meters (1.6 feet) of clear space on both sides and 1.5 meters (4.9 feet) in front. Ensure it is on a hard, level surface.
4. **Connect Power:** Plug the power adapter into the charging dock and then into a wall outlet. Ensure the indicator light on the charging dock illuminates.
5. **Initial Charging:** Place the robot onto the charging dock, ensuring the charging contacts align. The robot will begin charging automatically. For first use, fully charge the robot (approximately 4-5 hours) before operation.
6. **Download ProscenicHome App:** Scan the QR code in the quick start guide or search for "ProscenicHome" in your mobile app store (App Store/Google Play).
7. **Connect to Wi-Fi:** Follow the in-app instructions to connect your robot to your home 2.4GHz Wi-Fi network. This enables smart features and remote control.
8. **Initial Mapping:** Once connected, initiate a full cleaning cycle from the app. The robot will create a map of your home during this process, which is essential for advanced features like zone cleaning and virtual walls.

5. Operating Instructions

5.1 Starting a Cleaning Cycle

- **From Robot:** Press the power button on the robot once to start an auto-cleaning cycle.
- **From App:** Open the ProscenicHome app, select your M8 robot, and tap "Auto Clean" or choose a specific cleaning mode.
- **Voice Control:** If connected to Alexa or Google Assistant, say "Alexa, ask the smart bot to start cleaning" or "Hey Google, start cleaning with Proscenic."

Your browser does not support the video tag.

Video: Demonstrates the Proscenic M8 robot vacuum's features, including Lidar navigation, Y-shaped mopping, obstacle avoidance, carpet boost, and app/voice control. This video highlights the robot's intelligent cleaning capabilities.

5.2 Cleaning Modes

- **Auto Clean:** The robot intelligently plans the best cleaning path for your entire home.
- **Spot Clean:** Directs the robot to clean a specific small area with concentrated suction.
- **Edge Clean:** The robot cleans along walls and furniture edges.
- **Zone Clean:** Use the app to define specific areas on the map for the robot to clean.
- **Scheduled Clean:** Set cleaning schedules via the app for automated cleaning at desired times.

5.3 Mopping Function

1. **Prepare Water Tank:** Open the water tank cover and fill it with clean water. Do not use cleaning solutions that are not approved by Proscenic.
2. **Attach Mopping Pad:** Securely attach a clean mopping pad to the bottom of the water tank.
3. **Install Water Tank:** Slide the filled water tank into the designated slot at the back of the robot until it clicks into place.
4. **Start Mopping:** The robot will automatically switch to mopping mode or you can select "Power Mop" in the app. Adjust water flow levels (four levels available) via the app as needed.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Proscenic M8.

6.1 Emptying Dustbin

- Press the dustbin release button and pull out the dustbin.
- Open the dustbin cover and empty its contents into a trash can.

6.2 Cleaning Filters

- Remove the HEPA filter and sponge filter from the dustbin.
- Tap the filters to remove loose dirt. The HEPA filter is not washable.
- Rinse the sponge filter and dustbin with water. Ensure they are completely dry before reinstallation.

6.3 Cleaning Main Brush

- Flip the robot over and remove the main brush cover.
- Lift out the main brush. Use the provided cleaning tool to remove hair and debris tangled around the brush.
- Reinstall the main brush and cover.

6.4 Cleaning Side Brushes

- Pull the side brushes upwards to remove them.
- Remove any hair or debris. If the brushes are deformed, soak them in warm water for a few minutes to restore their shape.
- Reinstall the side brushes.

6.5 Cleaning Water Tank and Mopping Pad

- Empty any remaining water from the tank after each use.
- Remove the mopping pad and rinse it thoroughly with water. Allow it to air dry completely.

6.6 Cleaning Sensors and Charging Contacts

- Wipe all sensors (anti-drop, anti-collision, wall-following) and the charging contacts on both the robot and the charging dock with a clean, dry cloth.

7. Troubleshooting

Problem	Possible Cause	Solution
Robot does not turn on or charge.	Battery low; charging contacts dirty; power adapter not connected.	Place robot on charging dock; clean charging contacts; ensure power adapter is plugged in.
Robot gets stuck frequently.	Loose cables, small objects, or high thresholds.	Clear obstacles from cleaning path; use virtual walls in the app for problem areas.
Poor cleaning performance.	Dustbin full; brushes tangled; filters clogged.	Empty dustbin; clean main and side brushes; clean or replace filters.
Mopping function not working.	Water tank empty; mopping pad dirty or not installed correctly.	Fill water tank; clean/attach mopping pad correctly.
App connection issues.	Incorrect Wi-Fi password; robot too far from router; 5GHz Wi-Fi network.	Ensure correct 2.4GHz Wi-Fi; move robot closer to router; restart robot and router.
Robot makes unusual noise.	Debris in main brush or side brushes; fan intake blocked.	Clean main brush and side brushes; check for blockages in suction path.

If the problem persists, please refer to the full user manual or contact Proscenic customer support.

8. Specifications

Feature	Detail
Brand	Proscenic

Feature	Detail
Model Name	M8
Item Model Number	M8
Special Feature	HEPA Filter
Color	Black
Product Dimensions	13.78"L x 13.78"W x 3.82"H
Filter Type	Cartridge
Battery Life	130 minutes (up to 250 minutes in certain modes)
Power Source	Battery Powered
Batteries Included	Yes (1 AAA for remote, main unit rechargeable)
Control Method	Voice, App, Buttons
Compatible Devices	Amazon Echo (Alexa), Google Assistant
Form Factor	Robotic
Item Weight	11.2 pounds
Date First Available	March 18, 2021

9. Warranty and Support

Proscenic is committed to providing excellent customer service and support for your M8 Robot Vacuum and Mop.

- **24/7 Rapid Responding Service Team:** Dedicated support available around the clock for any inquiries or issues.
- **30-Days Money-Back Guarantee:** If you are not satisfied with your purchase, you may be eligible for a refund within 30 days.
- **Up to 12-Months Warranty:** Your product is covered by a warranty for up to 12 months from the date of purchase, protecting against manufacturing defects.
- **Fast Shipping from Local Warehouses:** For replacement parts or products, expect quick delivery from local distribution centers.

For further assistance, please visit the official Proscenic website or contact their customer service team directly.

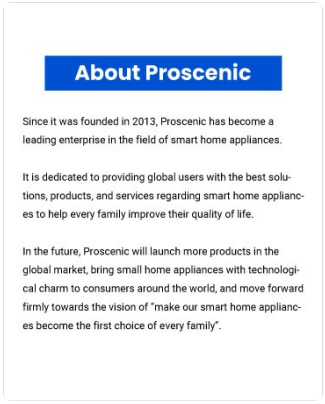


Image: Icons representing Proscenic's service policy: 24/7 support, 30-day money-back guarantee, 12-month warranty, and fast shipping.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08ZD29FG8

More documents and user manuals: **https://manuals.plus/**