RUQIJI 03-red

Ruqiji 26" x 35" Neck&Shoulder&Back Heating Pad User Manual

Brand: RUQIJI | Model: 03-red



This image shows the Ruqiji 26x35 inch heating pad in red, along with its digital controller and product packaging, highlighting its large size and integrated design.

Introduction

The Ruqiji 26" x 35" Neck&Shoulder&Back Heating Pad is designed to provide targeted heat therapy for tension, aches, cramps, and stiffness in various body parts, including the neck, shoulders, back, legs, arms, and abdomen. Featuring fast-heating technology and multiple temperature settings, this pad offers customizable comfort and pain relief. Its soft microfiber material ensures maximum comfort during use.

Important Safety Instructions

- Do not sit or place the heating pad underneath your body.
- Do not sharply fold the pad while it is in use.
- Ensure the controller is always accessible and not covered during operation.
- This product is equipped with built-in overheat protection for maximum safety.
- Always unplug the heating pad when not in use.

Key Features

- **LED Large Screen Controller:** Easy-to-read display for setting temperature and timer, suitable for all users.
- **XXXL Size (26"x35"):** Large enough to provide full body coverage for various body shapes and sizes, targeting neck, shoulder, and back areas effectively.
- **Fast-Heating Technology:** Warms up in just a few seconds due to an extended heating coil length (150% of ordinary heating pads).
- **12 Temperature Settings:** Offers a wide range of heat levels from 104℉ (40℃) to 144℉ (62℃) for personalized comfort.
- **4 Auto-Off Countdown Timers:** Select from 0.5H, 1H, 1.5H, or 2H auto-off settings for safety and energy saving. The LED screen displays the remaining time.
- **Soft Microfiber Material:** Provides a smooth and soft feel, enhancing comfort.
- **UL Certified:** Ensures product safety and reliability.



The LED controller allows for easy adjustment of temperature and timer settings.



This diagram illustrates the superior dense wiring of the Ruqiji heating pad compared to ordinary sparse wiring, contributing to faster heating.

Setup Guide

1. Unpack the heating pad and controller from its packaging.
2. Connect the detachable controller cord securely to the heating pad's port.
3. Plug the power cord into a standard 120-volt electrical outlet.
4. Position the heating pad on the desired body area for therapy.



The heating pad is designed to comfortably fit around the neck and shoulders, providing targeted heat.


52cm/20”
62cm/24”

The large size of the pad extends down the back for comprehensive coverage.

Operating Your Heating Pad

1. **Power On:** Press the Power Button on the LED controller to turn on the heating pad.
2. **Adjust Temperature:** Use the 'Temperature+' and 'Temperature-' buttons to select one of the 12 available heat settings (104℉ to 144℉). The current temperature will be displayed on the LED screen.
3. **Set Auto-Off Timer:** Press the 'Time Changed Button' to cycle through the 4 auto-off timer options: 0.5 hours, 1 hour, 1.5 hours, or 2 hours. The LED screen will show the time remaining in the countdown.
4. **Power Off:** Press the Power Button again to turn off the heating pad. It will also automatically shut off after the selected timer duration.



The flexible design allows for comfortable use while relaxing or lying down.

Care and Maintenance

The Ruqiji heating pad is designed for easy cleaning. The controller is removable, allowing the pad to be machine washed.

1. Ensure the heating pad is unplugged from the power outlet.
2. Detach the controller from the heating pad.
3. Machine wash the heating pad on a gentle cycle with cold water.
4. Tumble dry on low heat or air dry. Do not iron.
5. Ensure the heating pad is completely dry before reattaching the controller and using it again.

Troubleshooting

If you experience any issues with your Ruqiji heating pad, please consider the following:


- **No Heat/Power:** Ensure the controller is securely connected to the pad and the power cord is firmly plugged into a working electrical outlet.
- **Inconsistent Heat:** Verify that the pad is not sharply folded during use, as this can affect heat distribution.
- **Controller Malfunction:** If the LED screen is not displaying correctly or buttons are unresponsive, try unplugging and re-plugging the unit to reset it.

For persistent issues, please refer to the Warranty and Customer Support section.

Product Specifications

Specification	Detail
Model	03-red
Dimensions	26" x 35" (67cm x 89cm)
Material	Flannel
Temperature Settings	12 (104℉ ~ 144℉)
Auto-Off Timers	0.5H, 1H, 1.5H, 2H

Specification	Detail
Special Feature	Automatic Shut Off
Wattage	150 watts
Bulb Voltage	120 volts
Frequency	60 Hz
Manufacturer	Ruqiji
Date First Available	March 1, 2021

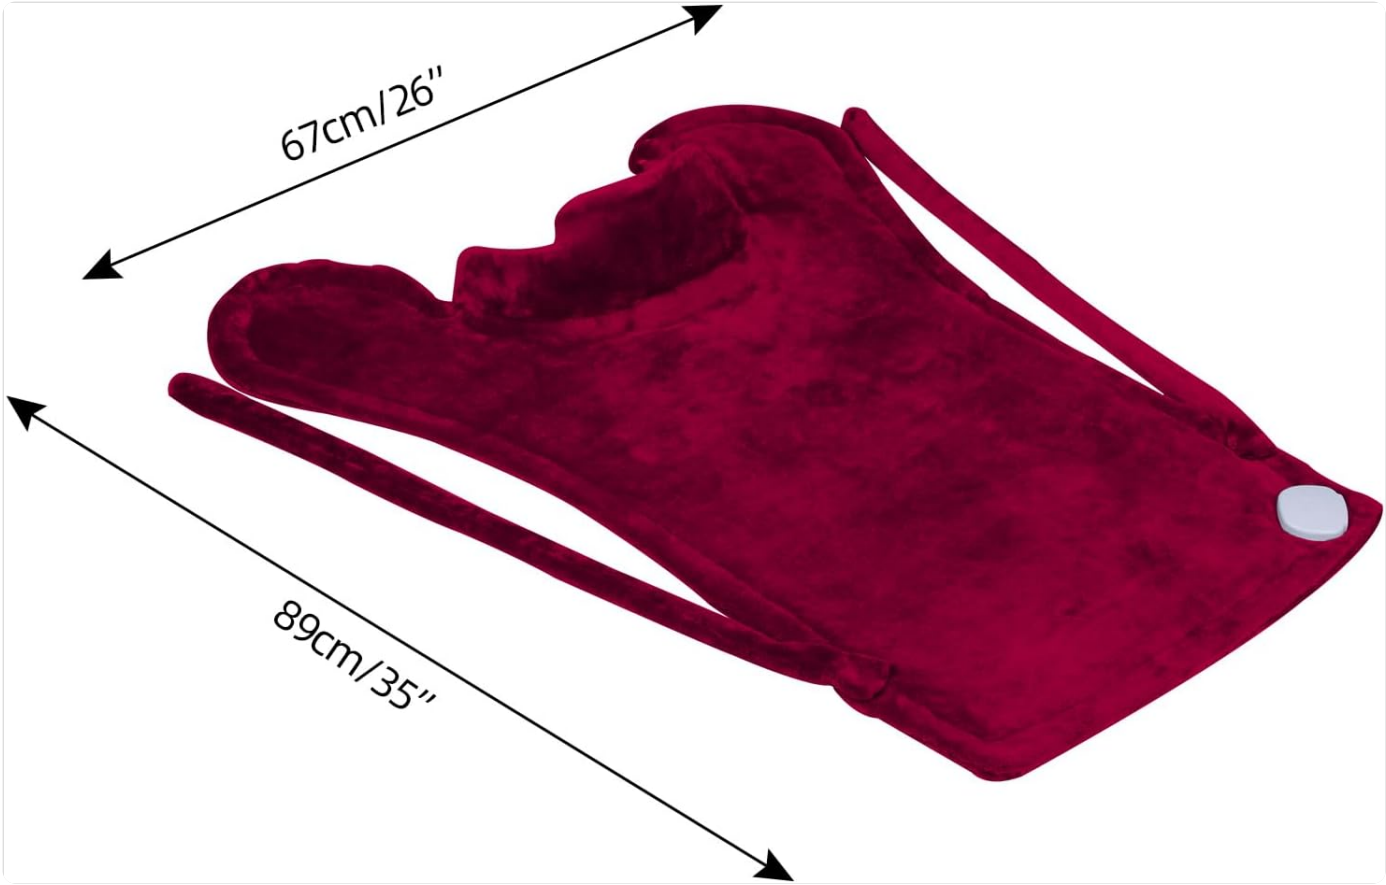

Detailed dimensions of the heating pad for reference.

Warranty and Customer Support

For any quality problems or assistance with your Ruqiji heating pad, please feel free to contact our service support team. Refer to the product packaging or the official Ruqiji website for specific contact details.

© 2025 RUQIJI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question