JISULIFE FA16

JISULIFE Camping Fan Instruction Manual

Model: FA16

1. Introduction

Thank you for choosing the JISULIFE Camping Fan. This portable, battery-operated fan is designed to provide comfortable airflow in various settings, including camping, outdoor activities, dormitories, and during power outages. Featuring detachable fan blades, remote control, and multiple speed settings, it offers convenience and versatility. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. Safety Information

- Do not insert fingers or any objects into the fan blades when the fan is operating.
- Keep the fan away from water or other liquids to prevent electric shock.
- Do not disassemble or modify the fan. Repairs should only be performed by qualified personnel.
- Keep out of reach of children.
- Use only the specified charging cable (Type-C) and power adapter.
- Avoid prolonged exposure to direct sunlight or high temperatures.

3. Package Contents

- JISULIFE Camping Fan (FA16)
- Remote Control
- USB Type-C Charging Cable
- User Manual

4. Product Overview and Features

The JISULIFE Camping Fan is designed for portability and efficient cooling. Key features include:

- **8000mAh Battery:** Provides extended operating time (up to 25 hours on low speed).
- **Detachable Fan Blades:** Easy to store, carry, and clean.
- **Remote Control:** Conveniently adjust settings from a distance.
- **4 Wind Speed Gears:** Low, Mid, High, and Natural Wind modes.
- **Timer Function:** Set for 2, 4, 6, or 8 hours.
- **Hanging Hook:** Stainless steel hook for versatile placement.
- **USB-C Rechargeable:** Fast and convenient charging.



Figure 4.1: JISULIFE Camping Fan and Remote Control.



Figure 4.2: Wide application of the fan in camping, hammock, and dormitory settings.

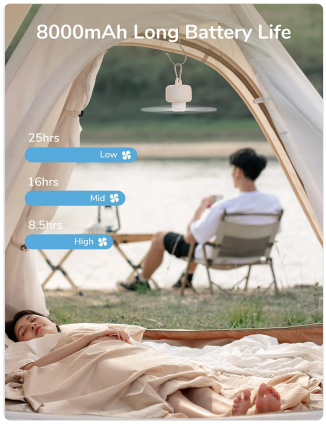


Figure 4.3: Illustrates the 8000mAh long battery life with approximate runtimes for low, mid, and high speeds.



Figure 4.4: Demonstrates the convenience of the wireless remote control for fan operation.



Figure 4.5: Shows the fan's detachable blades for easy storage and portability in a backpack.

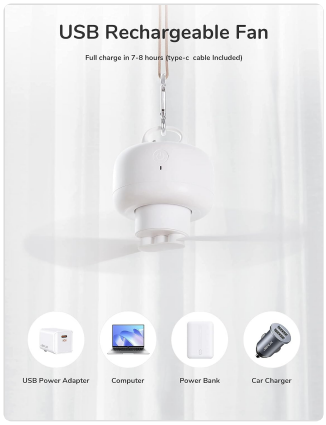


Figure 4.6: Illustrates different ways to charge the fan via USB, including power adapter, computer, power bank, and car charger.

5. Setup

5.1 Attaching Fan Blades

1. Carefully align each fan blade with its corresponding slot on the fan motor hub.
2. Gently push each blade until it clicks securely into place. Ensure all blades are firmly attached before

operation.

5.2 Hanging the Fan

The fan features a stainless steel hanging hook for versatile placement:

- Attach the hook to the top loop of the fan.
- Hang the fan from a tent ceiling, tree branch, gazebo frame, or any suitable overhead structure. Ensure the hanging point is stable and can support the fan's weight.

6. Operating Instructions

6.1 Power On/Off

- **Manual Control:** Press the power button on the fan unit to turn it on or off.
- **Remote Control:** Press the power button () on the remote control to turn the fan on or off.

6.2 Adjusting Wind Speed

The fan has 4 wind speed gears: Low, Mid, High, and Natural Wind.

- **Manual Control:** Press the power button repeatedly to cycle through the speed settings.
- **Remote Control:** Use the speed control buttons (**+/-** or specific speed icons) on the remote to select your desired wind speed.

6.3 Timer Function

Set the fan to automatically turn off after a specified period.

- **Remote Control:** Press the timer buttons (2H, 4H, 6H, 8H) on the remote control to set the desired shutdown time.

6.4 Remote Control Operation

The remote control allows for convenient operation from up to 5 meters away.

- Ensure the remote control has a clear line of sight to the fan's receiver.
- The remote can control power, wind speed, and timer settings.

Your browser does not support the video tag.

Video 6.1: Demonstration of the JISULIFE Camping Fan's features, including portability, detachable blades, hanging hook, remote control, and long battery life. This video highlights the fan's suitability for outdoor activities like camping.

7. Charging the Fan

The fan is equipped with an 8000mAh rechargeable battery and charges via a Type-C USB port.

- Connect the provided USB Type-C cable to the fan's charging port.
- Connect the other end of the cable to a USB power source (e.g., USB power adapter, computer, power bank, car charger).
- A full charge typically takes 7-8 hours. The charging indicator light will change to indicate a full charge.

8. Maintenance

8.1 Cleaning

- Before cleaning, ensure the fan is turned off and unplugged.
- Detach the fan blades for thorough cleaning.
- Wipe the fan unit and blades with a soft, damp cloth. Do not use abrasive cleaners or immerse the fan in water.
- Ensure all parts are completely dry before reassembling and using the fan.

8.2 Storage

- Store the fan in a cool, dry place when not in use.
- For long-term storage, it is recommended to fully charge the battery every 3 months to maintain battery health.

9. Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on	Low battery; Power button not pressed correctly	Charge the fan; Ensure power button is fully pressed
Weak airflow	Low battery; Fan blades dirty; Incorrect speed setting	Charge the fan; Clean fan blades; Increase speed setting
Remote control not working	Remote battery low; Obstruction between remote and fan; Remote too far	Replace remote battery; Remove obstruction; Move closer to fan (within 5m)
Fan makes unusual noise	Fan blades not properly installed; Foreign object in fan	Reinstall blades securely; Check for and remove any foreign objects

10. Specifications

Feature	Specification
Brand	JISULIFE
Model Name	FA16 (Camping Fan)
Battery Capacity	8000mAh Lithium Ion
Power Source	Battery Powered
Charging Port	USB Type-C
Charging Time	Approx. 7-8 hours
Working Time	25 hours (Low), 16 hours (Mid), 8.5 hours (High)
Wind Speed Gears	4 (Low, Mid, High, Natural Wind)
Timer Settings	2H, 4H, 6H, 8H
Control Method	Manual Button, Remote Control
Remote Control Range	Up to 5 meters

Feature	Specification
Product Dimensions	3.8"D x 6.4"W x 5.6"H
Item Weight	1 Pound
Noise Level	70 dB (Max)
Blade Material	Plastic

11. Warranty and Support

JISULIFE products are manufactured to high-quality standards. For warranty information, product support, or any inquiries, please refer to the contact information provided on the product packaging or visit the official JISULIFE website. Keep your purchase receipt for warranty claims.

© 2024 JISULIFE. All rights reserved.