Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Secura X3-PM-01

Secura X3-PM-01 Foaming Soap Dispenser Instruction Manual

Model: X3-PM-01 | Brand: Secura

Introduction

Thank you for choosing the Secura X3-PM-01 Automatic Foaming Soap Dispenser. This touchless dispenser is designed for convenience and hygiene in your kitchen or bathroom. Please read this manual carefully to ensure proper setup, operation, and maintenance of your device.

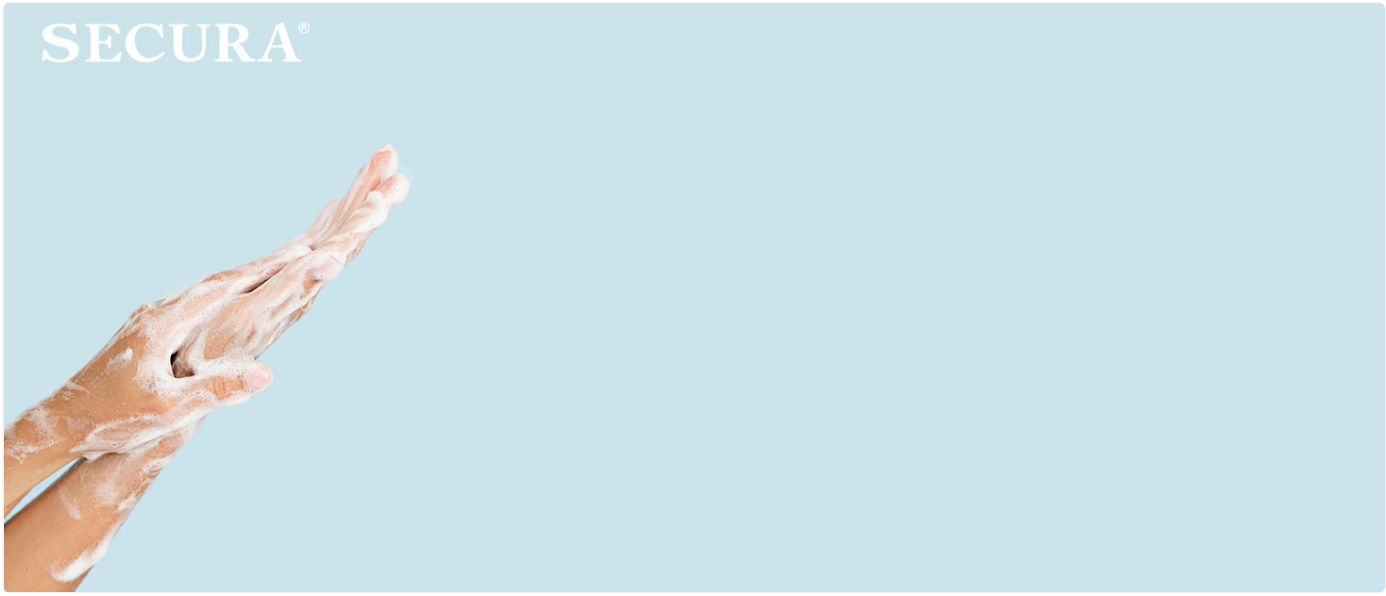


Image: Secura X3-PM-01 Foaming Soap Dispenser in a modern bathroom setting.

What's Included

- Secura Foaming Soap Dispenser (Model: X3-PM-01)
- USB Charging Cable
- User Manual
- Small bottle for cleaning (for maintenance)

Setup

1. **Charge the Device:** Before first use, fully charge the dispenser using the provided USB charging cable. The charging port is located on the side. A full charge takes approximately 2-3 hours and provides up to three months of standby time. Use a 5V adapter with a USB interface; higher voltage adapters may damage the product.
2. **Prepare Soap Solution:**
    - For best results, use foaming hand soap directly.
    - If using standard liquid soap, dilute it with water at a 1:4 ratio (1 part soap to 4 parts water). Stir the solution evenly to ensure proper foaming and prevent blockages.
3. **Fill the Dispenser:**
    - Rotate and lift up the upper part of the dispenser to access the reservoir.
    - Carefully pour the prepared soap solution into the 300ml reservoir.
    - Reattach the upper part by aligning and twisting until secure.
4. **Power On:** Press and hold the power button on top for 2 seconds until the white light illuminates, indicating the dispenser is powered on and set to high volume.



Image: Visual guide for filling and assembling the dispenser, showing the dilution ratio for liquid soap.



Image: Illustration demonstrating the recommended 1:4 dilution ratio for regular hand sanitizer.

Operating Instructions

1. **Dispensing Soap:** Place your hand under the nozzle. The infrared motion sensor will detect your hand and dispense a measured amount of foaming soap.
2. **Adjusting Volume:** The dispenser features adjustable volume control via the power button.
    - **White Light:** High Volume / Power ON (default)
    - **Blue Light:** Medium Volume
    - **Green Light:** Small Volume
    - **Red Light:** Low Volume / Power OFF (press and hold for 2 seconds to power off)



Image: Diagram illustrating the one-key operation for adjusting soap volume and power.



Image: Close-up of the dispenser's top button with indicators for high, medium, and low volume settings.

Your browser does not support the video tag.

Video: Demonstration of the Secura Touchless Foam Automatic Soap Dispenser in use, showing foam dispensing.

Maintenance

- **Cleaning the Dispenser:**
  - If the dispenser is not used for a long time, pour out any remaining liquid soap.
  - Add clean water to the reservoir.
  - Activate the dispenser several times until water is dispensed to clear any residual foam or soap in the internal pipes. This prevents blockages.
  - Use the provided small bottle to inject clean water through the tube to clear any residue.
- **External Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth. Do not submerse the device in water. The IPX5 waterproof rating protects against splashes, but not submersion.



Image: The dispenser highlighting its IPX5 updated waterproof feature, indicating splash resistance.

Your browser does not support the video tag.

Video: Instructions on how to dilute regular soap and fill the Secura Foaming Soap Dispenser.

Troubleshooting

- **Q: Does not hold a charge.**
  A: Please try changing the USB charging cable to see if it charges normally. Ensure the charging adapter is 5V.
- **Q: Cannot turn on the soap dispenser properly after charging.**
  A: Press and hold the switch button for 2 seconds to see if the white light illuminates.
- **Q: What adapter should I use?**
  A: We recommend using a 5V adapter with a USB interface. Adapters with voltage higher than 5V may cause damage to the product.
- **Q: Dispenser is not producing foam or is blocked.**
  A: Ensure non-foaming soap has been diluted with water at a 1:4 ratio. If the dispenser has not been used for a long time, clean the internal pipes by dispensing clean water as described in the Maintenance section.

Specifications

Brand	Secura
Model Number	X3-PM-01
Color	White
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	2.76"L x 3.86"W x 8.62"H

Liquid Volume	10 Fluid Ounces (300 Milliliters)
Waterproof Rating	IPX5
Power Source	Rechargeable (USB Fast Charge)
Material Type Free	BPA Free, Mercury Free, PVC Free

Warranty and Support

Secura offers a **2-year service warranty** for this product. For any questions, concerns, or warranty claims, please contact Secura customer support through their official channels or the retailer where the product was purchased.
You can visit the official Secura store for more information:Secura Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08ZKR4JRJ

More documents and user manuals: **https://manuals.plus/**