Coleshome B0101678-1USAN0602AB4KNNL

Coleshome 63-Inch Black Computer Desk Instruction Manual

Model: B0101678-1USAN0602AB4KNNL

Introduction

Thank you for choosing the Coleshome 63-Inch Black Computer Desk. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new desk. Please read these instructions carefully before beginning assembly and retain them for future reference.

Safety Information

To ensure safe use of your Coleshome computer desk, please observe the following guidelines:

- Assemble the desk properly according to the instructions provided.
- Do not exceed the maximum weight recommendation of 100 pounds (45 kg).
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Avoid placing hot items directly on the tabletop without protective coasters.
- Keep liquids away from electronic devices on the desk to prevent damage.
- Use caution when moving the desk to prevent injury or damage to the product or surroundings.

Package Contents

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desktop Panel
- Metal Leg Frames (2)
- Cross Braces (2)
- Headphone Hook
- Assembly Hardware (screws, Allen wrench)
- Instruction Manual

Setup and Assembly Instructions

Assembly of the Coleshome 63-Inch Computer Desk is designed to be straightforward and can typically be completed within 30 minutes by one person. All necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Identify each component using the parts list in the included manual.
2. **Attach Leg Frames:** Connect the two metal leg frames to the desktop panel using the provided screws. Ensure the frames are oriented correctly as shown in the diagrams.
3. **Install Cross Braces:** Secure the two cross braces between the leg frames. These braces enhance the desk's stability. Tighten all screws firmly with the Allen wrench.
4. **Attach Headphone Hook:** Mount the headphone hook to the desired side of the desk frame using the designated screw.
5. **Final Check:** Once assembled, gently lift and place the desk in its intended location. Ensure all connections are secure and the desk is stable.



Figure 1: Assembled Coleshome 63-Inch Black Computer Desk, showcasing its spacious desktop and sturdy metal frame.

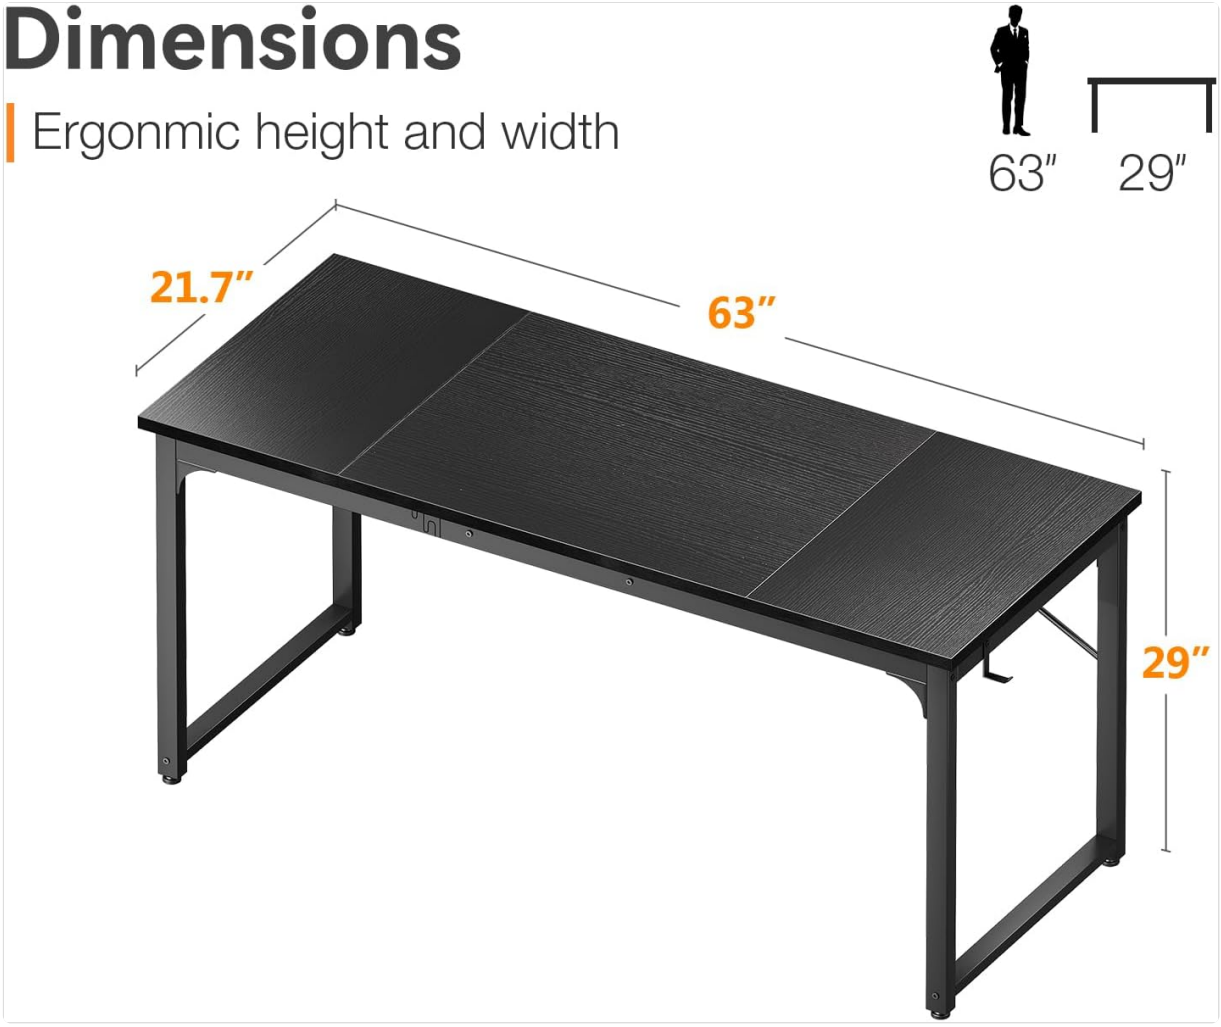


Figure 2: Detailed dimensions of the desk, highlighting its ergonomic height and width for comfortable use.

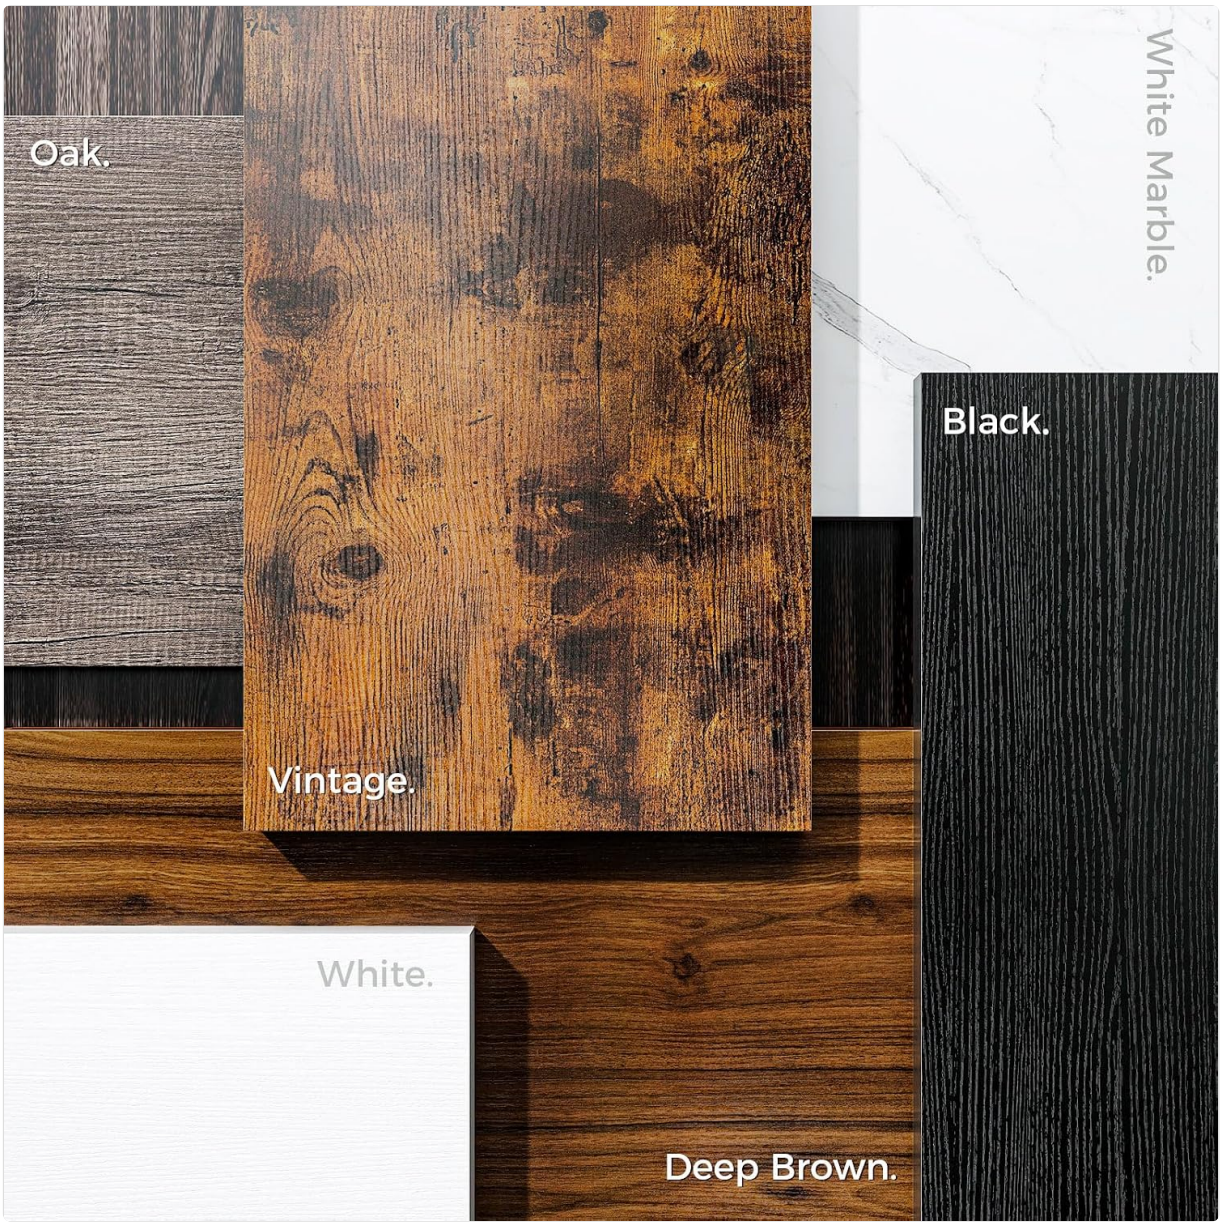


Figure 3: The integrated headphone hook provides convenient storage for audio accessories.

Operating Instructions

The Coleshome computer desk is designed for versatile use in various environments, including home offices, study areas, and gaming setups.

- **Placement:** Position the desk on a flat, stable surface. Adjustable feet are included to compensate for uneven floors and prevent wobbling.
- **Weight Distribution:** Distribute weight evenly across the desktop. While sturdy, concentrated heavy loads in one area should be avoided.
- **Headphone Hook:** Utilize the integrated headphone hook to keep your headphones organized and within easy reach, freeing up desktop space.



Figure 4: The desk provides ample space for a productive home office setup.



Figure 5: The spacious desktop accommodates multiple items, suitable for various tasks.

Maintenance

Proper care will extend the life and appearance of your Coleshome desk.

- **Cleaning:** The melamine veneer tabletop is waterproof, heat-resistant, and dust-free. For routine cleaning, simply wipe with a damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Scratch Resistance:** The desk features a scratch-resistant surface. However, using mouse pads and coasters is recommended to further protect the surface from wear and tear.
- **Structural Integrity:** Periodically check all screws and connections to ensure they remain tight. Re-tighten as needed to maintain stability.



Figure 6: The tabletop's smooth texture is easy to clean and maintain.

Troubleshooting

If you encounter any issues with your desk, refer to the following common solutions:

- **Wobbling Desk:** Ensure the desk is placed on a level surface. Adjust the leveling feet at the bottom of each leg until the desk is stable. Check that all assembly screws are securely tightened.
- **Missing Parts:** If any parts were missing upon delivery, please refer to the 'Package Contents' section and contact Coleshome customer support for assistance.
- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure all components are oriented correctly. If issues persist, contact customer support.

Specifications

Feature	Detail

Brand	Coleshome
Model Number	B0101678-1USAN0602AB4KNNL
Product Dimensions	63"D x 22"W x 29"H (160cm D x 56cm W x 74cm H)
Color	Black
Style	Modern
Base Material	Metal
Top Material Type	Engineered Wood (Melamine Veneer)
Special Feature	Scratch Resistant, Headphone Hook
Maximum Weight Recommendation	100 Pounds (45 kg)
Assembly Required	Yes
Item Weight	24.69 Pounds (11.2 kg)

Warranty and Support

Coleshome is committed to customer satisfaction. If you have any questions, concerns, or require assistance with your product, please contact Coleshome customer support. Refer to your purchase documentation for specific warranty details and contact information.