Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Contex CON6519NSUTSA

Contex 6519N Ultra HD 4K Smart Android TV 65-Inch User Manual

Model: CON6519NSUTSA

Introduction

This manual provides essential instructions for the safe and efficient operation of your Contex 6519N Ultra HD 4K Smart Android TV. Please read this manual thoroughly before using the television and retain it for future reference. It covers setup, operation, maintenance, and troubleshooting for the 65-inch model.

Important Safety Information

- **Power Source:** Ensure the TV is connected to an AC 100-240V, 50/60Hz power supply.
- **Ventilation:** Do not block ventilation openings. Maintain adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Avoid placing objects filled with liquids on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Mounting:** Follow instructions carefully when mounting the TV on a wall or stand. Use only manufacturer-recommended accessories.
- **Lightning:** Unplug the TV during lightning storms or when unused for long periods.
- **Servicing:** Refer all servicing to qualified service personnel.

Package Contents

Verify that all items are present in the packaging:

- Contex 6519N Ultra HD 4K Smart Android TV (65-inch display)
- Remote Control

- Power Cable
- TV Stand (2 pieces)
- Screws for Stand Assembly
- User Manual (this document)

Setup

1. Attaching the TV Stand

1. Carefully place the TV face down on a soft, flat surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly.

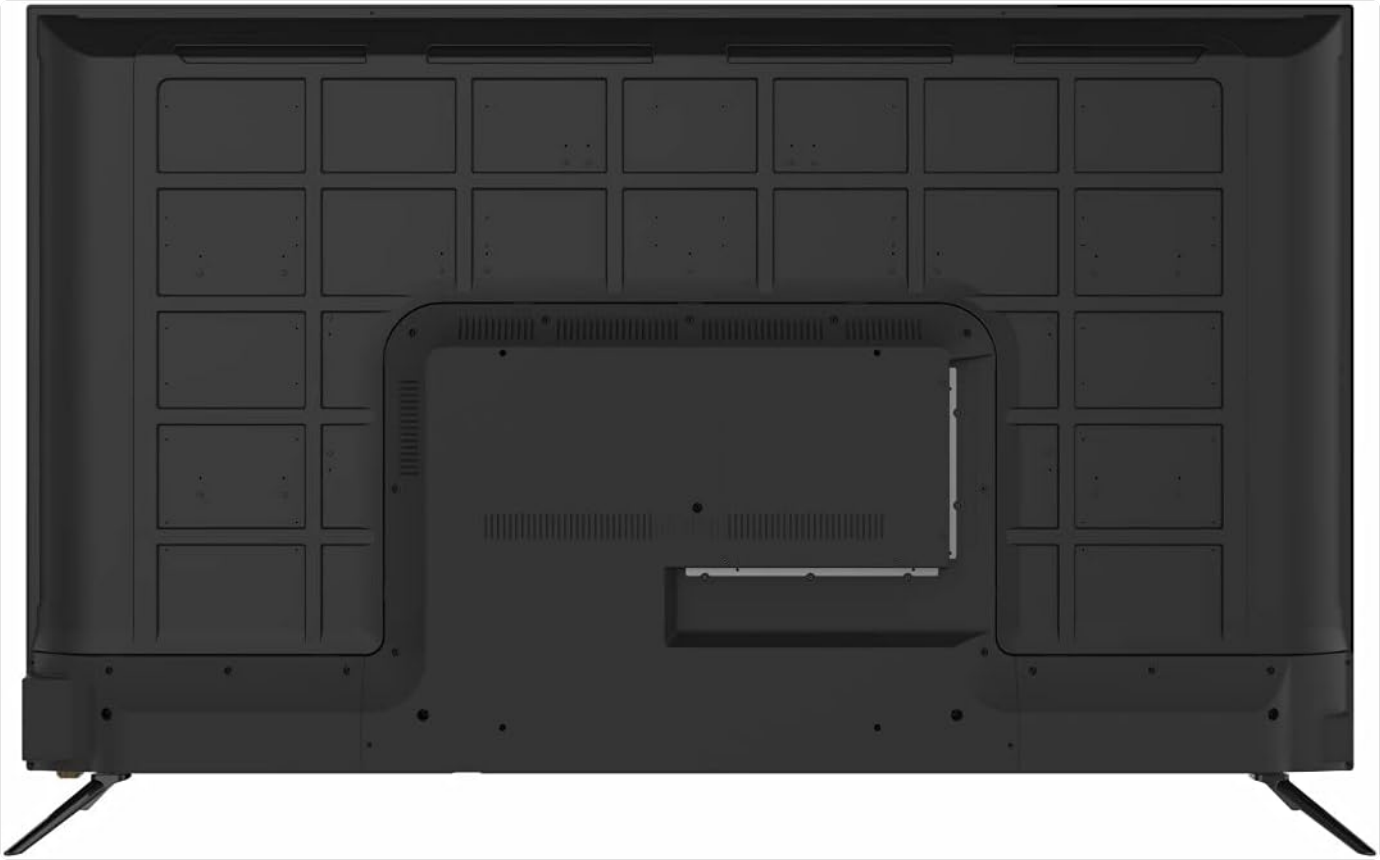

Image: Front view of the Contex 6519N TV with its stand attached, ready for placement.

2. Connecting Peripherals

The TV features multiple connectivity options. Refer to the back panel for port locations.

Image: Side profile of the Contex 6519N TV, highlighting the various input ports such as HDMI and USB.

- **HDMI:** Connect Blu-ray players, gaming consoles, or set-top boxes using HDMI cables. The TV supports 4K resolution via HDMI.
- **USB:** Insert USB drives for media playback.
- **Antenna/Cable:** Connect an antenna or cable TV source for broadcast channels.
- **Power:** Connect the power cable to the TV and then to a wall outlet.

Operating Instructions

Remote Control Overview

Image: The remote control for the Contex 6519N TV, showing various buttons for navigation and function control.

- **Power Button:** Turns the TV on or off.
- **Source Button:** Selects input sources (HDMI, USB, TV).
- **Navigation Buttons:** Used to move through menus and select options.
- **Volume Up/Down:** Adjusts the audio level.
- **Channel Up/Down:** Changes TV channels.
- **Smart TV Buttons:** Dedicated buttons for accessing smart features and apps.

Initial Setup and Android TV Interface

1. Press the Power button on the remote control to turn on the TV.
2. Follow the on-screen prompts for initial setup, including language selection, network connection (Wi-Fi or Ethernet), and Google account login for Android TV features.
3. The Android TV home screen provides access to installed apps, streaming services, and settings.

Maintenance

- **Screen Cleaning:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (apply to cloth, not directly to screen).

- **Cabinet Cleaning:** Use a soft, dry cloth to clean the TV cabinet.
- **Dust Removal:** Regularly dust the ventilation openings on the back of the TV to prevent overheating.
- **Software Updates:** Periodically check for system updates in the TV's settings menu to ensure optimal performance and security.

Troubleshooting

Problem	Possible Solution
No power	Check if the power cable is securely connected to both the TV and the power outlet. Ensure the outlet is functional.
No picture, but sound is present	Verify the correct input source is selected. Check cable connections (HDMI, etc.).
No sound, but picture is present	Check volume level and mute settings. Ensure audio cables are correctly connected if using external speakers.
Remote control not working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Check antenna/cable connection. Adjust picture settings (brightness, contrast, sharpness). Ensure the source content is high quality.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the TV. Restart your router. Re-enter the Wi-Fi password.

Specifications

Model Number	CON6519NSUTSA
Screen Size	65 Inches (166 cm diagonal)
Display Technology	LED
Resolution	3840x2160 (4K Ultra HD)
Refresh Rate	240 Hz
Operating System	Android TV
Connectivity	HDMI, USB, Wi-Fi, Ethernet
Product Dimensions (W x D x H)	160 x 18 x 91 cm
Weight	20.7 kg

Color	Black

Warranty and Support

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Contex website. Keep your purchase receipt as proof of purchase for warranty claims.
For further assistance, contact Contex customer service.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B091NYPRSK

More documents and user manuals: **https://manuals.plus/**