Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Zilan ZLN0973

Zilan Electric Oven ZLN0973 - 15 Liter Instruction Manual

Model: ZLN0973

1. Introduction

Thank you for choosing the Zilan Electric Oven ZLN0973. This compact 15-liter electric oven is designed for versatile cooking, featuring a temperature range of 100-230°C, a 60-minute timer, and a 4-level function selector. Its double glass protection enhances safety and cooking efficiency. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Figure 1: Zilan Electric Oven ZLN0973

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the oven.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plug, or any part of the oven in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “OFF”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar items.
- Do not store any materials, other than manufacturer’s recommended accessories, in this oven when not in use.
- Do not place cooking utensils or baking dishes on the glass door.

3. Package Contents

Carefully unpack your Zilan Electric Oven and check for the following items:

- Zilan Electric Oven (Model ZLN0973)
- 1 x Baking Tray
- 1 x Wire Rack
- 1 x Baking Tray Handle
- 1 x Crumb Tray
- User Manual

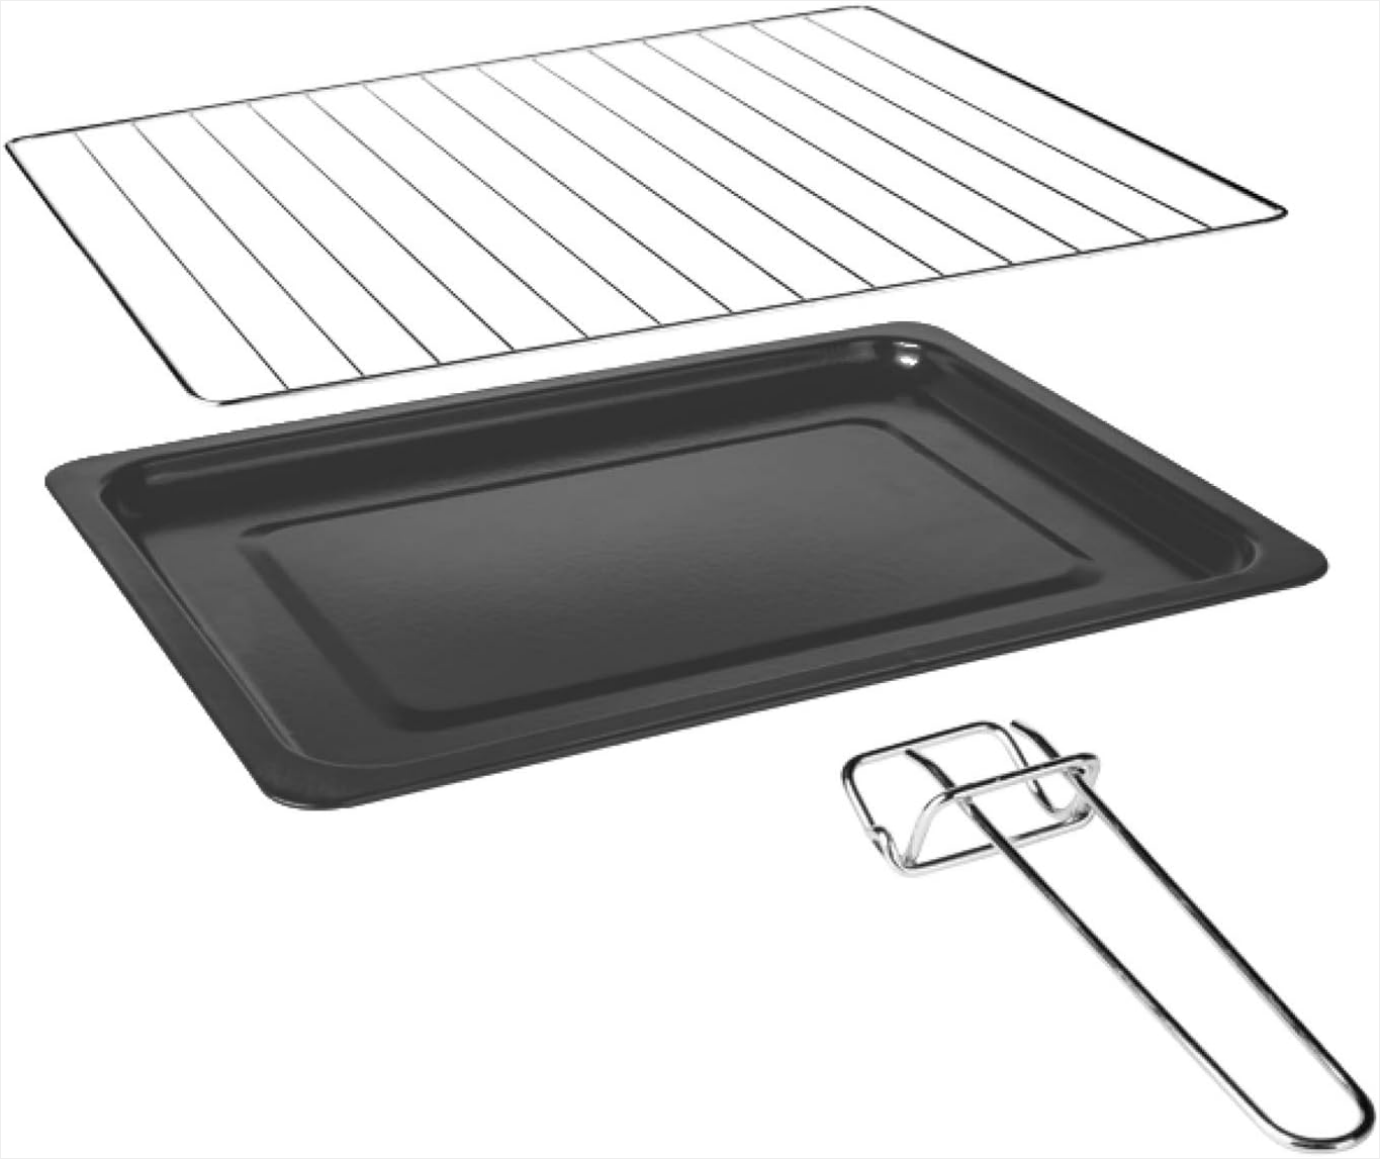


Figure 2: Included Accessories

4. Product Features

The Zilan Electric Oven ZLN0973 is equipped with features designed for convenience and efficient cooking:

- **15 Liter Capacity:** Ideal for small meals, snacks, or reheating.
- **Adjustable Temperature Control:** Set temperatures from 100°C to 230°C for various cooking needs.
- **60-Minute Timer:** Features an audible signal and automatic shut-off for precise cooking.
- **4-Level Function Selector:** Choose between upper heating, lower heating, both upper and lower heating, or off.
- **Double Glass Protection:** Enhances insulation, keeps the exterior cooler, and improves energy efficiency.
- **Crumb Tray:** Removable for easy cleaning and maintenance.



Figure 3: Control Panel Overview

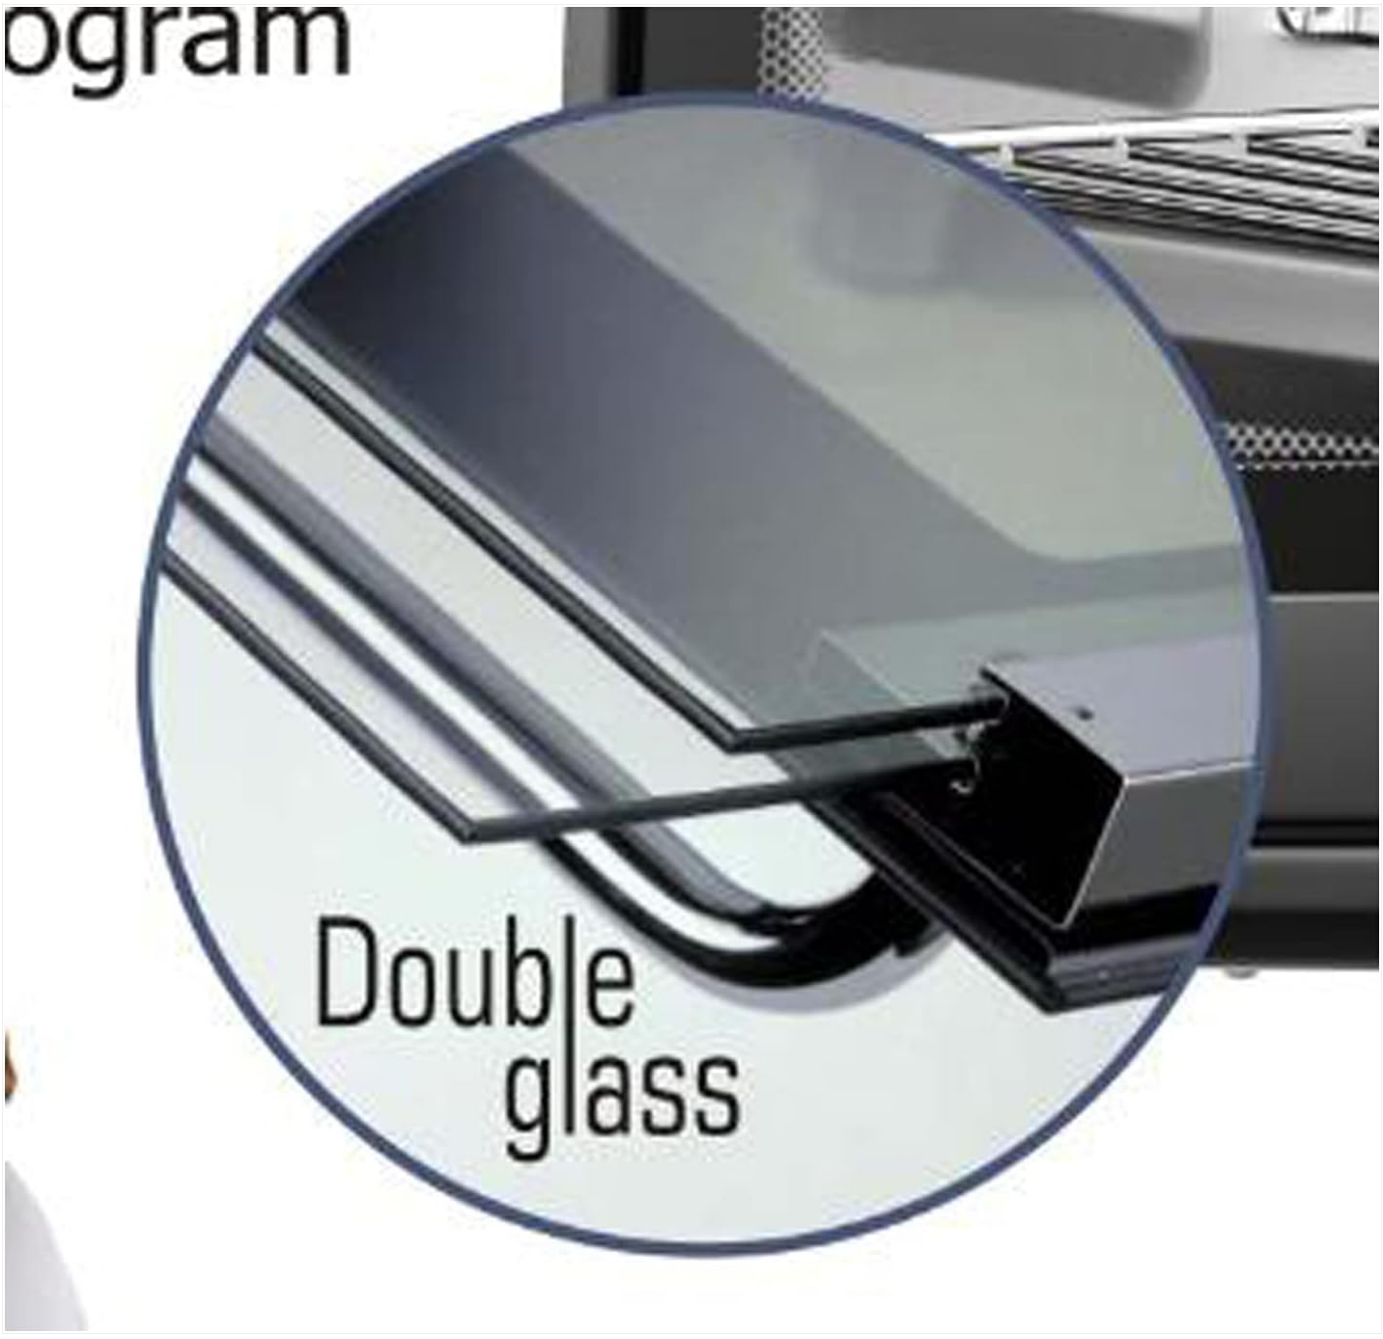


Figure 4: Double Glass Door Detail

5. Setup

5.1 Unpacking and Placement

1. Remove all packaging materials and accessories from the oven.
2. Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the oven (at least 10 cm clearance on all sides).
3. Do not place the oven near flammable materials such as curtains or tablecloths.
4. Ensure the power cord is not pinched or touching hot surfaces.

5.2 Before First Use

1. Wipe the interior of the oven, baking tray, wire rack, and crumb tray with a damp cloth and mild detergent. Dry thoroughly.
2. Insert the crumb tray at the bottom of the oven. Place the wire rack and baking tray as desired.
3. Plug the oven into a grounded electrical outlet.
4. To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at 230°C using the 'both upper and lower heating' function. A small amount of smoke or odor is normal during this initial use. Ensure the room is well-ventilated.



Figure 5: Oven Dimensions

6. Operating Instructions

6.1 Control Knobs

- **Temperature Knob (Top):** Adjusts the cooking temperature from 100°C to 230°C.
- **Function Selector Knob (Middle):** Selects the heating mode:
  - Off
  - Upper Heating Element
  - Lower Heating Element
  - Both Upper and Lower Heating Elements

- **Timer Knob (Bottom):** Sets the cooking time up to 60 minutes. The oven will automatically turn off when the timer reaches zero.

6.2 General Operation

1. Place food on the baking tray or wire rack. Use the baking tray handle to safely insert and remove hot trays.
2. Close the oven door securely.
3. Turn the **Temperature Knob** to your desired cooking temperature.
4. Turn the **Function Selector Knob** to the desired heating mode (e.g., both upper and lower heating for most baking).
5. Turn the **Timer Knob** to the desired cooking time. The oven will begin heating immediately. The indicator light will illuminate.
6. When the set time has elapsed, the timer will ring, and the oven will automatically turn off. The indicator light will extinguish.
7. Carefully remove the cooked food using oven mitts and the baking tray handle.
8. If cooking for less than 5 minutes, turn the timer past 5 minutes and then back to the desired time.

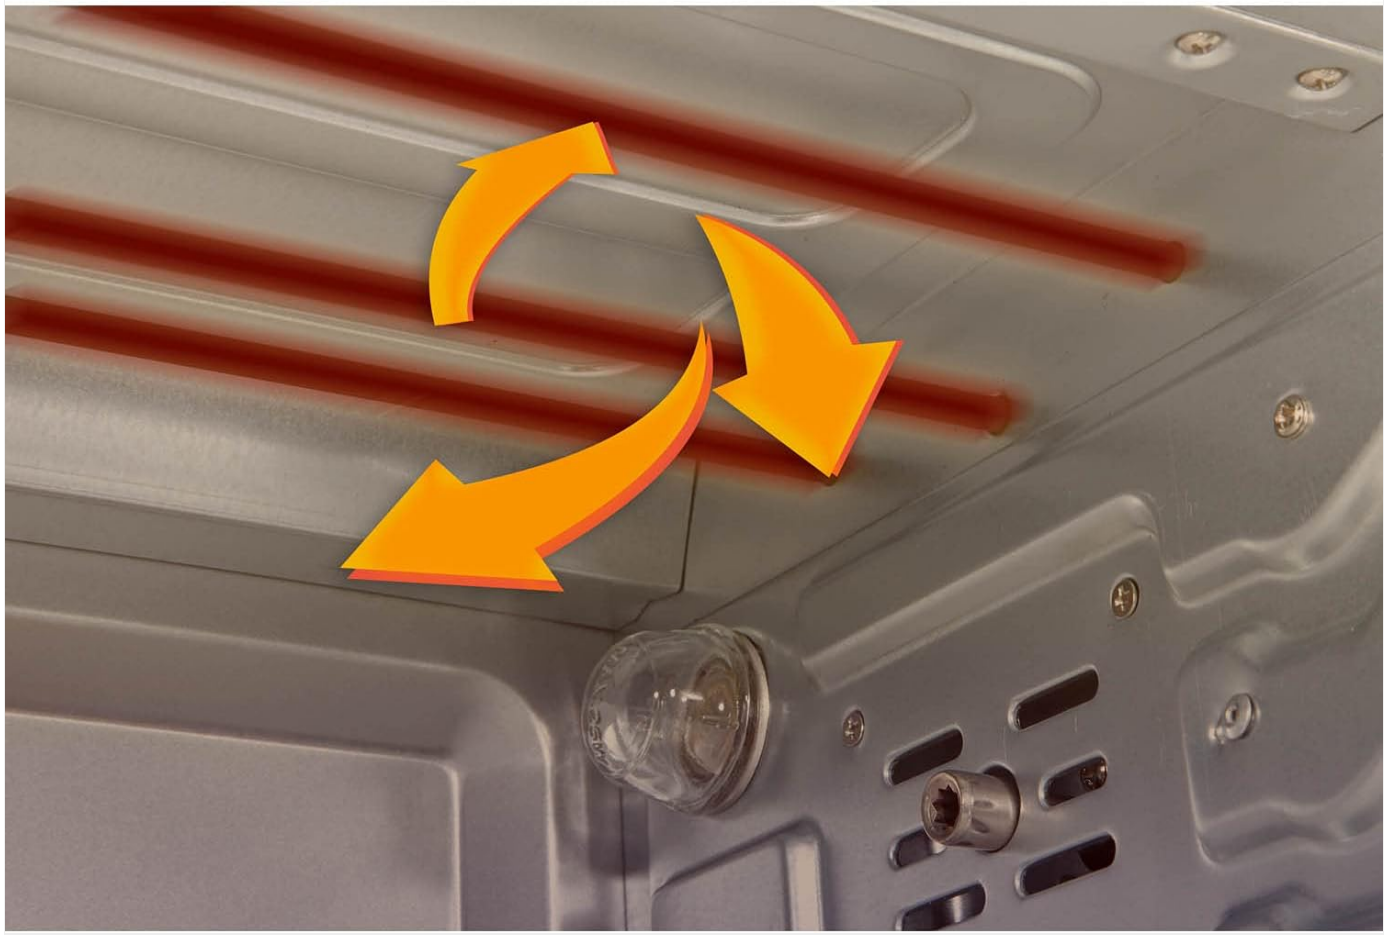


Figure 6: Internal Heating Elements and Airflow

7. Cleaning and Maintenance

Regular cleaning and maintenance will prolong the life of your Zilan Electric Oven.

1. Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens can be used, following the product instructions carefully. Ensure all cleaner residue is

removed.

4. **Crumb Tray:** The crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards. Slide out the crumb tray, discard crumbs, and wash with warm, soapy water. Rinse and dry thoroughly before reinserting.
5. **Baking Tray and Wire Rack:** Wash these accessories in warm, soapy water. Rinse and dry thoroughly.
6. Do not immerse the oven body, cord, or plug in water or any other liquid.



Figure 7: Removable Crumb Tray

8. Troubleshooting

If you encounter any issues with your Zilan Electric Oven, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check household circuit breaker. Set the timer knob to a desired cooking time.
Food is not cooking evenly or burning.	Incorrect temperature or function setting; food placed too close to heating elements; oven preheating insufficient.	Verify temperature and function settings. Adjust food placement on the rack. Allow the oven to preheat for 5-10 minutes before placing food inside. Monitor cooking closely and adjust as needed.

Problem	Possible Cause	Solution
Smoke or odor during first use.	Residual manufacturing oils.	This is normal. Ensure good ventilation. The odor will dissipate after initial use.
Timer does not work.	Timer knob not turned past 5 minutes initially.	For short cooking times, turn the timer past 5 minutes, then back to the desired time.

If the problem persists after trying these solutions, please contact customer support.

9. Specifications

Feature	Specification
Model Number	ZLN0973
Brand	Zilan
Capacity	15 Liters
Power	1200 Watts
Temperature Range	100 - 230°C
Timer	Up to 60 minutes
Control Type	Knob Control
Special Features	Adjustable Thermostat, Double Glass Protection
Material	Metal
Color	Black
Dimensions (D x W x H)	33.5 cm x 41 cm x 25.3 cm
Weight	4.7 Kilograms
Included Accessories	Baking Tray, Wire Rack, Baking Tray Handle, Crumb Tray

10. Warranty and Support

Zilan products are manufactured with high-quality materials and undergo strict quality control. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or contact your local retailer. For technical support or service inquiries, please reach out to the Zilan customer service department through the contact information provided on the product packaging or the official Zilan website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B092M96JLN

More documents and user manuals: **https://manuals.plus/**