GYMAX B092R9FLK8

GYMAX Electric Standing Desk Instruction Manual

Brand: GYMAX

Model: B092R9FLK8

Product Overview

The GYMAX Electric Standing Desk is designed to provide a versatile and comfortable workstation, allowing users to easily switch between sitting and standing positions. Featuring a quiet electric motor and a memory controller, this desk offers adjustable height settings for optimal ergonomic comfort. Its spacious carbon fiber tabletop accommodates various equipment, making it suitable for gaming, office work, or writing.



Figure 1: GYMAX Electric Standing Desk in a typical setup.

Setup and Assembly

This section provides detailed instructions for assembling your GYMAX Electric Standing Desk. Please ensure all parts are present before beginning assembly. For a visual guide, refer to the assembly video below.

Assembly Steps

1. **Prepare the Tabletop:** Join the two halves of the tabletop (G) using the wooden dowels (G*4) and metal plates (H*2). Secure the metal plates with screws (J).
2. **Assemble the Crossbar:** Connect the three sections of the crossbar (D1, D2, D3) as shown in the assembly video.
3. **Attach Legs to Feet:** Secure the desk legs (A, B) to the foot bases (C) using the provided screws (M*8).
4. **Attach Crossbar to Legs:** Connect the assembled crossbar to the desk legs using screws (J*4).
5. **Install Support Brackets:** Attach the support brackets (E) to the desk frame using screws (J*8).

6. **Mount Frame to Tabletop:** Carefully place the assembled frame onto the underside of the tabletop. Align the screw holes and secure the frame to the tabletop using screws (J*6).
7. **Connect Control Box and Power:** Mount the control box (I) and power adapter to the underside of the desk using screws (L*4). Connect the motor and control panel cables to the control box, and then connect the power adapter.
8. **Insert Drive Rod:** Insert the drive rod (F) into the designated slot, connecting the two leg mechanisms. Secure it with the provided fasteners (K*1).

Assembly Video Guide

For a visual guide on the assembly process, please refer to the official product video below.

Your browser does not support the video tag.

Video 1: Step-by-step assembly guide for the GYMAX Electric Standing Desk.

Operating Instructions

The GYMAX Electric Standing Desk features an intuitive control panel for easy height adjustment and memory presets.

Control Panel Functions



Figure 2: Smart Control Panel for height adjustment.

- **Clear Display:** Shows the current desk height.
- **Up/Down Buttons:** Use the up (▲) and down (▼) arrows to adjust the desk height smoothly. The desk adjusts at a speed of 0.8 inches per second with low noise (under 50 dB).
- **Memory Presets (1, 2, 3, 4):** Press a numbered button to move the desk to a pre-saved height. To save a height, adjust the desk to your desired position, then press and hold one of the numbered memory buttons until the display flashes or beeps, indicating the height is saved.

Adjusting Height

The desk's height can be adjusted from a minimum of 28.5 inches to a maximum of 45.5 inches, allowing for comfortable sitting or standing positions.



Figure 3: Illustrating the adjustable height feature for sitting and standing.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your GYMAX Electric Standing Desk.

Cleaning the Surface

The carbon fiber surface of the desk is designed for easy maintenance. To clean, simply wipe with a damp cloth. Avoid using harsh chemicals or abrasive cleaners that could damage the finish.

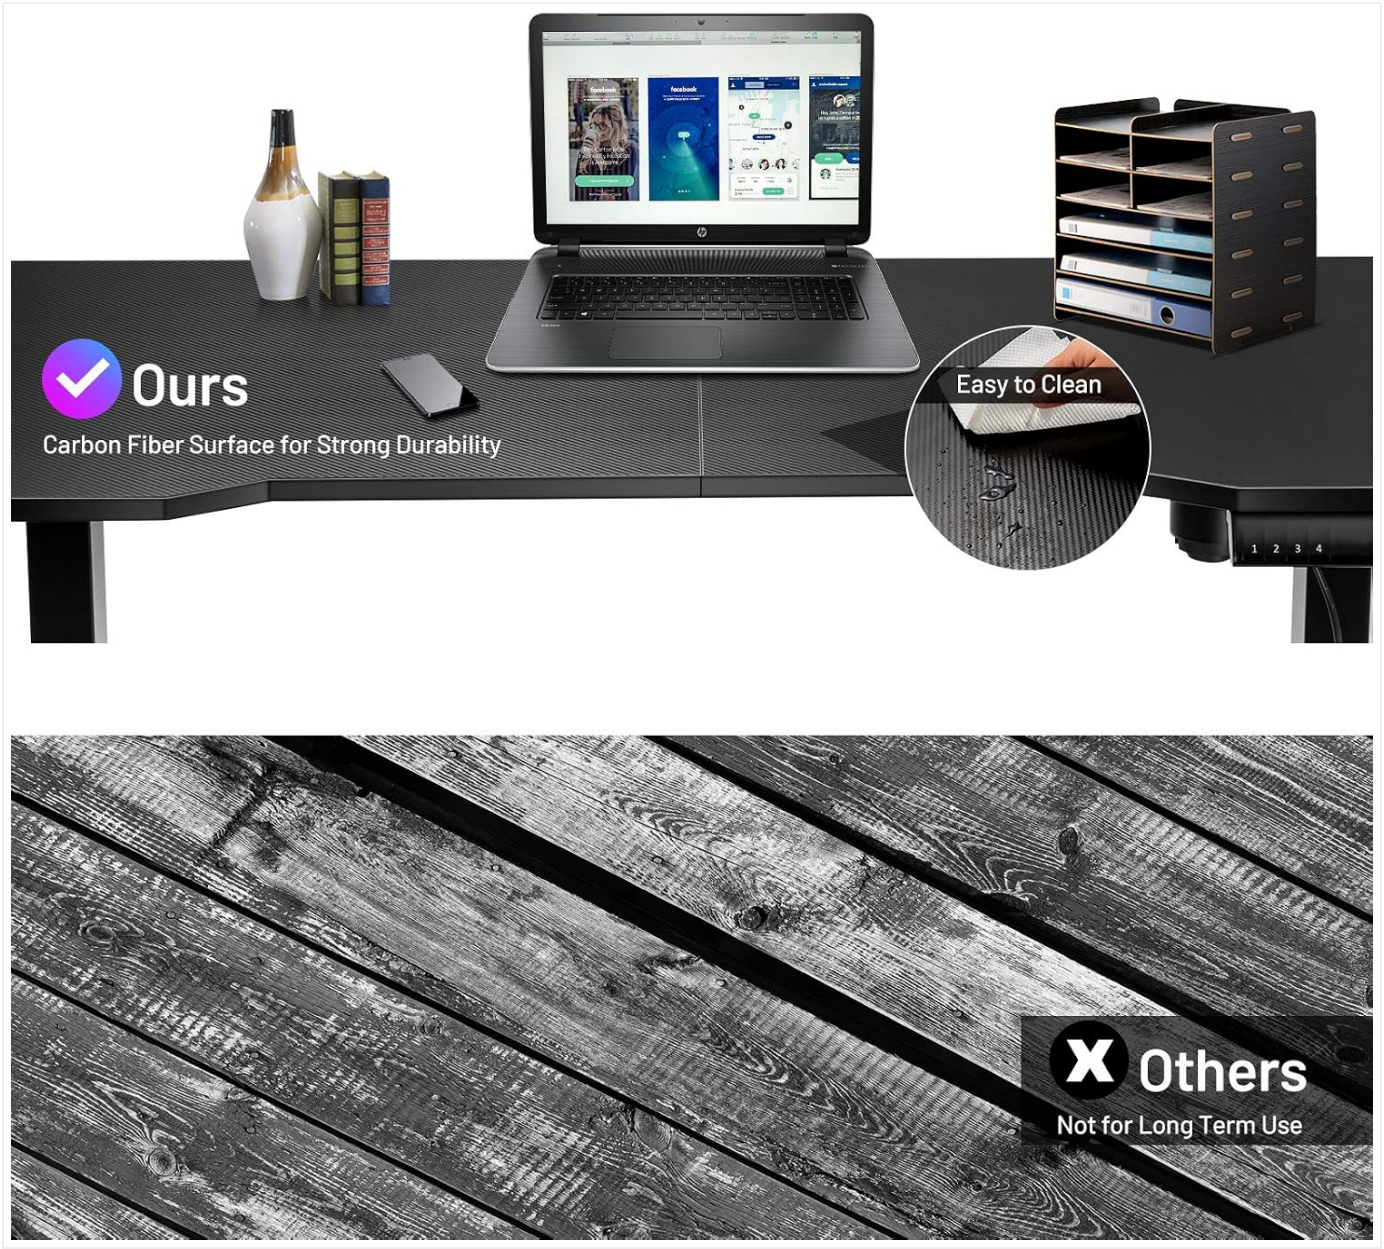


Figure 4: The carbon fiber surface is easy to clean with a damp cloth.

General Care

- Regularly check all screws and fasteners to ensure they are tight.
- Keep the motor and electrical components free from dust and moisture.
- Do not place excessively heavy items on the desk, exceeding the maximum weight capacity.

TROUBLESHOOTING

If you encounter any issues with your GYMAX Electric Standing Desk, please refer to the following general advice. For persistent problems, contact customer support.

- **Desk not moving:** Ensure all power cables are securely connected and the power outlet is functioning.
- **Unusual noises during operation:** Check for any obstructions under the desk or around the legs. Ensure the desk is on a level surface.
- **Height adjustment issues:** Try resetting the desk by unplugging it for 30 seconds and then plugging it back in.

Important Safety Information:

- Always follow the instructions provided with the desk.

- Be cautious when adjusting the height of the desk to prevent injury.
- Do not exceed the weight limit of 176 lbs to ensure stability and safety.

Specifications

Detailed specifications for the GYMAX Electric Standing Desk:

Feature	Detail
Brand	GYMAX
Product Dimensions	24"D x 48"W x 28.5"H
Color	Black
Style	gaming
Base Material	Iron
Finish Type	Carbon Fiber
Special Feature	Electric
Room Type	Office
Recommended Uses	Office, Working, Writing, Gaming
Mounting Type	Floor Mount, Tabletop
Age Range Description	Adult
Included Components	Full-covered Mouse Pad
Maximum Weight Recommendation	176 Pounds
Recommended People for Assembly	1
Tools Recommended For Assembly	Screw Driver
Shape	Rectangular
Desk Design	Standing Desk
Maximum Height	45.5 Inches
Minimum Height	28.5 Inches
Lifting Mechanism	Electric
Speed	0.8"/s
Noise	<50 db

Warranty and Support

Your GYMAX Electric Standing Desk comes with a limited warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included in your product packaging or contact GYMAX customer support.

Customer Support

For any questions, technical assistance, or warranty claims, please contact GYMAX customer support. You can find contact information on the official GYMAX website or through your purchase platform.

Returns Policy

This product is eligible for 30-day easy returns. Please refer to the retailer's return policy for detailed instructions and conditions.

Protection Plans

Additional protection plans may be available for purchase to extend coverage beyond the standard warranty:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan covering eligible past and future purchases)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question