Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Garmin 010-02505-05

Garmin Dash Cam 67W User Manual

Model: 010-02505-05
Brand: Garmin

Introduction

The Garmin Dash Cam 67W is a compact, high-definition dash camera designed to record incidents and enhance driver awareness. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.
The device features a 1440p resolution with an extra-wide 180-degree field of view, voice control, and connected features for monitoring your vehicle.



Image: Front view of the Garmin Dash Cam 67W, showcasing its compact design and lens.

What's in the Box

Verify that all the following items are included in your package:

- Garmin Dash Cam 67W
- 16GB microSD card
- Low-profile magnetic mount
- Vehicle power cables
- Dual USB power adapter
- Documentation (this manual)

Setup

1. Installing the MicroSD Card

The device requires a microSD card to record video. A 16GB microSD card is included. Ensure the card is inserted correctly before use.

1. Locate the microSD card slot on the side of the dash cam.
2. Insert the microSD card with the gold contacts facing the front of the camera until it clicks into place.

2. Mounting the Dash Cam

The Garmin Dash Cam 67W uses a low-profile magnetic mount for secure attachment to your vehicle's windshield.

1. Clean the windshield thoroughly where you intend to mount the dash cam.
2. Attach the magnetic mount to the windshield, ensuring a clear view of the road.
3. Align the dash cam with the magnetic mount until it snaps securely into place.



Image: Side view of the Garmin Dash Cam 67W attached to its magnetic mount, showing the power cable connection.

3. Connecting to Power

The dash cam operates by connecting to your vehicle's power source using the included cables and dual USB power adapter.

1. Plug one end of the vehicle power cable into the USB port on the dash cam.
2. Plug the other end into the dual USB power adapter.
3. Insert the dual USB power adapter into your vehicle's 12V power outlet.

The camera will automatically power on and begin recording when your vehicle starts.

Image: A dual USB power adapter plugged into a vehicle's 12V power outlet, illustrating the power connection for the dash cam.

Operating the Dash Cam

Automatic Recording

Once powered on, the Garmin Dash Cam 67W automatically begins continuous recording. Videos are saved in segments to the microSD card. In the event of an incident, the camera automatically saves the footage.



Image: The screen of the Garmin Dash Cam 67W displaying a live view of the road ahead, with recording indicators.

Voice Control

The dash cam supports voice commands for hands-free operation. This feature is available in English, German, French, Spanish, Italian, and Swedish.

- To save a video, say: "OK Garmin, save video."
- To start/stop audio recording, say: "OK Garmin, start audio recording" or "OK Garmin, stop audio recording."

- To take a still picture, say: "OK Garmin, take a picture."

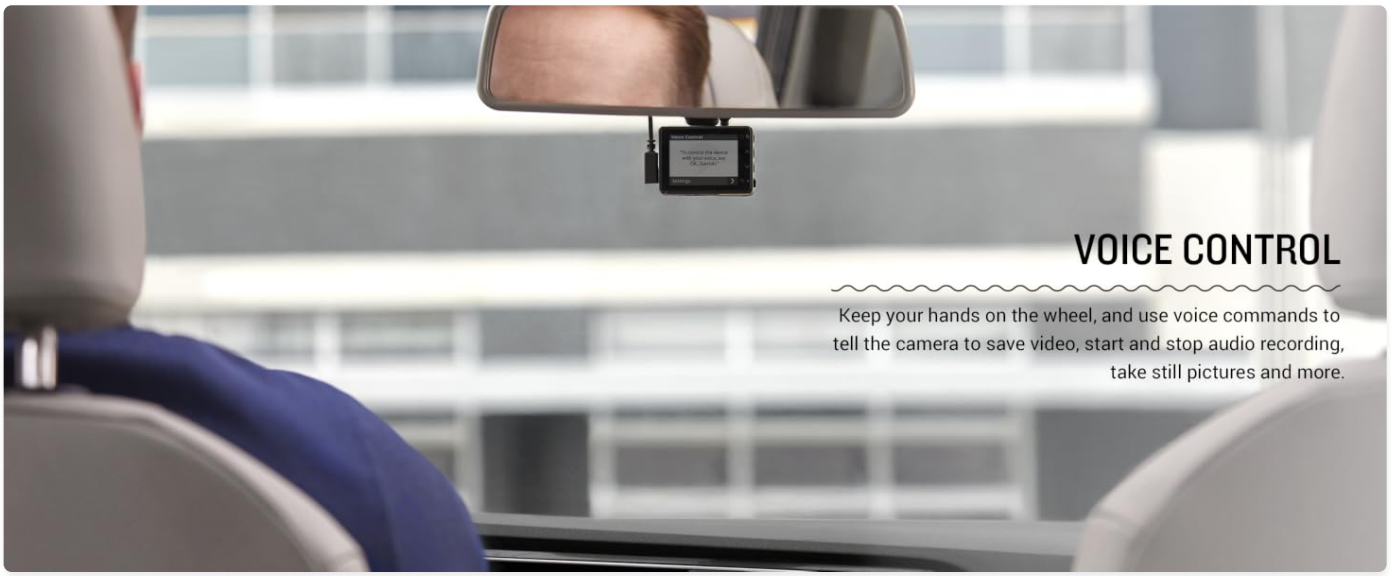


Image: A driver operating the Garmin Dash Cam using voice commands, keeping hands on the steering wheel.

Incident Detection with GPS

The camera automatically detects incidents and saves the corresponding video footage. Built-in GPS stamps recorded videos with location, date, and time details.

Parking Guard

The Parking Guard feature monitors activity around your parked vehicle. If an incident is detected, it alerts you via video clip notifications through the Garmin Drive app on your compatible smartphone. This feature requires an active Wi-Fi connection.



Image: The Garmin Dash Cam mounted on a car's windshield, demonstrating its discreet placement for parking surveillance.

Live View Monitoring

Access the camera remotely for Live View monitoring from anywhere when you are away from your parked car. This requires a constant power supply and an active Wi-Fi connection. Some vehicles may require a separate constant power cable (sold separately).

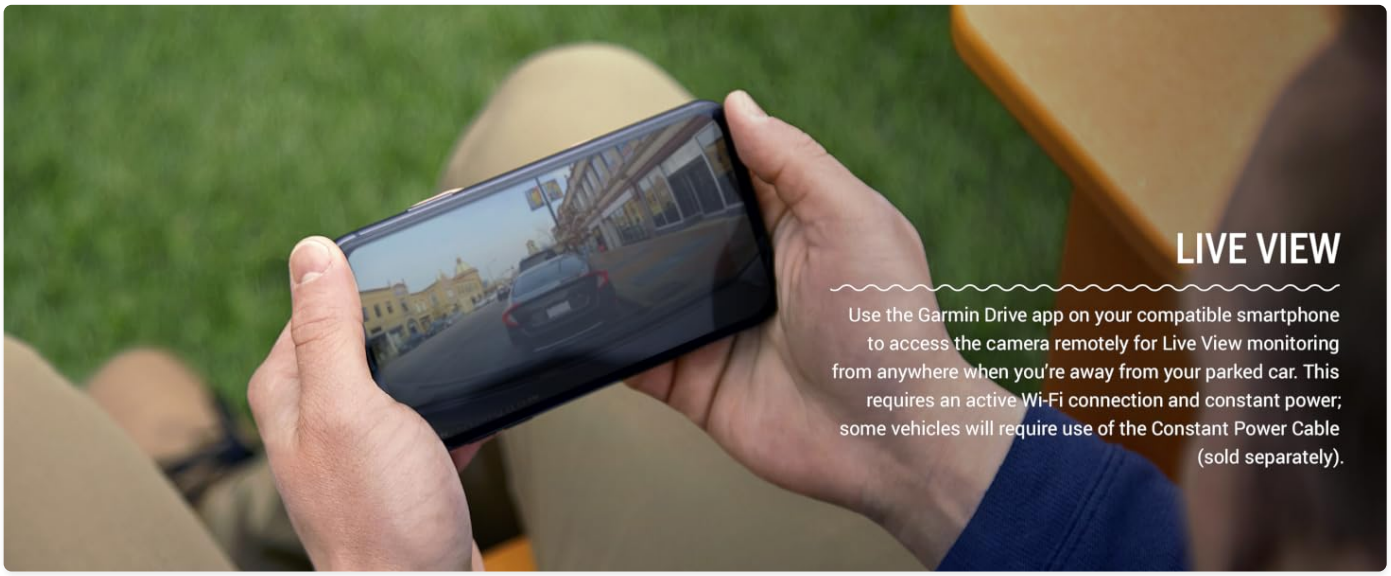


Image: A person viewing live footage from the dash cam on a smartphone, demonstrating the Live View feature.

Driver Alerts

The dash cam provides various driver alerts to promote safer driving and increase situational awareness. Certain conditions may impair the warning function.

- **Forward Collision Warnings:** Alerts you if you are driving too closely to the vehicle ahead.
- **Lane Departure Warnings:** Notifies you if you drift off the road or across the center line.
- **"Go" Alerts:** Notifies you when stopped traffic in front of you has started to move.

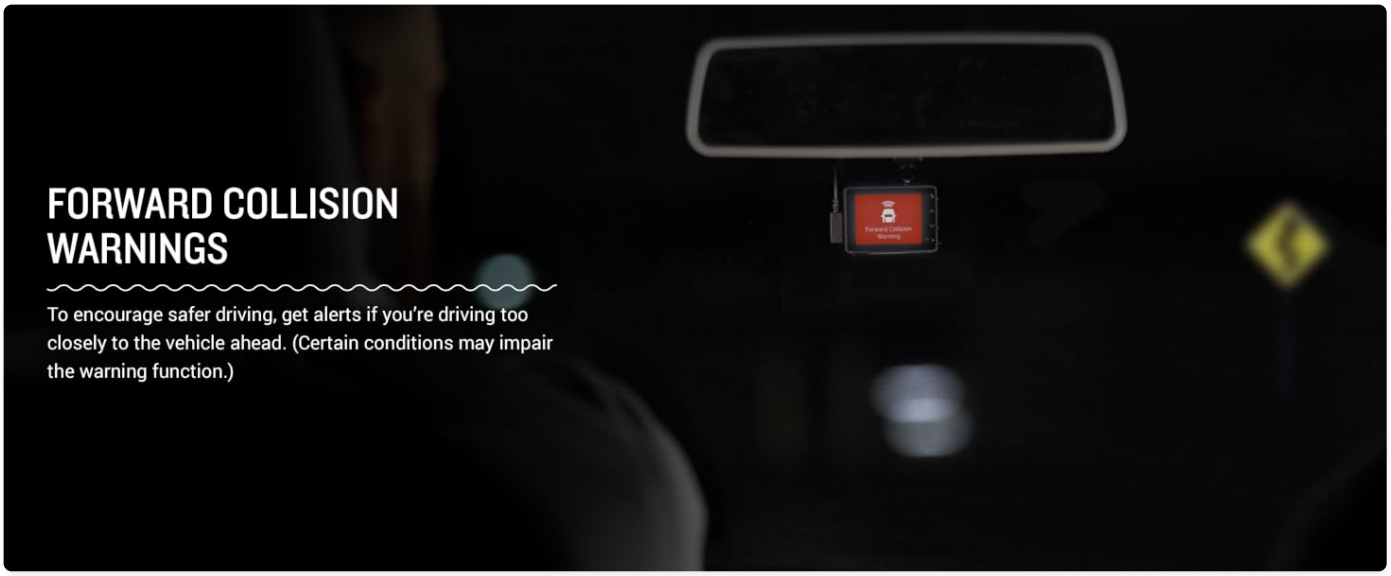


Image: The dash cam screen displaying a forward collision warning, indicating proximity to the vehicle ahead.

Red Light and Speed Camera Alerts

The camera provides alerts for nearby red light and speed cameras. This feature is not available in all regions. A subscription may be required for updates.

Vault Storage and Sharing

Saved videos automatically upload via Wi-Fi connection to the secure online Vault. Videos are stored for 24 hours from the time of upload with the free service. Garmin offers extended storage plans via paid subscriptions.
You can view and share video clips with others by sending a link and passcode using the Garmin Drive app on your compatible smartphone.

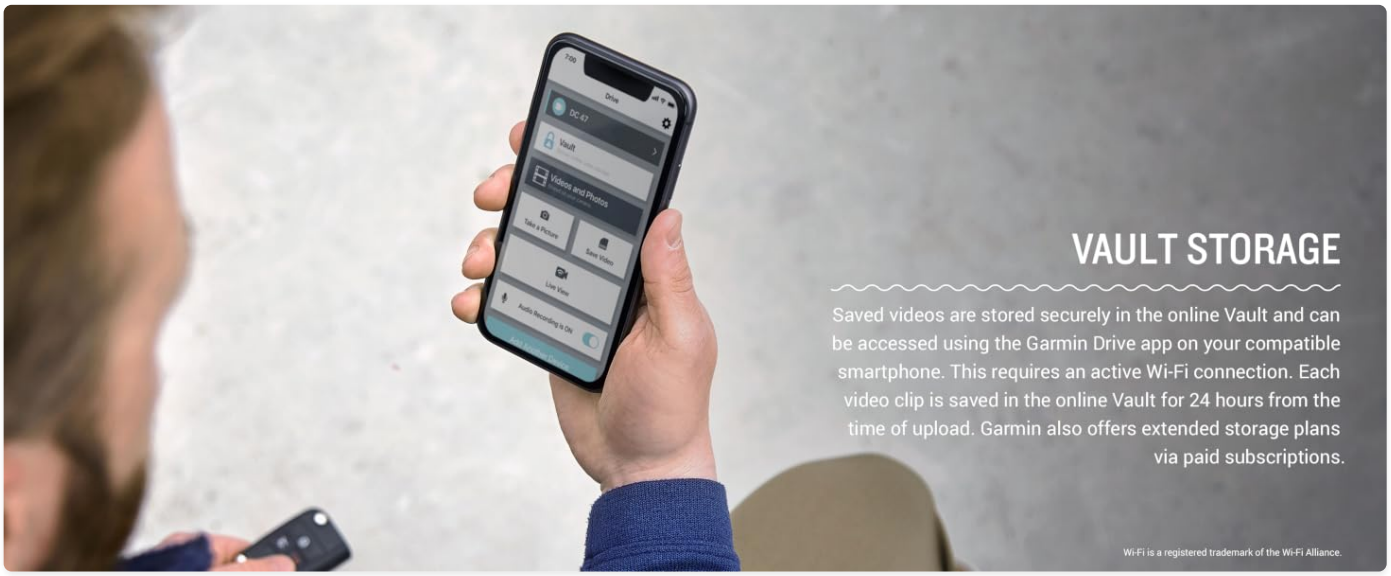


Image: A person interacting with the Garmin Drive app on a smartphone, demonstrating access to the online Vault for video storage.

Travelapse Feature

The Travelapse feature condenses hours of driving into minutes of highlights, creating a video that can be easily shared.

Maintenance

MicroSD Card Formatting

Regularly formatting the microSD card is recommended to ensure optimal performance and prevent data corruption. The dash cam may prompt you to format the card periodically.

1. Access the settings menu on your dash cam.
2. Navigate to the 'Format Card' or 'Storage' option.
3. Confirm the formatting process. This will erase all data on the card.

If formatting on a computer, ensure the card is formatted to FAT32 for compatibility.

Cleaning the Device

To maintain clear video quality, keep the camera lens clean. Use a soft, lint-free cloth to gently wipe the lens. Avoid abrasive cleaners or solvents.

Software Updates

Garmin periodically releases software updates to improve performance and add features. Connect your dash cam to a computer and use the Garmin Express application to check for and install updates.

Troubleshooting

Device Not Powering On

- Ensure the power cable is securely connected to both the dash cam and the vehicle's 12V power outlet.
- Verify that the vehicle's 12V power outlet is functioning. Test with another device if possible.
- Check for any damage to the power cable or adapter.

Recording Issues (e.g., no recording, corrupted files)

- Ensure a compatible microSD card is properly inserted.
- Format the microSD card using the dash cam's settings menu.
- If issues persist, try a different, high-quality microSD card (up to 512GB, formatted to FAT32).
- Check for and install any available software updates for the dash cam.

Voice Control Not Responding

- Ensure the voice control feature is enabled in the device settings.
- Speak clearly and directly towards the dash cam.
- Reduce background noise in the vehicle.

Garmin Drive App Connectivity Issues

- Ensure Bluetooth and Wi-Fi are enabled on your smartphone.
- Make sure the dash cam is powered on and within range of your smartphone.
- Restart both the dash cam and your smartphone.
- Update the Garmin Drive app to the latest version.

Specifications

Feature	Specification
Product Dimensions	2.21 x 0.86 x 1.59 inches
Item Weight	2.01 ounces
Item Model Number	010-02505-05
Video Capture Resolution	1440p
Field Of View	180 Degrees
Connectivity Technology	Bluetooth, Wi-Fi
Control Method	Voice
Special Feature	Compact Design, Incident Detection, Parking Guard, Live View
Included Components	Garmin Dash Cam 67W, 16GB microSD card, low-profile magnetic mount, vehicle power cables, dual USB power adapter, documentation

Important Notices

Some jurisdictions regulate or prohibit the use of this device. It is your responsibility to know and comply with applicable laws and rights to privacy in jurisdictions where you plan to use this device.
Certain conditions may impair the warning functions (e.g., forward collision, lane departure, "Go" alerts). Red light and speed camera warnings are not available in all regions.

Support

For additional assistance, detailed information, or to download the official PDF user manual, please visit the Garmin support website or refer to the provided link:

- Official User Manual (PDF): Download PDF
- Garmin Support Website: www.garmin.com/support

Warranty Information

Information regarding the product warranty is typically included in the documentation provided with your device or can be found on the official Garmin website. Please refer to these resources for details on warranty coverage and terms.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B093244D1J

More documents and user manuals: **https://manuals.plus/**