K&F Concept 34.029

K&F Concept 43.3-inch Bluetooth Selfie Stick Tripod User Manual

Model: 34.029 | Brand: K&F Concept

1. Introduction

Thank you for choosing the K&F Concept 43.3-inch Bluetooth Selfie Stick Tripod. This versatile 3-in-1 device functions as an extendable selfie stick, a stable tripod, and includes a wireless Bluetooth remote control. Designed for ease of use and portability, it is ideal for capturing photos and videos with your smartphone or tablet in various scenarios, from family gatherings to outdoor adventures.

This manual provides detailed instructions on how to set up, operate, and maintain your selfie stick tripod to ensure optimal performance and longevity.

2. What's Included

Please verify that all items are present in your package:

- 1 x K&F Concept Selfie Stick Tripod
- 1 x Detachable Bluetooth Remote Control
- 1 x User Manual (this document)

3. Setup Guide

3.1 Unfolding the Tripod and Extending the Stick

1. **Unfold the Legs:** Gently pull the three legs at the base of the handle outwards until they lock into place, forming a stable tripod stand.

2. **Extend the Stick:** Pull the top section of the selfie stick upwards to extend the aluminum alloy pole to your desired length. The stick can extend up to 43.3 inches (110 cm).

3.2 Attaching Your Device

The selfie stick tripod features a rotatable phone holder and a 1/4-inch screw mount for various devices.

- **For Smartphones/Tablets:**





Image: The phone holder supports single phones, dual phones, and tablets (4.7-15.6 inches).

   a. Open the phone clip by pulling the top jaw upwards.
   b. Carefully insert your smartphone or tablet (compatible with 4.7-15.6 inch devices) into the clip, ensuring it is securely held.
   c. The phone holder can rotate 360 degrees, allowing for horizontal or vertical orientation.

- **For Cameras/Accessories (1/4-inch Thread):**



Image: The 1/4-inch screw allows connection of various accessories like ring lights, microphones, or action cameras.

The top of the phone holder features a standard 1/4-inch screw. This allows you to mount small cameras, LED video lights, ring lights, or microphones directly onto the tripod.

3.3 Bluetooth Remote Pairing

The detachable Bluetooth remote control allows you to capture photos and videos wirelessly.



Image: Detailed steps for Bluetooth pairing, showing the remote and phone's Bluetooth settings.

1. **Remove Remote:** Gently slide the Bluetooth remote control out from its slot on the selfie stick handle.
2. **Power On:** Press and hold the power button on the remote for 2-3 seconds until the blue indicator light starts blinking, indicating it's in pairing mode.
3. **Enable Bluetooth:** On your smartphone or tablet, go to Settings > Bluetooth and turn Bluetooth ON.
4. **Pair Device:** In the list of available devices, look for "AB Shutter3" or a similar name (e.g., "ADYSS"). Tap on it to connect.
5. **Confirmation:** The blue light on the remote will stop blinking and remain solid, and your phone will show "Connected" once pairing is successful.

The remote has a wireless range of up to 30 feet (10 meters) and is compatible with most iOS and Android devices. No app download is necessary.

4. Operating Instructions

4.1 Using as a Selfie Stick

Hold the handle firmly and extend the stick to your desired length. Use the Bluetooth remote to capture photos or start/stop video recording. The 360-degree rotatable phone holder allows you to adjust your phone's angle for the perfect shot.



Image: The selfie stick in handheld mode, ready for capturing photos.

4.2 Using as a Tripod

Extend the tripod legs fully and place the tripod on a flat, stable surface. Adjust the height of the stick and the angle of your device as needed. This mode is ideal for group photos, stable video recording, live streaming, or hands-free viewing.



Image: Examples of usage including live broadcasting, hands-free viewing, and traditional selfie stick use.

4.3 Adjustable Angle and Rotation

The selfie stick tripod features a 360-degree rotating rocker arm and adjustable angle mechanisms. Loosen the adjustment knob to freely rotate your device or tilt it to achieve the desired shooting angle. Tighten the knob to secure the position.

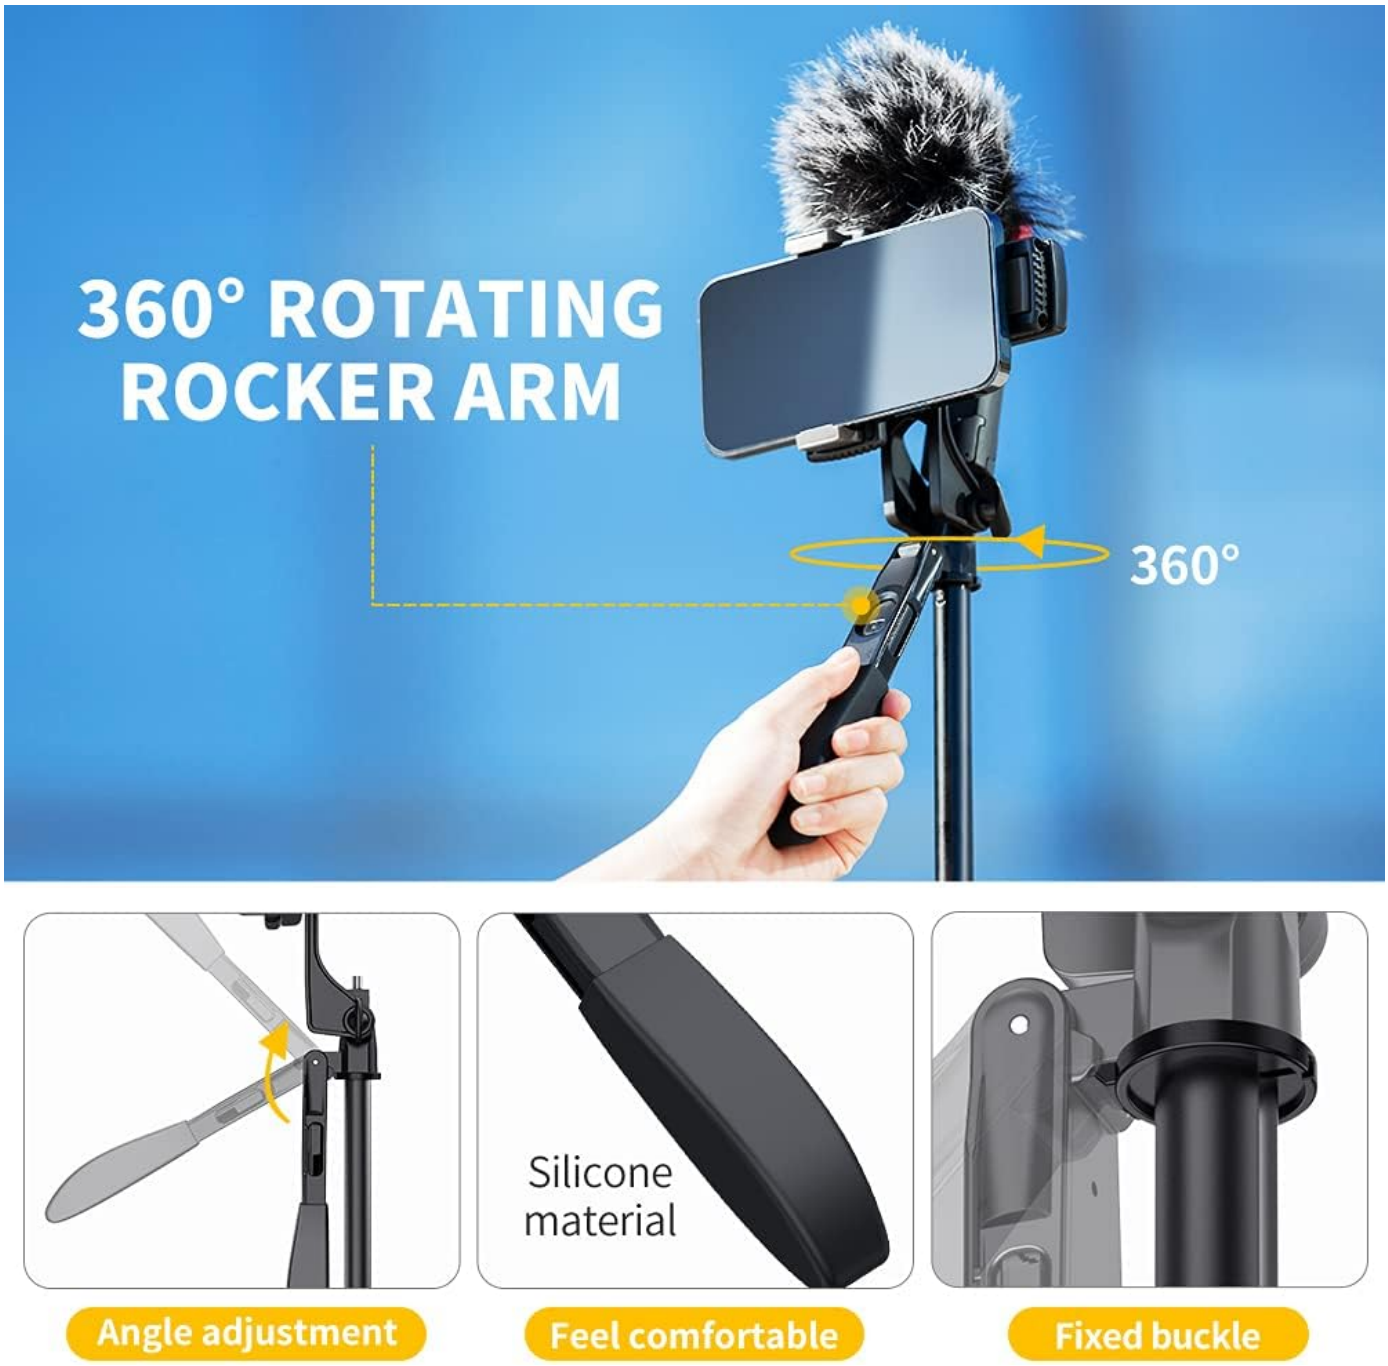


Image: Illustration of the 360-degree rotation and comfortable silicone grip.

4.4 Video Demonstration

For a visual guide on setup and operation, please watch the official product video:

Video: A demonstration of the K&F Concept 3-in-1 Multifunctional Aluminum Selfie Stick Tripod, showcasing its features, setup, and various uses including dual phone mounting and portability.

5. Maintenance

To ensure the longevity and proper functioning of your selfie stick tripod, follow these maintenance guidelines:

- **Cleaning:** Wipe the product with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, fold the selfie stick tripod to its compact size and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Avoid Water:** While durable, the product is not waterproof. Avoid exposing it to rain or submerging it in water.
- **Handle with Care:** Avoid dropping the product or subjecting it to strong impacts, which could damage internal components or the aluminum pole.
- **Remote Battery:** The Bluetooth remote has a built-in rechargeable battery. Charge it as needed (charging time approximately 30 minutes for 50,000+ selfies).

6. Troubleshooting

Problem	Possible Cause	Solution
Bluetooth remote won't pair.	Remote battery is low; Bluetooth is off on phone; remote not in pairing mode; device already paired to another phone.	Charge the remote; ensure phone's Bluetooth is on; press and hold remote button until blue light blinks; unpair from other devices if necessary.
Selfie stick is unstable as a tripod.	Tripod legs not fully extended/locked; uneven surface; excessive weight.	Ensure legs are fully extended and locked; place on a flat, stable surface; do not overload with incompatible devices.
Phone does not fit in the holder.	Phone size exceeds compatibility range.	Verify your phone's dimensions. The holder supports devices from 4.7 to 15.6 inches.
Remote not responding.	Remote is off; battery is dead; out of range.	Turn on the remote; charge the remote; move closer to the phone (within 30ft/10m).

7. Specifications



Image: Dimensions of the selfie stick tripod in folded and extended states.

Feature	Detail
Model Number	34.029
Material	Aluminum Alloy
Folded Size	8.27 inches (21 cm)
Maximum Extended Length	43.3 inches (110 cm)
Item Weight	15 ounces (425 g)
Compatible Device Size	4.7 - 15.6 inches (Smartphones & Tablets)

Feature	Detail
Bluetooth Remote Range	Up to 30 feet (10 meters)
Special Features	3-in-1 design (Selfie Stick, Tripod, Remote), 360° Rotation, 1/4-inch Screw Mount, Detachable Bluetooth Remote, Dual Phone Holder Capability
Color	Black

8. Warranty and Support

Specific warranty details for this product are typically provided with your purchase documentation or on the manufacturer's official website. Please refer to those resources for information regarding warranty coverage, terms, and conditions.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact K&F Concept customer service through their official website or the retailer from whom you purchased the product.

K&F Concept Official Website: Visit K&F Concept Store on Amazon

© 2025 K&F Concept. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question