Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bosch BGS412234A

Bosch Bagless Canister Vacuum Cleaner BGS412234A User Manual

Model: BGS412234A | Brand: Bosch

1. Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Bosch Bagless Canister Vacuum Cleaner, model BGS412234A. Please read these instructions carefully before using the appliance and retain them for future reference.



Image 1.1: Bosch Bagless Canister Vacuum Cleaner BGS412234A, Red.

2. Safety Instructions

Always observe the following safety precautions to prevent electric shock, fire, or injury:

- Ensure the power supply voltage matches the rating label on the vacuum cleaner.
- Do not use the appliance on wet surfaces or to pick up liquids.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the vacuum cleaner from the electrical outlet before cleaning or performing maintenance.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is for indoor household use only.

3. Package Contents

Verify that all components are present in the packaging:

- Bosch Bagless Canister Vacuum Cleaner unit
- Flexible hose
- Telescopic tube
- Floor nozzle (for carpets and hard floors)
- Crevice tool (if included)
- Upholstery tool (if included)
- User Manual

4. Setup

Follow these steps to assemble your vacuum cleaner before first use:

1. **Attach the Hose:** Insert the flexible hose into the suction opening on the main unit until it clicks securely into place.
2. **Assemble the Tube and Nozzle:** Connect the telescopic tube to the handle of the flexible hose. Then, attach the desired cleaning tool (e.g., floor nozzle) to the end of the telescopic tube.
3. **Connect to Power:** Extend the power cord and plug it into a suitable electrical outlet (240 Volts).

Your browser does not support the video tag.

Video 4.1: Demonstration of vacuum cleaner assembly and initial use.

5. Operating Instructions

To begin cleaning with your Bosch Bagless Canister Vacuum Cleaner:

1. **Power On:** Press the power button (push button control) located on the main unit. The vacuum cleaner will start.
2. **Adjust Suction Power:** Use the touch control to adjust the suction power according to the surface being cleaned.
3. **Vacuuming:** Slowly move the floor nozzle over the surface to be cleaned. For carpets, ensure the brush setting on the nozzle is appropriate. For hard floors, retract the brushes.
4. **Power Off:** After use, press the power button again to turn off the appliance. Unplug the power cord from the outlet.



Image 5.1: Bosch Bagless Canister Vacuum Cleaner with hose and nozzle attached, ready for use.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Emptying the Dust Container

The Bosch BGS412234A is a bagless model with a dust container capacity of 2.4 liters. Empty the dust container when it reaches the 'MAX' fill line or after each use.

1. Ensure the vacuum cleaner is unplugged.

2. Press the release button to detach the dust container from the main unit.
3. Open the dust container and empty its contents into a waste bin.
4. Close the dust container and reattach it to the vacuum cleaner until it clicks securely.

6.2 Cleaning the Filters

Your vacuum cleaner is equipped with a HEPA filter. Regular cleaning of the filters is crucial for maintaining suction power and air quality.

1. Unplug the appliance.
2. Remove the dust container as described above.
3. Locate and remove the HEPA filter. Refer to the diagrams in the full manual for exact location.
4. Tap the filter gently over a waste bin to remove loose dust. If washable, rinse under cold running water. Allow it to air dry completely for at least 24 hours before reinserting. Do not use detergents or hot water.
5. Reinsert the dry filter and reattach the dust container.

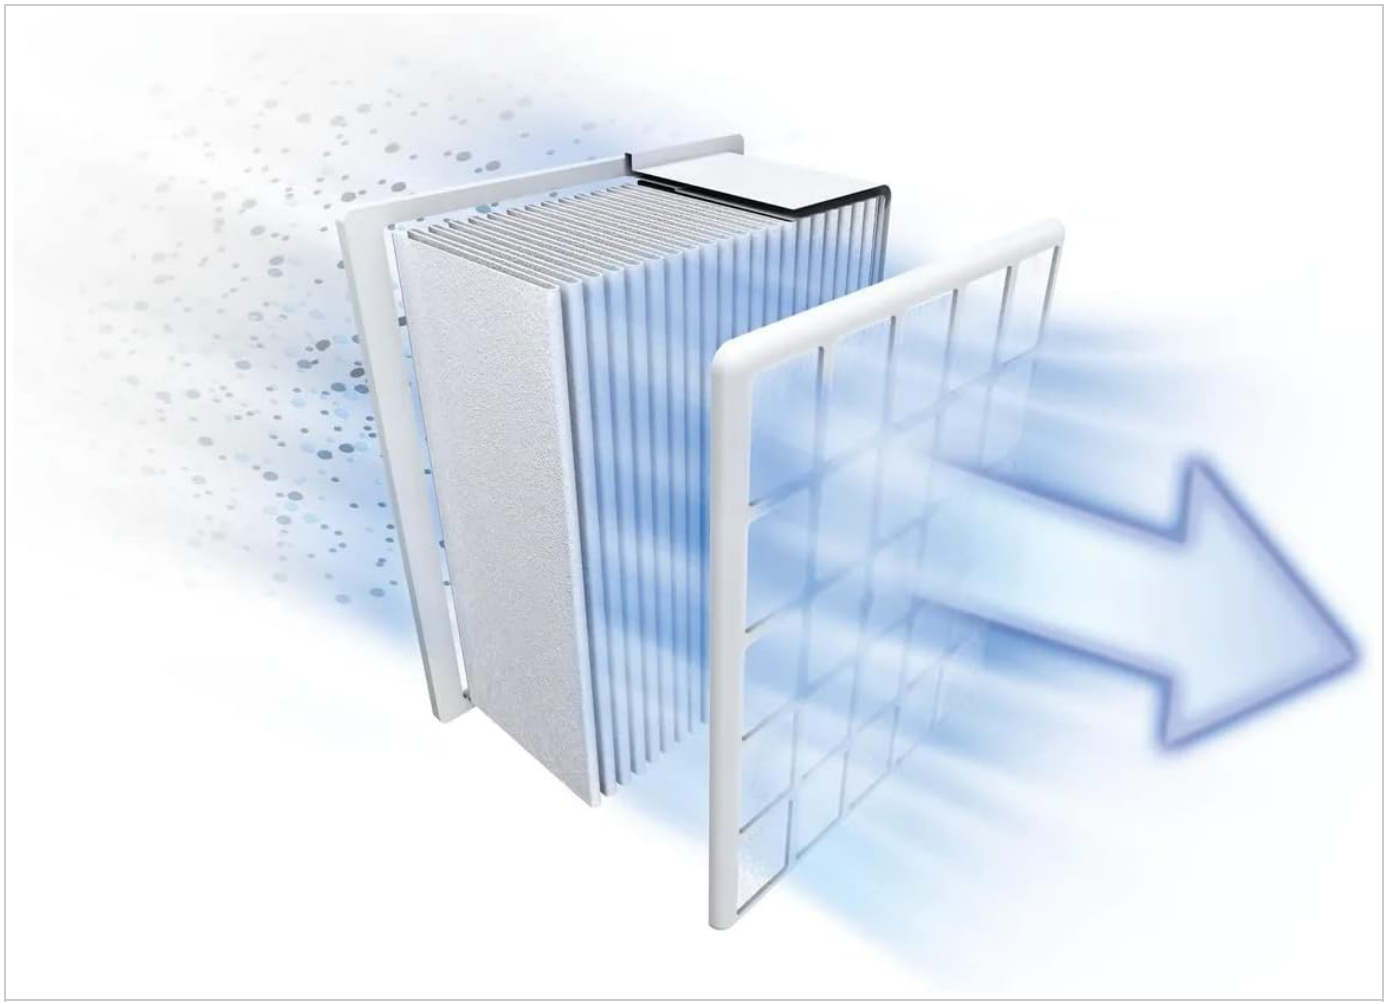


Image 6.1: Diagram illustrating the HEPA filter and airflow.

7. Troubleshooting

Before contacting customer support, try these solutions for common issues:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Reduced suction power.	Dust container full or filters clogged.	Empty the dust container. Clean or replace the filters as described in Section 6.2.
Unusual noise during operation.	Obstruction in hose or nozzle.	Turn off and unplug the vacuum. Check the hose, telescopic tube, and nozzle for blockages and remove them.
Dust escaping from the vacuum.	Dust container or filters not properly installed.	Ensure the dust container is correctly closed and sealed. Check that all filters are properly seated.

8. Specifications

- **Model:** BGS412234A
- **Brand:** Bosch
- **Type:** Canister Vacuum Cleaner
- **Style:** Bagless
- **Color:** Red
- **Power Source:** Electric
- **Voltage:** 240 Volts
- **Electric Power:** 2200 Watts
- **Motor Horsepower:** 2 HP
- **Capacity:** 2.4 Liters
- **Filter Type:** HEPA filter
- **Surface Recommendation:** All floors (Carpets, Hard Floors)
- **Noise Level:** 80 dB
- **Item Weight:** 5.6 kg
- **Product Dimensions (L x W x H):** 32.4 x 26.7 x 47.4 cm
- **Control Method:** Touch / Push Button

9. Warranty

This Bosch Bagless Canister Vacuum Cleaner BGS412234A comes with a **5-year warranty**. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal household use. It does not cover damage caused by misuse, neglect, accident, unauthorized repair, or normal wear and tear.

10. Support

For further assistance, technical support, or to inquire about spare parts, please visit the official Bosch website or contact your local Bosch service center. Contact details can typically be found on the manufacturer's website or in the warranty documentation provided with your product.
You can also refer to the Bosch brand store for more information: Bosch Automotive Store on Amazon

© 2023 Bosch. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B093814SKT

More documents and user manuals: **https://manuals.plus/**