Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Technivorm Moccamaster KBGV Select 53928

Technivorm Moccamaster KBGV Select Coffee Maker

Model: 53928

Introduction Safety Setup Operation Maintenance Troubleshooting Specifications Warranty

1. Introduction

Thank you for choosing the Technivorm Moccamaster KBGV Select Coffee Maker. This manual provides essential information for the safe and efficient use of your new coffee machine. The KBGV Select is designed to brew coffee to the 'Golden Cup Standard' by maintaining optimal water temperature and brewing time. It features a selector switch for brewing either a half or full carafe, adjusting brewing speed and hotplate temperature accordingly.

Key Features:

- **Optimal Brewing Temperature:** Heats water to 196°F - 205°F for ideal coffee extraction.
- **Brew-Volume Selector:** Easily switch between brewing a half (20 oz) or full (40 oz) carafe.
- **Fast Brewing:** Brews a full 40 oz pot of coffee in 4-6 minutes.
- **Automatic Drip-Stop:** The brew basket automatically stops coffee flow when the carafe is removed.
- **Independent Hotplate:** Maintains coffee at the perfect temperature and automatically shuts off after 100 minutes.
- **Quiet Operation:** Designed for quiet brewing.

2. Important Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the coffee maker is placed on a stable, level surface away from the edge of the countertop.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The glass carafe is designed for use with this appliance only. It must not be used on a range top.
- Do not clean the carafe with abrasive cleaners, steel wool pads, or other abrasive materials.

- Close supervision is necessary when any appliance is used by or near children.
- Do not touch hot surfaces. Use handles or knobs.
- Do not place the coffee maker on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the water reservoir is filled with cold, fresh water only.
- This appliance is for household use only.

3. Package Contents

Verify that all components are present in the packaging:

- Moccamaster KBGV Select Coffee Maker Base
- Glass Carafe with Lid
- Water Reservoir with Lid
- Brew Basket with Drip-Stop and Lid
- Mixing Tube (inside carafe)
- Measuring Scoop

4. Setup

Before first use, it is recommended to clean all removable parts and run two full cycles with water only to flush the system.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash Components:** Wash the glass carafe, brew basket, and lids in warm, soapy water. Rinse thoroughly and dry.
3. **Assemble:** Place the brew basket onto its support. Ensure the mixing tube is correctly positioned inside the glass carafe. Place the carafe on the hotplate.
4. **Initial Rinse Cycle:**
    - Fill the water reservoir with fresh, cold water up to the 10-cup (40 oz) mark.
    - Place a #4 paper filter in the brew basket (without coffee grounds).
    - Ensure the brew basket drip-stop is open (lever to the right).
    - Plug the coffee maker into a grounded electrical outlet.
    - Press the power switch to ON. The machine will begin to heat water and run a cycle.
    - Once the cycle is complete and the water reservoir is empty, discard the water from the carafe and the paper filter.
    - Repeat this process once more for a thorough rinse.



Image: The Technivorm Moccamaster KBGV Select Coffee Maker, fully assembled in Midnight Blue.

5. Operating Instructions

Follow these steps to brew a perfect pot of coffee:

1. **Prepare the Water Reservoir:** Lift the water reservoir lid and fill the reservoir with fresh, cold water to your desired level (up to 10 cups / 40 oz). Replace the lid.



Image: A hand pouring water into the clear water reservoir of the coffee maker.

2. **Insert Filter and Coffee Grounds:** Place a #4 cone-shaped paper filter into the brew basket. Add your preferred amount of medium-ground coffee. A general guideline is 2 tablespoons of coffee per 6 oz of water. For a full 40 oz carafe, use approximately 8-10 tablespoons.



Image: A person adding ground coffee to the filter in the brew basket.

3. **Position Carafe and Brew Basket:** Ensure the glass carafe with its lid and mixing tube is correctly placed on the hotplate. Position the brew basket firmly on its support, ensuring the drip-stop lever is set to the desired position (open for brewing).
4. **Select Brew Volume:** Use the selector switch on the front of the machine to choose between a half carafe (left position) or a full carafe (right position). This adjusts the brewing speed and hotplate temperature.



Image: A close-up view of the power switch and the brew volume selector switch.

5. **Start Brewing:** Press the power switch (red button) to the ON position. The brewing process will begin. Water will be heated and dispensed over the coffee grounds.



Image: Water being evenly dispersed over coffee grounds in the filter basket during brewing.

6. **Drip-Stop Feature:** The brew basket features an automatic drip-stop. If you remove the carafe during brewing, the coffee flow will stop. Return the carafe within 30 seconds to resume brewing and prevent overflow.
7. **Enjoy Your Coffee:** Once the brewing cycle is complete, the coffee maker will automatically shut off after 100 minutes. The hotplate will keep your coffee warm during this time.



Image: A glass carafe filled with freshly brewed coffee resting on the warming plate.

Instructional Videos:

Brewing Coffee with Moccamaster

Video: This video demonstrates the process of brewing coffee using the Moccamaster KBGV Select, including filling the water reservoir and adding coffee grounds. (Source: AmyLynnLifestyle)

Moccamaster 10 Cup Coffee Maker Review & Usage

Video: A detailed review that includes practical demonstrations of the Moccamaster's operation and features. (Source: SammyLu Reviews)

6. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

Daily Cleaning:

- After each use, discard the used coffee grounds and paper filter.
- Wash the brew basket, carafe, and lids in warm, soapy water. Rinse thoroughly. These parts are not dishwasher safe.
- Wipe down the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners.

Descaling (Every 3 Months or as Needed):

Mineral deposits can build up over time, affecting performance. Descale your Moccamaster every three months, or more frequently if you have hard water.

1. **Prepare Descaling Solution:** Use a dedicated coffee machine descaler. Follow the manufacturer's instructions for mixing the solution with water. Do not use vinegar, as it can damage internal components.
2. **Run Descaling Cycle:** Pour the descaling solution into the water reservoir. Place a paper filter in the brew basket (no coffee). Run a full brewing cycle.
3. **Rinse Cycles:** After the descaling cycle, discard the solution. Fill the water reservoir with fresh, cold water and run two full cycles with water only to thoroughly rinse the system.

7. Troubleshooting

If you encounter issues with your Moccamaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee not brewing.	No water in reservoir; Power switch off; Appliance not plugged in.	Fill reservoir; Turn power switch on; Plug in appliance.
Coffee tastes weak.	Insufficient coffee grounds; Coarse grind; Water temperature too low (due to mineral buildup).	Increase coffee amount; Use finer grind; Descale the machine.
Coffee overflows from brew basket.	Too much coffee grounds; Filter clogged; Drip-stop closed; Carafe not properly placed.	Reduce coffee grounds; Replace filter; Ensure drip-stop is open; Reposition carafe.
Brewing is slow.	Mineral buildup in heating element.	Perform a descaling cycle.

8. Specifications

Technical details for the Technivorm Moccamaster KBGV Select Coffee Maker:

Feature	Detail
Brand	Technivorm Moccamaster
Model Name	KBGV Select
Model Number	53928
Capacity	40 Fluid Ounces (1.25 Liters / 10 Cups)

Feature	Detail
Color	Midnight Blue
Product Dimensions (D x W x H)	6.5" x 12.75" x 14"
Item Weight	6.3 Pounds
Special Feature	Auto Shut-Off
Coffee Maker Type	Drip Coffee Machine
Operation Mode	Fully Automatic
Wattage	1475 watts
Voltage	120 Volts
Coffee Input Type	Ground Coffee
Filter Type	Paper (#4 cone-shaped)
Material	Copper, Glass, Metal
Dishwasher Safe	No (for removable parts)

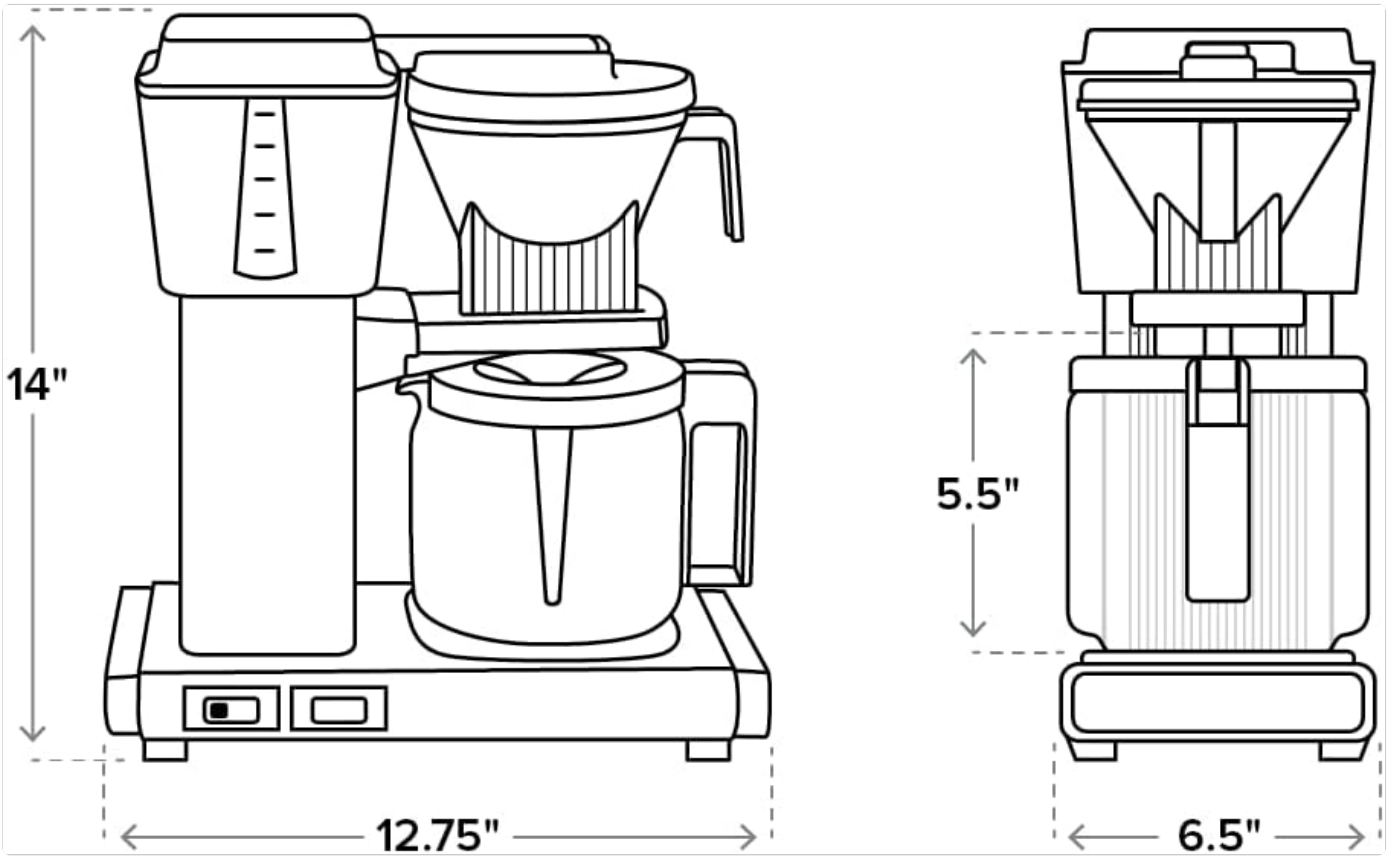


Image: Diagram illustrating the dimensions of the Moccamaster KBGV Select coffee maker.

9. Warranty and Support

Your Technivorm Moccamaster KBGV Select Coffee Maker comes with a**5-year manufacturer's warranty**, covering defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

For technical support, service, or to inquire about replacement parts, please visit the official Technivorm Moccamaster website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the original packaging.

© 2024 Technivorm Moccamaster. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B093DYWXCS

More documents and user manuals: **https://manuals.plus/**