Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PatioMage 7ddcf16a-d489-4638-88df-000701ac2d2a

PatioMage Gaming Chair Instruction Manual

Model: 7ddcf16a-d489-4638-88df-000701ac2d2a

1. Safety Information

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Assembly is required. Follow all steps precisely to ensure proper function and safety.
- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Keep small parts away from children during assembly.
- Ensure all screws and bolts are securely tightened before use. Periodically check and re-tighten as necessary.
- Use the chair on a flat, stable surface.

2. Product Components

Before assembly, verify that all components are present and undamaged. Refer to the diagram below for identification.



Image: Overview of the PatioMage Gaming Chair components, highlighting the neck and lumbar support pillows, adjustable armrests, retractable footrest, and durable wheels. The image also indicates the 300 lbs maximum weight capacity.

- Backrest
- Seat Cushion with Armrests
- Base (5-star)
- Casters (5 pieces)
- Gas Lift Cylinder
- Gas Lift Cover
- Mechanism Plate
- Neck Pillow
- Lumbar Support Pillow
- Retractable Footrest
- Hardware (screws, washers, Allen wrench)

3. Setup and Assembly

Assembly is straightforward and typically takes about 45 minutes. All necessary tools are included. Follow these steps carefully.

Assembly Video Guide

Your browser does not support the video tag.

Video: An official PatioMage video demonstrating the assembly process of the gaming chair. This video provides a visual guide to complement the written instructions.

Step-by-Step Instructions

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the 5-star base. Push firmly until they click into place.
2. **Install Gas Lift:** Place the gas lift cylinder into the center hole of the 5-star base. Cover it with the gas lift cover.
3. **Attach Mechanism Plate to Seat:** Secure the mechanism plate to the underside of the seat cushion using the provided screws. Ensure the front of the mechanism faces the front of the seat.
4. **Connect Seat to Gas Lift:** Carefully place the assembled seat onto the gas lift cylinder, ensuring the tapered end of the gas lift fits securely into the mechanism plate.
5. **Attach Backrest to Seat:** Align the backrest with the metal brackets on the sides of the seat cushion. Secure it using the remaining screws.
6. **Install Footrest:** Slide the retractable footrest into its designated slots under the seat. Ensure it moves smoothly.
7. **Attach Pillows:** Position the neck pillow and lumbar support pillow as desired. The lumbar pillow is designed to be adjustable and can be moved or removed.

4. Operating Instructions

The PatioMage Gaming Chair offers multiple adjustments for personalized comfort.

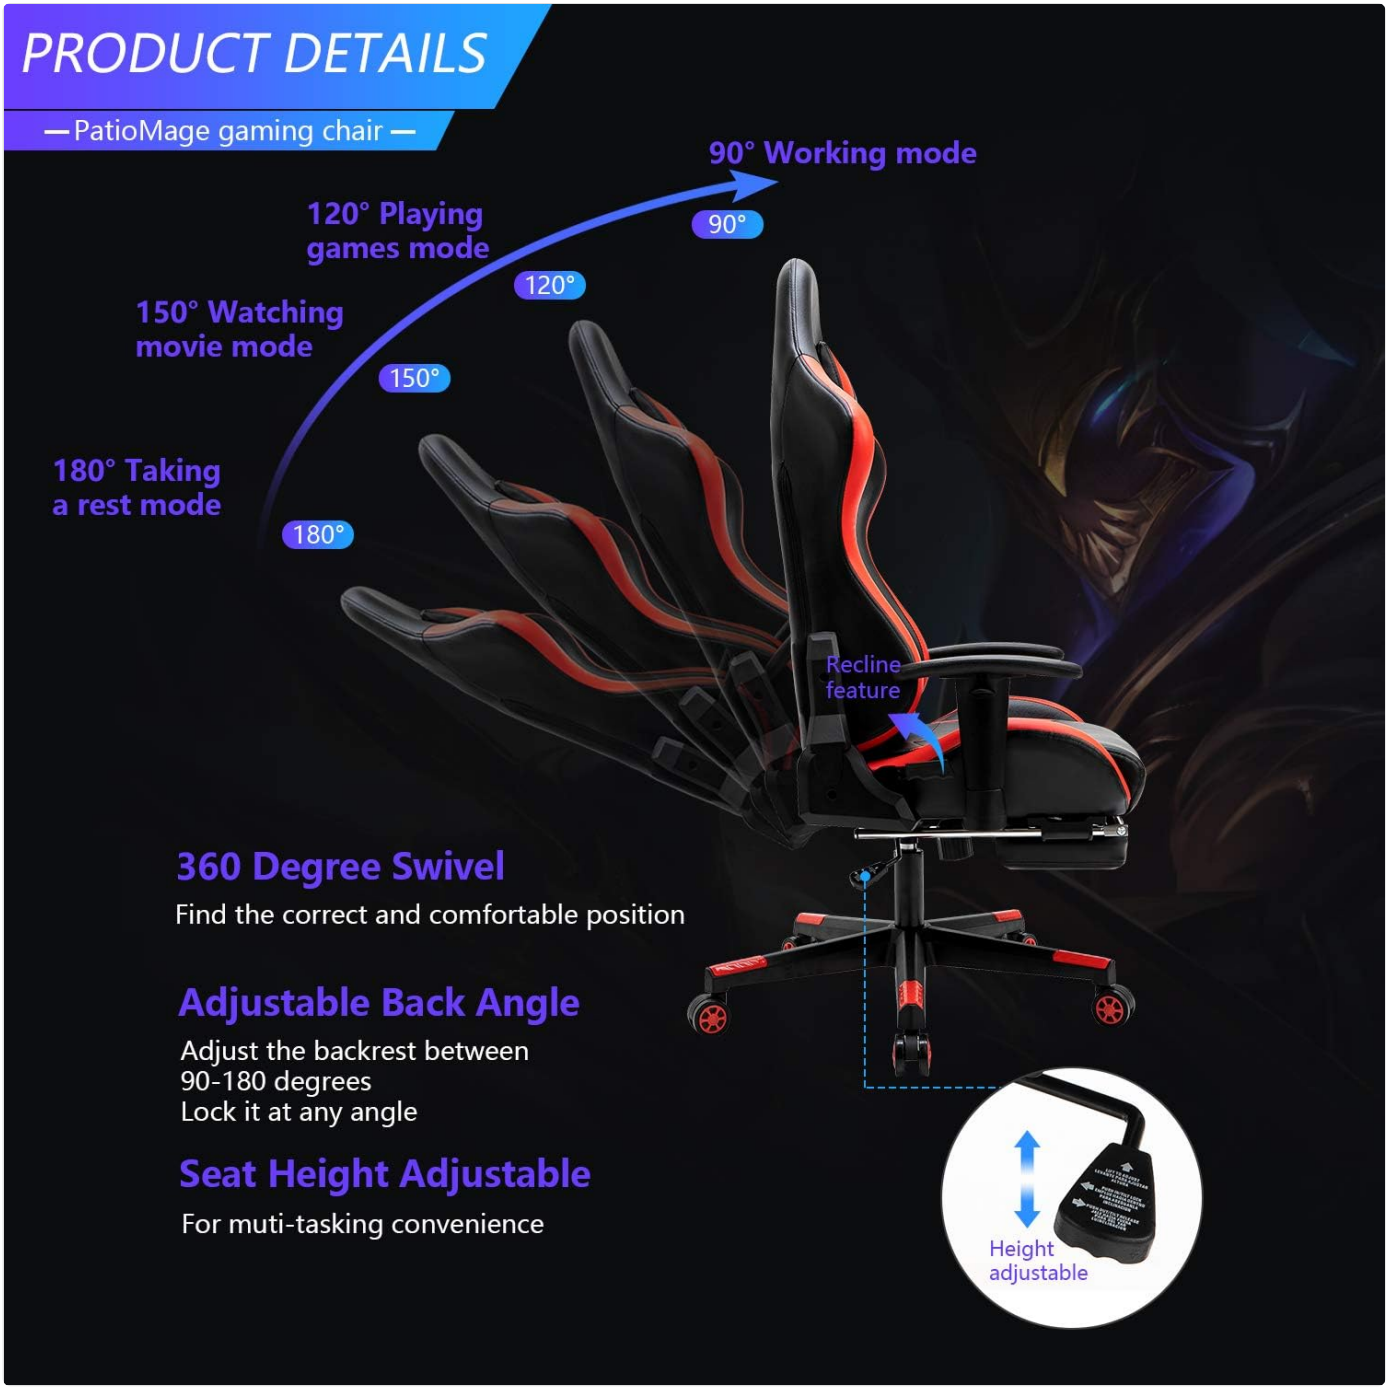


Image: This diagram illustrates the various adjustable features of the chair, including the recline function (90° working mode, 120° playing games mode, 150° watching movie mode, 180° rest mode), 360-degree swivel, and the lever for seat height adjustment.

- **Seat Height Adjustment:** Locate the lever on the right side under the seat. Pull the lever up to raise the seat. To lower, remain seated and pull the lever up. Release the lever at the desired height.
- **Backrest Recline:** Use the recline lever on the right side of the chair. Pull the lever up and lean back to adjust the backrest angle between 90° and 180°. Release the lever to lock the backrest in position.
- **360° Swivel:** The chair is designed with a 360-degree swivel for full rotation.
- **Adjustable Armrests:** The armrests can be adjusted vertically. Press the button on the side of each armrest and move it up or down to your preferred height. Release the button to lock.
- **Retractable Footrest:** Pull the footrest out from under the seat when desired. Push it back in when not in use.
- **Lumbar and Neck Support:** The included pillows can be adjusted vertically or removed to suit your comfort needs.

5. Maintenance

Proper care will extend the life of your gaming chair.

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the PU leather.
- **Inspection:** Periodically check all screws and bolts to ensure they are tight. Re-tighten as needed to maintain stability.
- **Caster Care:** Keep casters free of hair and debris to ensure smooth rolling and prevent floor scratches.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the PU leather to fade or crack.

6. Troubleshooting

If you encounter any issues with your PatioMage Gaming Chair, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Chair does not adjust height	Gas lift cylinder malfunction or lever not engaged.	Ensure the height adjustment lever is fully engaged. If the issue persists, the gas lift cylinder may need replacement. Contact customer support.
Chair wobbles or is unstable	Loose screws or uneven assembly.	Check and tighten all assembly screws, especially those connecting the backrest to the seat and the mechanism plate to the seat. Ensure the base is properly assembled.
Casters do not roll smoothly	Debris caught in casters or damaged casters.	Remove any hair or debris from the caster wheels. If casters are damaged, they may need replacement.
Backrest does not recline or lock	Recline mechanism jammed or lever not engaged.	Ensure the recline lever is fully engaged. Check for any obstructions around the recline mechanism.

If these solutions do not resolve the issue, please contact PatioMage customer support for further assistance.

7. Specifications

Detailed specifications for the PatioMage Gaming Chair.



Image: This image provides a detailed dimension diagram of the PatioMage Gaming Chair, showing measurements for seat width (16.2 inches), backrest width (23.2 inches), overall height (50 inches), seat depth (21 inches), and adjustable seat height range (18.5-22.5 inches).

Feature	Detail
Brand	PatioMage
Model Number	7ddcf16a-d489-4638-88df-000701ac2d2a
Color	Red
Material	Faux Leather, Foam (Fill Material), Metal (Frame)
Product Dimensions (D x W x H)	21"D x 25.6"W x 50"H

Feature	Detail
Item Weight	43 Pounds
Maximum Weight Recommendation	300 Pounds
Reclining Position Count	3 (90°, 120°, 150°, 180° options)
Additional Features	Adjustable Height, Reclining, Arm Rest, Cushion Availability, Ergonomic, Foot Rest, Head Support, Rolling, Swivel
Recommended Uses	Gaming, Office, Relaxing, Study
Assembly Required	Yes

8. Warranty and Support

PatioMage is committed to providing high-quality products and customer satisfaction.

- **Satisfaction Guarantee:** Each gaming chair undergoes strict testing to ensure quality.
- **Customer Support:** If you encounter any problems or have questions, please contact PatioMage customer service. We aim to respond within 24 hours.
- **Online Resources:** Visit the official PatioMage Store for additional product information and support.

© 2026 PatioMage. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B093S3XYF9

More documents and user manuals: **https://manuals.plus/**