Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JYX JYX-69BT

JYX Karaoke Machine

INSTRUCTION MANUAL

Model: JYX-69BT

1. Product Overview

The JYX Karaoke Machine is a versatile and portable audio system designed for entertainment. It features Bluetooth 5.2 connectivity, two wireless microphones, LED lighting effects, and various input options including AUX, TF card, and USB. It also includes an FM radio and recording function, making it suitable for a wide range of occasions from home parties to outdoor events.



Figure 1: JYX Karaoke Machine and included accessories.

2. What's in the Box

Verify that all items are present in the package:

- JYX Karaoke Machine (1)
- Wireless Microphones (2)
- Remote Control (1)
- USB Charging Cable (1)
- AUX Cable (1)
- Shoulder Strap (1)

- User Manual (1)



Figure 2: All components included in the package.

3. Setup

3.1 Charging the Unit

Before first use, fully charge the karaoke machine using the provided USB charging cable. Connect the USB cable to the 5V/1A input port on the unit and the other end to a compatible USB power adapter (not included). The charging indicator light will show the charging status.

3.2 Installing Microphone Batteries

Each wireless microphone requires two AA batteries (not included). To install, unscrew the bottom part of the microphone, insert the batteries according to the polarity markings, and then reattach the bottom part securely.

3.3 Powering On

Locate the POWER switch on the control panel. Slide the switch to the 'ON' position to power on the unit. The display will light up, indicating it is ready for use.



Figure 3: Control panel with power switch and input options.

4. Operating Instructions

4.1 Mode Selection

Press the 'MODE' button on the control panel to cycle through available input modes: Bluetooth (BLUE), AUX, TF Card, USB, and FM Radio. The current mode will be displayed on the screen.

4.2 Bluetooth Connection

In Bluetooth mode, the unit will automatically enter pairing mode. Enable Bluetooth on your smartphone, tablet, or PC and select 'JYX-69BT' from the list of available devices. A voice prompt will confirm successful pairing.



Figure 4: Bluetooth connectivity and LED lighting effects.

4.3 Microphone Usage

Turn on the wireless microphones using their respective power switches. The microphones will automatically connect to the karaoke machine. Use the 'MIC. VOL' knob to adjust the microphone volume. The 'ECHO', 'BASS', and 'TREBLE' knobs allow you to fine-tune the microphone's sound effects.



Figure 5: Wireless microphones for karaoke.

4.4 TWS (True Wireless Stereo) Mode

To achieve True Wireless Stereo sound, ensure you have two JYX Karaoke Machines. Power on both units. On one unit, press the 'TWS' button. It will automatically search for and pair with the second unit. Once connected, both speakers will play audio in stereo, enhancing the sound experience.

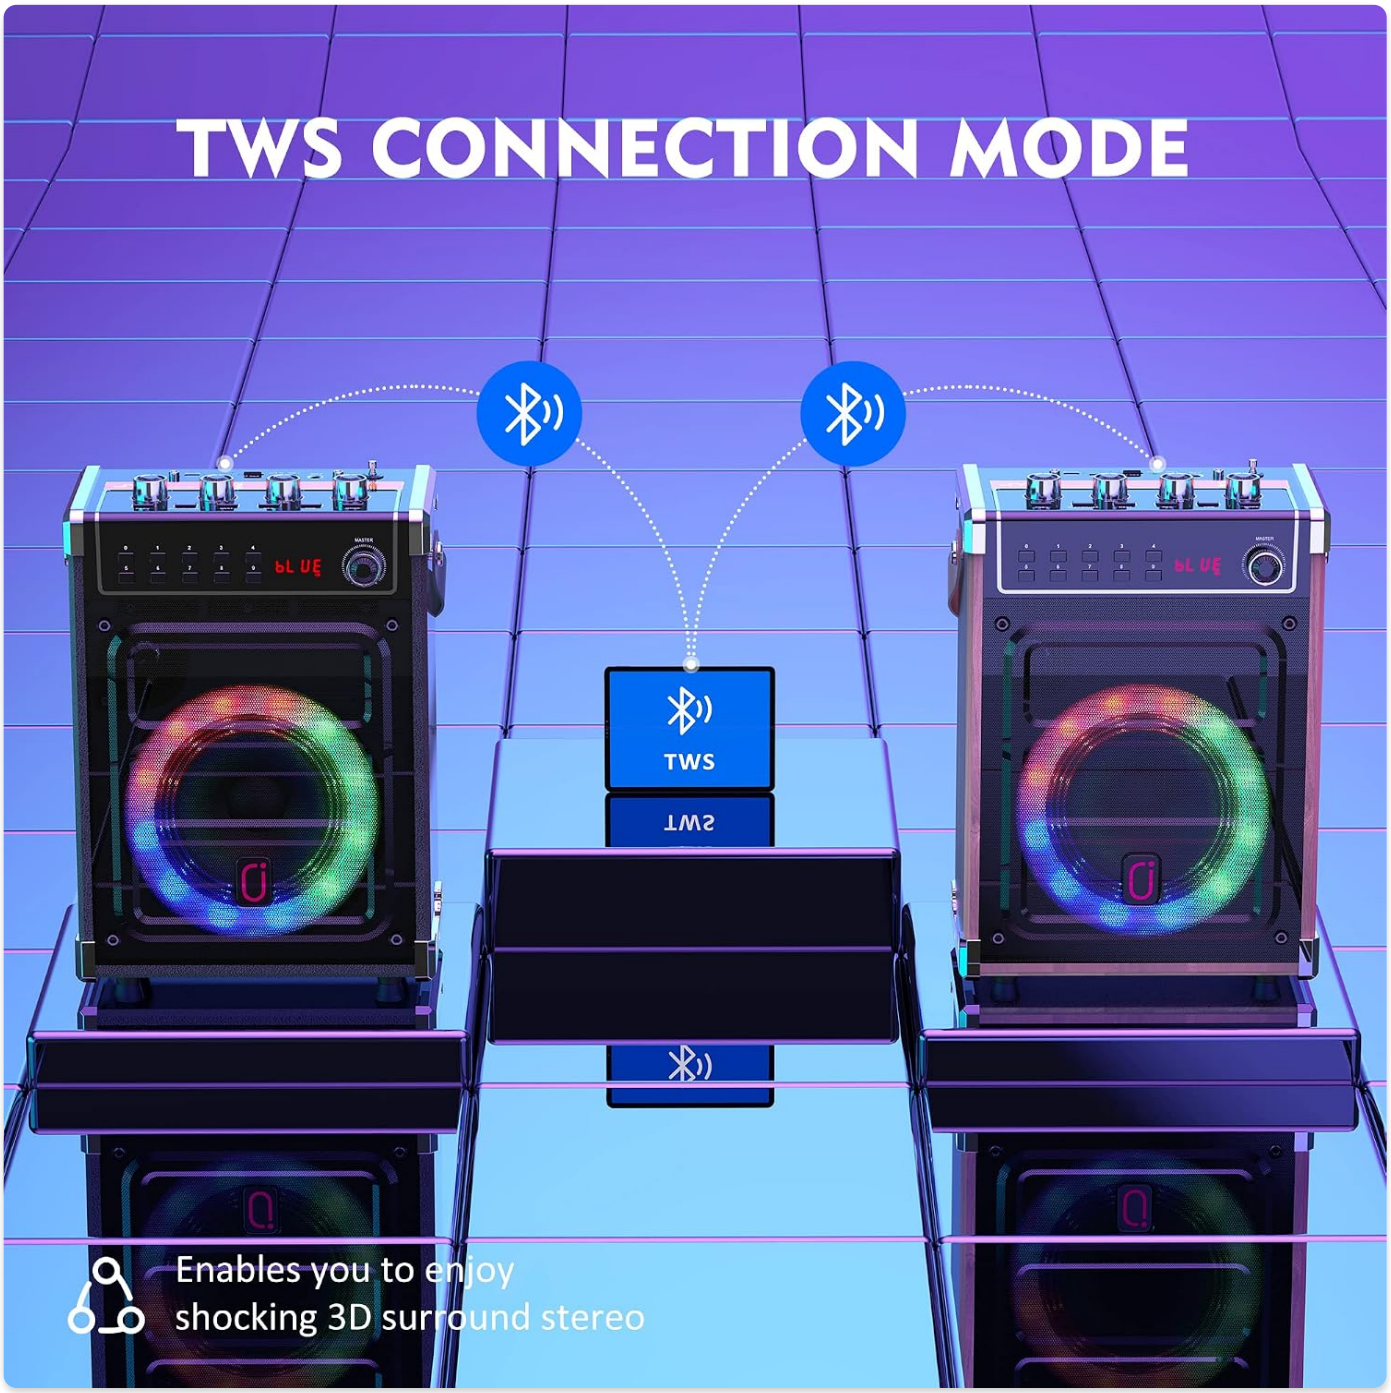


Figure 6: TWS connection mode for enhanced stereo sound.

4.5 LED Light Control

Press the 'LED' button on the control panel to turn the LED lights on or off, or to cycle through different lighting effects. The LED lights provide a colorful and dynamic visual experience.

4.6 Recording Function

Insert a USB drive or TF card into the respective slot. Press the 'REC' button to start recording audio from the microphone. Press 'REC' again to stop recording. The recorded audio will be saved to the inserted storage device.

5. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.

- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the unit will not be used for an extended period, fully charge it before storage and recharge it every 3 months to maintain battery health. Remove batteries from wireless microphones if not in use for long periods.

6. Troubleshooting

Problem	Possible Cause	Solution
No power	Battery is low or depleted.	Charge the unit fully.
No sound from speaker	Volume is too low; incorrect mode selected; device not connected.	Increase master volume; select correct input mode; ensure device is properly connected (Bluetooth, AUX, USB/TF).
Microphone not working	Microphone batteries are low/dead; microphone not powered on; microphone volume too low.	Replace microphone batteries; ensure microphone is powered on; increase 'MIC. VOL' knob.
Bluetooth connection unstable	Device is too far from the speaker; interference from other devices.	Move device closer to the speaker; avoid obstacles; turn off other Bluetooth devices.

7. Specifications

Feature	Detail
Model Number	JYX-69BT
Output Wattage	380 Watts
Connectivity Technology	Bluetooth 5.2, USB, AUX
Power Source	Battery Powered (1 Lithium Ion battery included)
Item Weight	6.16 pounds (2.8 Kilograms)
Product Dimensions (L x W x H)	12.6 x 5.04 x 9.06 inches
Material	Plastic
Compatible Devices	Laptop, Television, Tablet, Smartphone
UPC	797442539419

8. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official JYX brand store:

JYX Brand Store on Amazon

Please note that no official product videos from the seller were available for embedding in this manual.

© 2025 JYX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B093SQ1PVC

More documents and user manuals: **https://manuals.plus/**