Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CIRCLE JOY CJ-EKPQ05

CIRCLE JOY CJ-EKPQ05 Electric Wine Opener Set User Manual

Model: CJ-EKPQ05 | Brand: CIRCLE JOY

Introduction

This manual provides detailed instructions for the safe and efficient use of your CIRCLE JOY CJ-EKPQ05 Electric Wine Opener Set. This 7-in-1 kit includes an electric wine and beer bottle opener, a foil cutter, a wine aerator pourer, a vacuum pump, and two wine stoppers. Please read these instructions carefully before first use and retain for future reference.



Figure 1: Overview of the CIRCLE JOY CJ-EKPQ05 Electric Wine Opener Set, including the electric opener, vacuum pump, aerator pourer, and storage base.

Product Components

The CIRCLE JOY CJ-EKPQ05 set includes the following items:

- **Electric Wine and Beer Bottle Opener:** Main unit for cork removal and beer cap opening.
- **Foil Cutter:** For easily removing wine bottle foil seals.

- **Wine Aerator Pourer:** Enhances wine flavor by aerating it during pouring.
- **Vacuum Pump:** Removes air from opened wine bottles to preserve freshness.
- **Wine Stoppers (2x):** Used with the vacuum pump to seal wine bottles.
- **Storage Base:** Organizes and displays all components.
- **Type-C Charging Cable:** For recharging the electric opener.



Figure 2: Labeled diagram of the CIRCLE JOY Electric Wine Opener Set components.

Setup and Charging

Initial Charging

1. Before first use, fully charge the electric wine opener.
2. Connect the provided Type-C charging cable to the charging port on the electric opener.
3. Plug the other end of the cable into a compatible USB power adapter (not included).

4. The charging indicator light will illuminate during charging. A full charge can open up to 60 bottles.

Assembling the Set

Place all components into their designated slots on the storage base for organized storage and easy access.

Operating Instructions

1. Using the Foil Cutter

1. Place the foil cutter on top of the wine bottle.
2. Grip the bottle neck firmly and twist the foil cutter around the bottle to cut the foil seal.
3. Remove the cut foil.



Figure 3: Demonstrating the use of the foil cutter to prepare a wine bottle.

2. Using the Electric Wine Opener

For Wine Bottles:

1. Ensure the foil has been removed from the wine bottle.
2. Place the electric opener vertically over the cork, ensuring it is centered.
3. Press and hold the 'Down' button. The corkscrew will automatically penetrate the cork and pull it out of the bottle.
4. Once the cork is fully removed (typically within 8 seconds), release the 'Down' button.
5. To release the cork from the opener, press and hold the 'Up' button. The corkscrew will rotate in reverse, ejecting the cork.

For Beer Bottles:

1. Position the beer bottle opener end of the electric opener over the beer bottle cap.
2. Press down firmly in one swift motion to pop off the cap.



Figure 4: Step-by-step guide for opening wine and beer bottles using the electric opener.

3. Using the Wine Aerator Pourer

1. Insert the aerator pourer firmly into the neck of an opened wine bottle.
2. Pour wine through the aerator into a glass. The design allows air to mix with the wine, enhancing its aroma and flavor.



Figure 5: The wine aerator pourer in action, enhancing the wine's characteristics.

4. Using the Vacuum Pump and Wine Stoppers

1. Insert one of the wine stoppers firmly into the neck of an opened wine bottle.
2. Place the vacuum pump over the wine stopper.
3. Pump the vacuum pump repeatedly until resistance is felt, indicating that air has been removed from the bottle. This helps preserve the wine's freshness.
4. To release the vacuum seal, gently pull the stopper upwards.

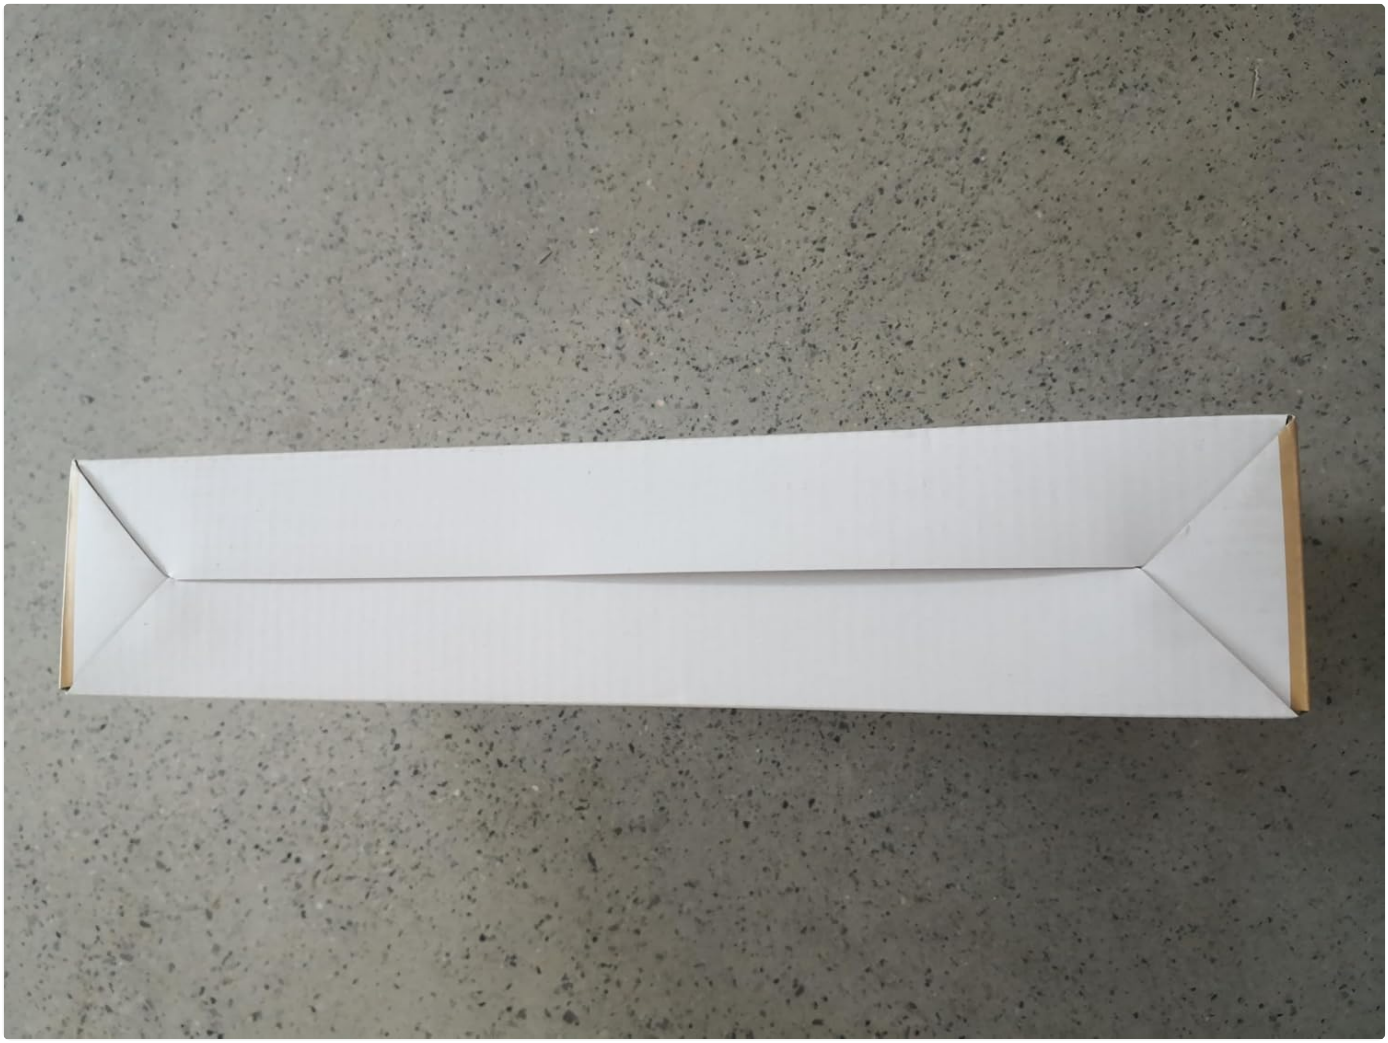


Figure 6: Using the vacuum pump to seal an opened wine bottle for preservation.

Maintenance and Care

- Wipe all components with a soft, damp cloth after each use.
- Do not immerse the electric wine opener in water or any other liquid.
- Ensure all parts are completely dry before storing.
- Store the set in a cool, dry place, preferably on its storage base.
- The corkscrew mechanism of the electric opener does not require lubrication.

Troubleshooting

Problem	Possible Cause	Solution
Electric opener does not operate.	Low battery.	Charge the electric opener using the provided Type-C cable.
Cork not removed smoothly.	Opener not centered or held vertically.	Ensure the opener is placed vertically and centered over the cork. Apply gentle, steady pressure.
Vacuum pump not creating a seal.	Stopper not inserted correctly or damaged.	Ensure the wine stopper is firmly inserted into the bottle neck. Check stopper for damage.

Specifications

- **Brand:** CIRCLE JOY
- **Model:** CJ-EKPQ05
- **Components:** Electric Wine/Beer Opener, Foil Cutter, Aerator Pourer, Vacuum Pump, 2 Wine Stoppers, Storage Base, Type-C Charging Cable
- **Materials:** Stainless Steel, ABS
- **Dimensions:** 10.5"L x 4.88"W (Product Dimensions)
- **Weight:** Approximately 2.2 pounds (1 Kilogram)
- **Battery:** Rechargeable (built-in)
- **Battery Capacity:** Up to 60 bottle openings per full charge

Warranty and Support

The CIRCLE JOY CJ-EKPQ05 Electric Wine Opener Set is covered by a**12-month limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.
For warranty claims, technical support, or any questions regarding your product, please contact CIRCLE JOY customer service. Refer to the product packaging or the official CIRCLE JOY website for the most current contact information. When contacting support, please have your model number (CJ-EKPQ05) and proof of purchase readily available.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B094D9D4XD

More documents and user manuals: **https://manuals.plus/**