AT&T GH10

AT&T GH10 Bluetooth Gaming Headphones User Manual

Model: GH10

Introduction   Safety Information   Package Contents   Product
Overview   Setup   Operation   Maintenance   Troubleshooting   Specifications   Warranty & Support

1. INTRODUCTION

Thank you for purchasing the AT&T GH10 Bluetooth Gaming Headphones. These headphones are designed to provide an immersive audio experience for gaming, featuring 7.1 virtual surround sound, a 50mm driver, and up to 12 hours of play time. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

Image 1.1: AT&T GH10 Bluetooth Gaming Headphones with detachable boom microphone.

2. SAFETY INFORMATION

- Do not expose the headphones to extreme temperatures, humidity, or corrosive environments.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not attempt to disassemble or modify the headphones. This may void the warranty and cause damage.
- Clean the headphones with a soft, dry cloth. Do not use liquid cleaners.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact customer support.

- AT&T GH10 Bluetooth Gaming Headphones

- Detachable Boom Microphone

- USB Transmitter (for plug and play experience)

- 3.5mm Audio Cable (for wired connectivity)

- USB Charging Cable

- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your AT&T GH10 headphones.

Image 4.1: Close-up view of the control panel on the left ear cup, showing the 3.5mm jack, USB-C charging port, power button, mode button, and volume controls.

4.1 Controls and Ports

- **Power Button:** Press and hold to power on/off. Short press to play/pause audio.

- **Mode Button (M):** Cycles through different lighting modes on the ear cups.
- **Volume Up (+):** Increases audio volume.
- **Volume Down (-):** Decreases audio volume.
- **3.5mm Audio Jack:** For wired connection to devices.
- **USB-C Charging Port:** For charging the headphones.
- **Microphone Port:** For attaching the detachable boom microphone.

Image 4.2: Illustration of attaching the detachable boom microphone to the designated port on the headphone.

5. SETUP

5.1 Charging the Headphones

1. Connect the USB charging cable to the USB-C port on the headphones.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, wall adapter).
3. The LED indicator will show charging status. A full charge provides up to 12 hours of play time.

5.2 Attaching the Microphone

The boom microphone is detachable for convenience.

1. Locate the microphone port on the left ear cup.
2. Align the microphone's connector with the port and gently push until it clicks into place.
3. To detach, pull the microphone gently from the port.

5.3 Adjusting for Comfort

Image 5.1: Demonstrating how to adjust the headband and ear cups for a comfortable and secure fit.

The AT&T GH10 headphones feature an adjustable headband and premium ear cups for extended comfort.

- Gently extend or retract the headband until the ear cups sit comfortably over your ears.
- Ensure the ear cups fully enclose your ears for optimal sound isolation and comfort.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To power on, press and hold the Power Button until the LED indicator lights up.
- To power off, press and hold the Power Button until the LED indicator turns off.

6.2 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power Button for approximately 5-7 seconds until the LED indicator flashes rapidly (usually blue and red), indicating pairing mode.
3. On your device (e.g., PS4, smartphone, PC), go to Bluetooth settings and search for "AT&T GH10".
4. Select "AT&T GH10" to connect. The LED indicator will turn solid blue once connected.

6.3 Wired Connection (3.5mm Jack)

For devices without Bluetooth or when battery is low, use the 3.5mm audio cable.

1. Connect one end of the 3.5mm audio cable to the 3.5mm jack on the headphones.
2. Connect the other end to the 3.5mm audio output of your gaming console (e.g., PS4 controller), PC, or other audio device.
3. The headphones will automatically switch to wired mode.

6.4 USB Transmitter (Plug and Play)

For an authentic plug-and-play experience, use the included USB transmitter.

1. Plug the USB transmitter into an available USB port on your gaming console or PC.
2. Ensure the headphones are powered on and in Bluetooth pairing mode (if not already paired).
3. The headphones should automatically connect to the USB transmitter.

6.5 Audio and Microphone Control

- **Volume Adjustment:** Use the **+** and **-** buttons on the ear cup to adjust the volume.
- **Play/Pause:** Short press the Power Button to play or pause audio.
- **Microphone Mute:** (If applicable, check product for dedicated mute button or function) If no dedicated button, mute via connected device settings.

6.6 LED Lighting Modes

The headphones feature 7 varying color alternates on each ear cup.

- Press the **M** (Mode) button to cycle through the available lighting effects and colors.

7. MAINTENANCE

7.1 Cleaning

- Use a soft, dry, lint-free cloth to clean the surfaces of the headphones.
- Do not use abrasive cleaners, solvents, or chemical sprays.
- For ear cups, gently wipe with a slightly damp cloth if necessary, then dry immediately.

7.2 Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the headphones.
- If storing for an extended period, ensure the headphones are fully charged to preserve battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the headphones using the provided USB cable.
Cannot pair via Bluetooth	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing LED). Turn on device Bluetooth. Move headphones closer to device (within 10 meters).
No sound	Volume too low; incorrect audio source selected; headphones not connected.	Increase volume on headphones and connected device. Verify headphones are properly connected (Bluetooth, 3.5mm, or USB transmitter). Check device's audio output settings.
Microphone not working	Microphone not attached correctly; muted; incorrect input device selected.	Ensure the detachable boom microphone is securely attached. Check if the microphone is muted on the headphones or the connected device. Verify the correct microphone input is selected in your device's audio settings.
Poor sound quality	Weak Bluetooth signal; interference; low battery.	Move closer to the connected device. Avoid sources of strong electromagnetic interference. Charge the headphones.

9. SPECIFICATIONS

- **Model:** GH10
- **Connectivity:** Bluetooth, 3.5mm Audio Jack, USB Transmitter
- **Driver Size:** 50mm
- **Virtual Surround Sound:** 7.1
- **Play Time:** Up to 12 hours
- **Microphone:** Detachable Boom Mic
- **Ear Cup Material:** Premium Protein Leather
- **Product Dimensions:** 22.9 x 19.1 x 8.9 cm (LxWxH)
- **Item Weight:** 562 g
- **UPC:** 817317015357

10. WARRANTY AND SUPPORT

AT&T products are designed and manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official AT&T support website.

If you encounter any issues or have questions regarding your AT&T GH10 Bluetooth Gaming Headphones, please contact AT&T customer support:
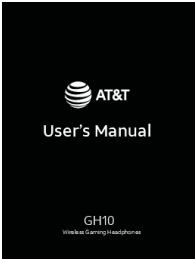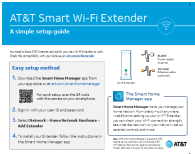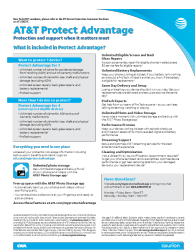
- **Online Support:** Visit the AT&T Store on Amazon for product information and support resources.

- **Contact Information:** Refer to your product packaging or the official AT&T website for specific contact details (phone, email).
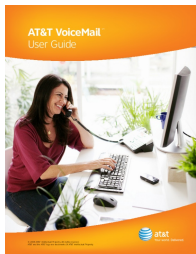
Please have your model number (GH10) and proof of purchase ready when contacting support.

Related Documents - GH10

	[AT&T GH10 Wireless Gaming Headphones User Manual](#) User's manual for the AT&T GH10 Wireless Gaming Headphones, covering features, setup, operation, troubleshooting, and warranty information.
	[AT&T Smart Wi-Fi Extender Setup Guide | Enhance Your Home Network](#) Learn how to easily set up your AT&T Smart Wi-Fi Extender using the Smart Home Manager app. This guide covers setup, troubleshooting, and tips for optimizing your home Wi-Fi network.
	[AT&T High Speed Internet Feature Guide: Connect, Surf, and Manage Your Online Experience](#) This AT&T High Speed Internet Feature Guide provides comprehensive information on connecting, surfing, customizing, and managing your AT&T High Speed Internet service, including details on security, support, billing, and additional AT&T services.
	[AT&T Protect Advantage: Comprehensive Device Protection Plans](#) Explore AT&T Protect Advantage plans offering protection for your mobile devices against accidental damage, loss, theft, and malfunctions. Includes screen repairs, battery replacements, ProTech support, and unlimited photo storage.
	[AT&T Calypso™ User Guide](#) Comprehensive user guide for the AT&T Calypso™ smartphone, covering setup, basic operations, connectivity, apps, settings, and safety information.

[AT&T VoiceMail User Guide: Setup, Features, and Management](#)
Comprehensive user guide for AT&T VoiceMail service, covering setup, accessing messages, managing greetings, notifications, and advanced features. Learn how to use your AT&T VoiceMail effectively.